

Before operating the unit, please read this manual thoroughly and retain it for future reference.

**Model No. 0523-0C**


You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

#### Description

Aalto B2 is an active network subwoofer that is placed freestanding.

Aalto B2 can only be used in combination with S4.

The Subwoofer is compatible with all B2 fabric covers (0521-XXX sold as set separately).

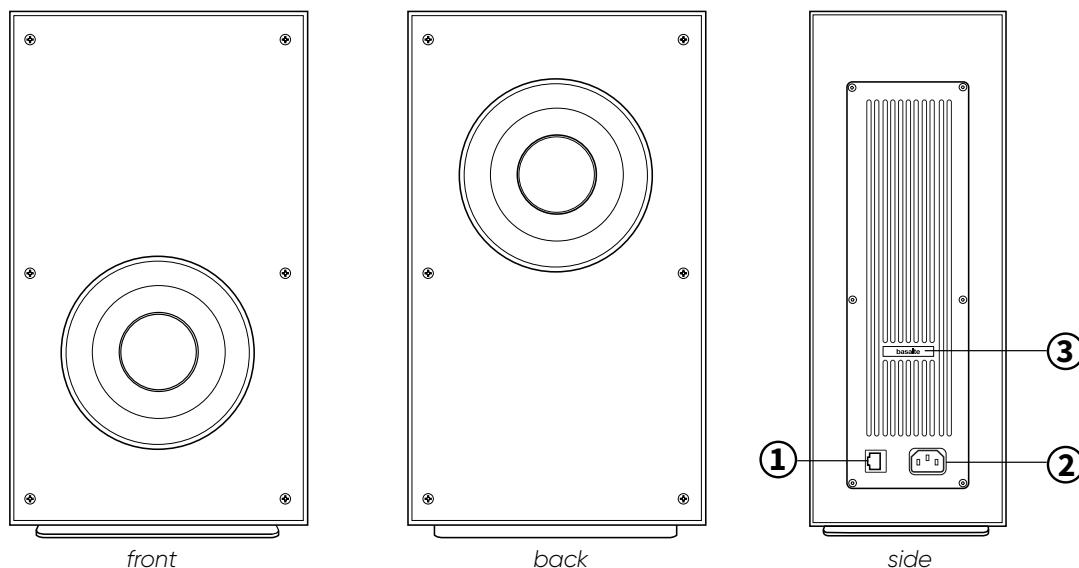

1. Audio network
2. Power supply
3. Status LED

#### LED feedback

The back panel has a feedback LED which indicates following statuses:

- **Blue:** standby mode
- **White:** subwoofer is active
- **Blinking red:** heat alarm / clipping detection

#### Dimensions

150x240x413 mm (width x depth x height)

#### Installation instructions

1. Place the fabric covers on the speaker, the covers are hold magnetically in place.
2. Once correctly installed and wired, Basalte Studio must be used to configure the B2 subwoofer.

#### Wiring

1. Audio network  
Connect the Aalto B2 to the dedicated audio network using Ethernet CAT5e cable. The audio network must be a dedicated network separated from your local data network.
2. Power supply  
The Aalto B2 is powered by a Euro mains power lead with a 230V AC input. Do not unplug the connector at this side with voltage present.

#### Technical data

**Power:** 220V - 240V AC

**Amplification:** 2x200 W

**Ambient temperature:** Operation: -5°C to 45°C

Storage: -15°C to 55°C

Transport: -15°C to 55°C

**Placement options:** Freestanding