


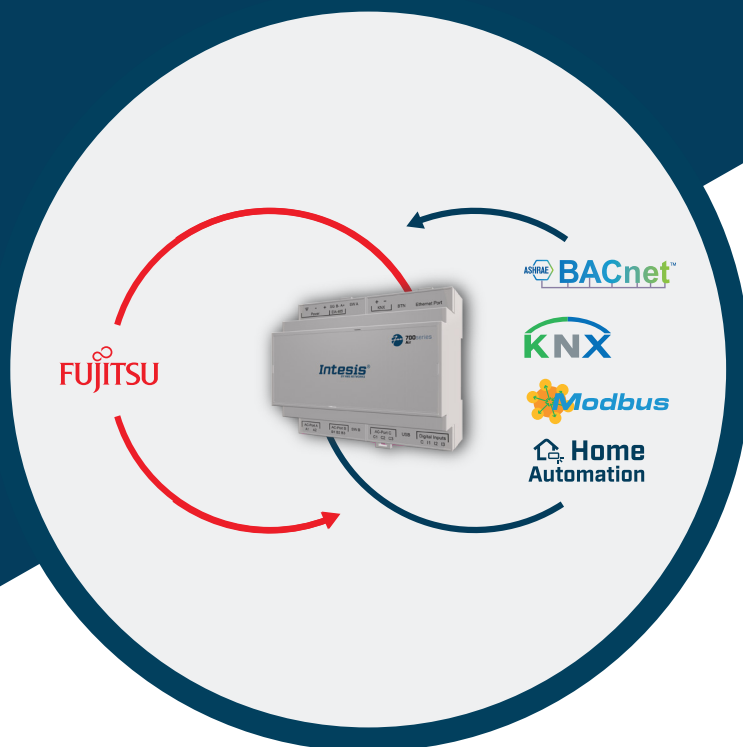

700series
Air

Application Wiring Diagrams for IN775FGL




Choose your application




Fujitsu AC interface with KNX, Serial
and IP support



Fujitsu to BACnet

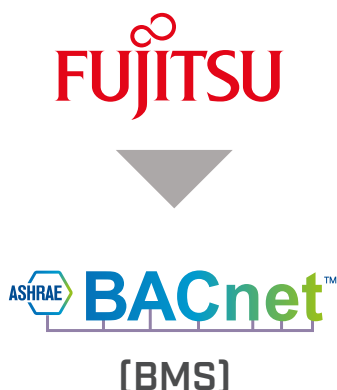

Wiring Diagram

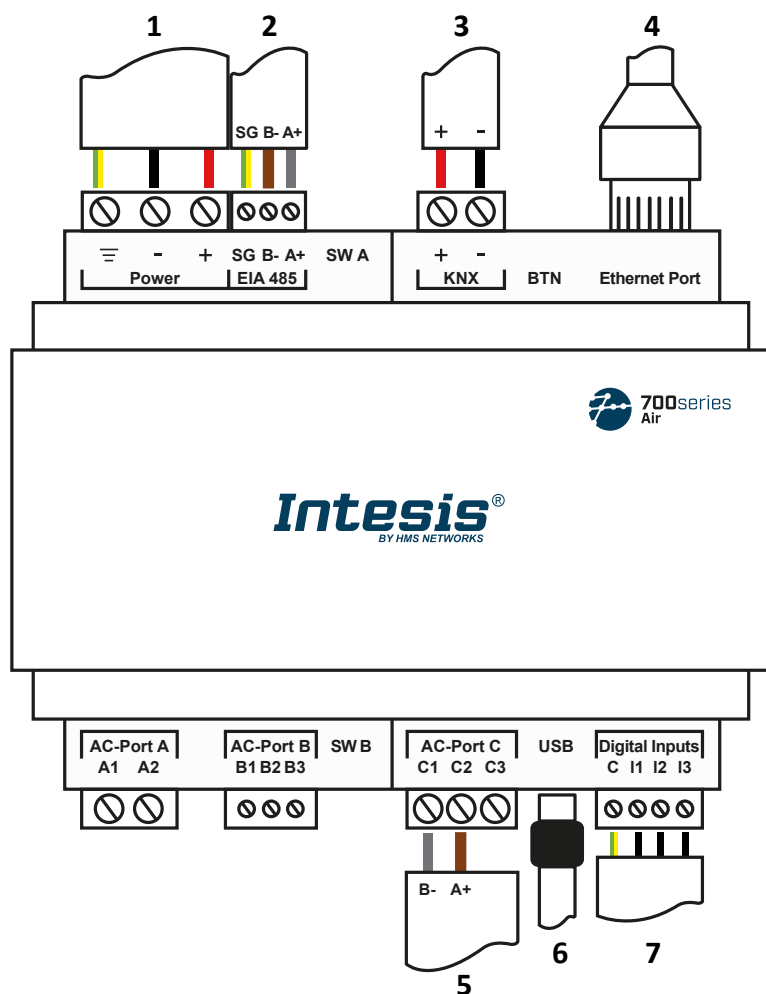

[Application web page](#)

[User manual](#)

[Back](#)

- 1. Power Supply (12-36VDC / 24VAC)
- 2. BACnet MSTP
- 3. Not used
- 4. BACnet IP & Console
- 5. Fujitsu (X1/X2)
- 6. Console
- 7. Binary inputs (dry contact) optional


Fujitsu to KNX



[BMS]



Wiring Diagram

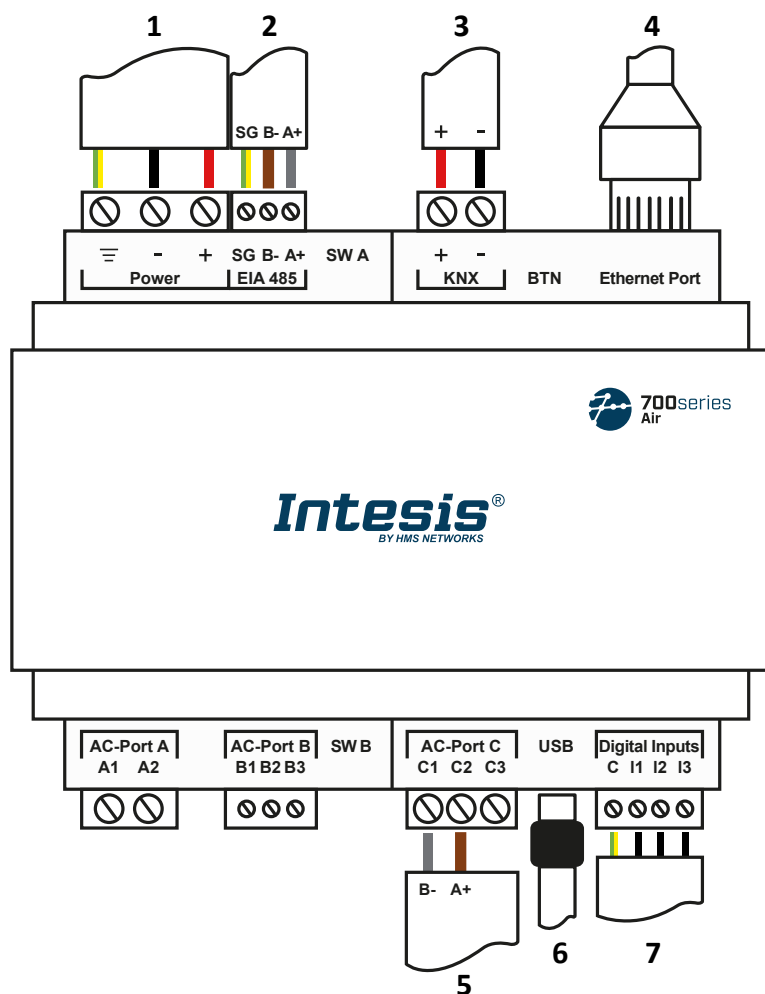


[Application web page](#)

[User manual](#)


[Back](#)

- 1. Power Supply (12-36VDC / 24VAC)
- 2. Not used
- 3. KNX
- 4. Console
- 5. Fujitsu (X1/X2)
- 6. Console
- 7. Binary inputs (dry contact) optional

Fujitsu to Modbus Server

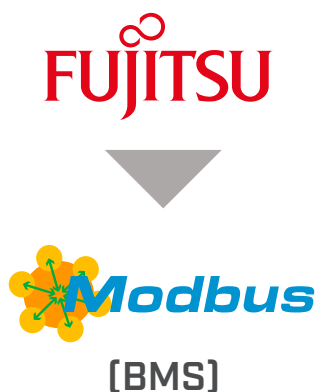

Wiring Diagram

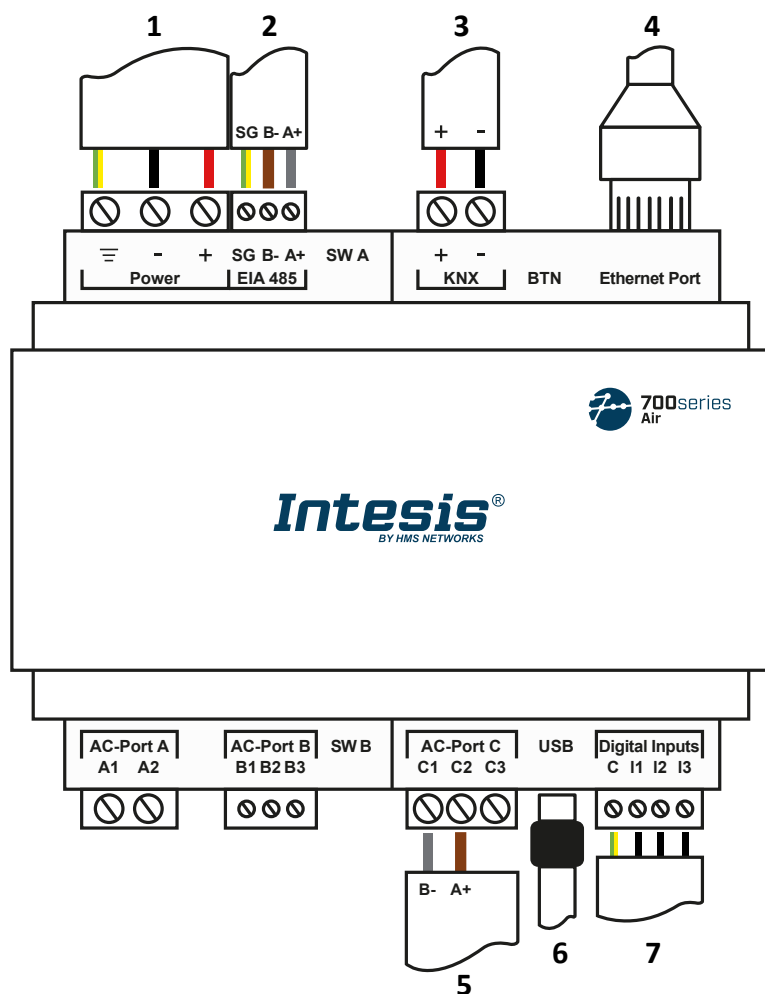

[Application web page](#)

[User manual](#)


[Back](#)

- 1. Power Supply (12-36VDC / 24VAC)
- 2. Modbus RTU
- 3. Not used
- 4. Modbus TCP & Console
- 5. Fujitsu (X1/X2)
- 6. Console
- 7. Binary inputs (dry contact) optional

Fujitsu to Home Automation



Wiring Diagram

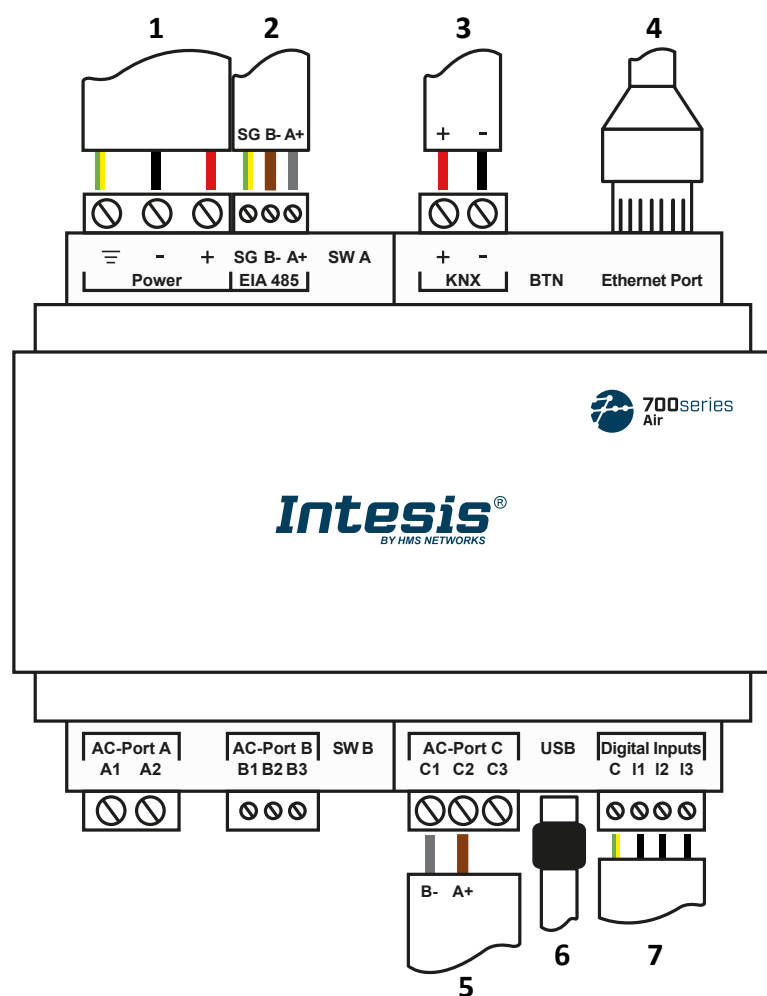

[Application web page](#)

[User manual](#)

[Back](#)

- 1. Power Supply (12-36VDC / 24VAC)
- 2. Not used
- 3. Not used
- 4. Home Automation & Console
- 5. Fujitsu (X1/X2)
- 6. Console
- 7. Binary inputs (dry contact) optional