



700series
Air

Application Wiring Diagrams for IN771PAN



Choose your application

Panasonic

ASHRAE **BACnet**

IN-BAC-PA
Panasonic
to BACnet

Panasonic

Modbus

IN-MBS-PA
Panasonic
to Modbus Server

Panasonic

KNX

IN-KNX-PA
Panasonic
to KNX

Panasonic

Home Automation

IN-WMP-PA
Panasonic
to Home Automation

Panasonic AC interface with KNX, Serial
and IP support - Larger capacity



IN-BAC-PA

Panasonic to BACnet


Panasonic



 **700series**
Air



Wiring Diagram

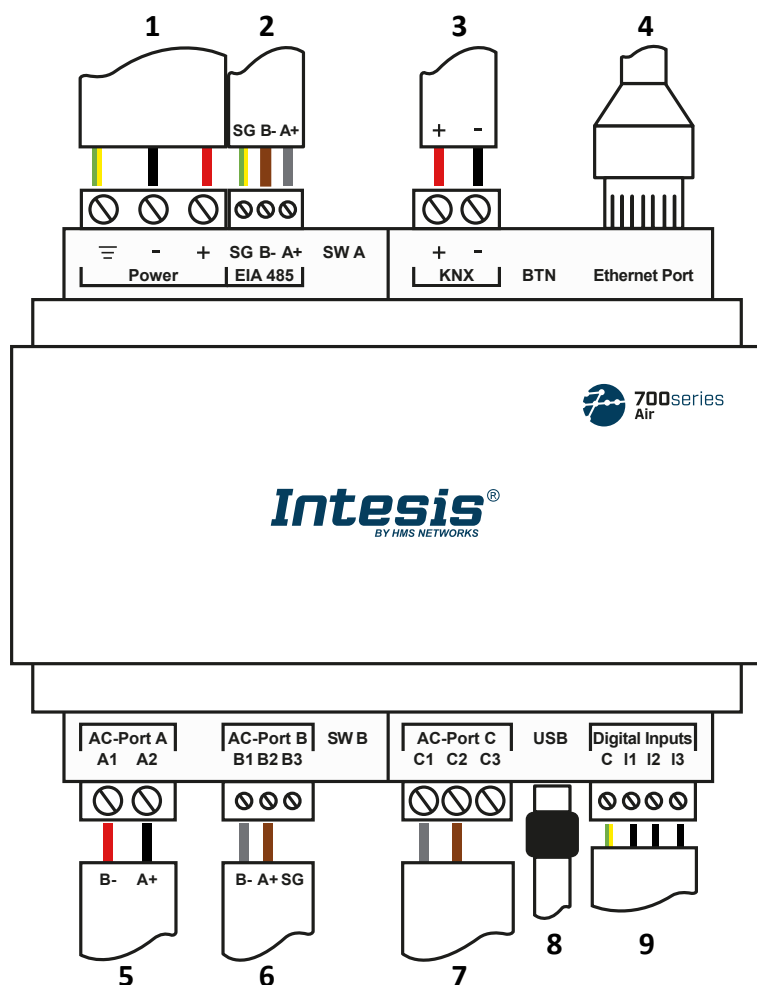

[Application web page](#)

[User manual](#)

[Back](#)

- 1. Power Supply (12-36VDC / 24VAC)
- 2. BACnet MSTP
- 3. Not used
- 4. BACnet IP & Console
- 5. Panasonic (P-Link)
- 6. Not used
- 7. Panasonic (P-Link)
- 8. Console
- 9. Binary inputs (dry contact) optional

IN-KNX-PA




Panasonic to KNX

Panasonic



Wiring Diagram

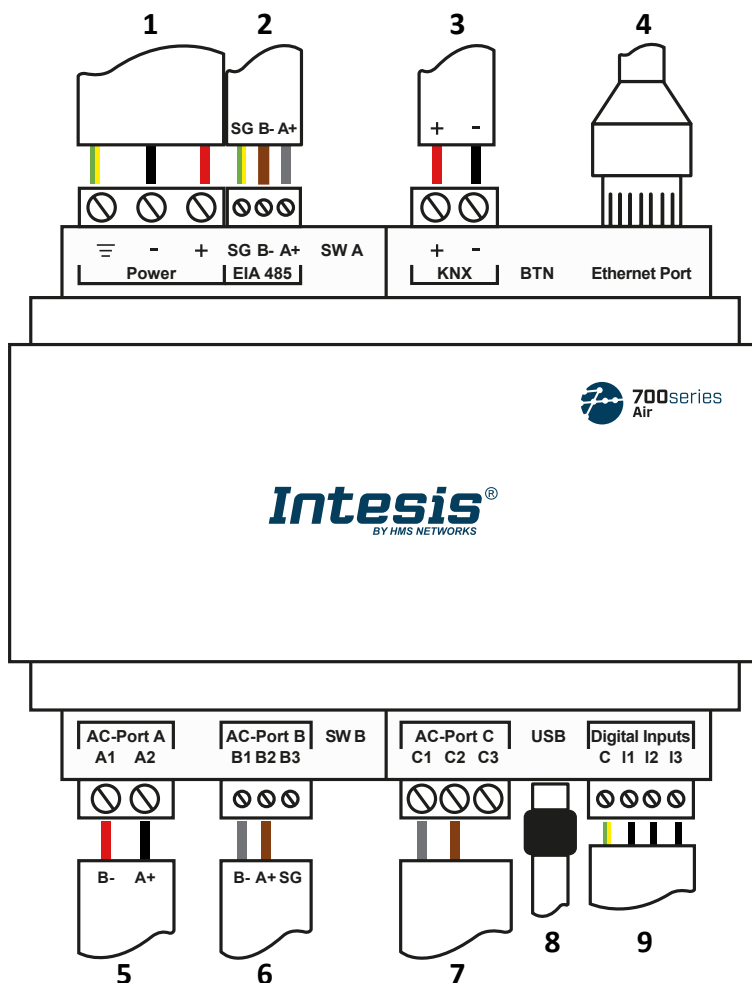

[Application web page](#)

[User manual](#)

[Back](#)




Panasonic to Modbus Server

Panasonic



Wiring Diagram

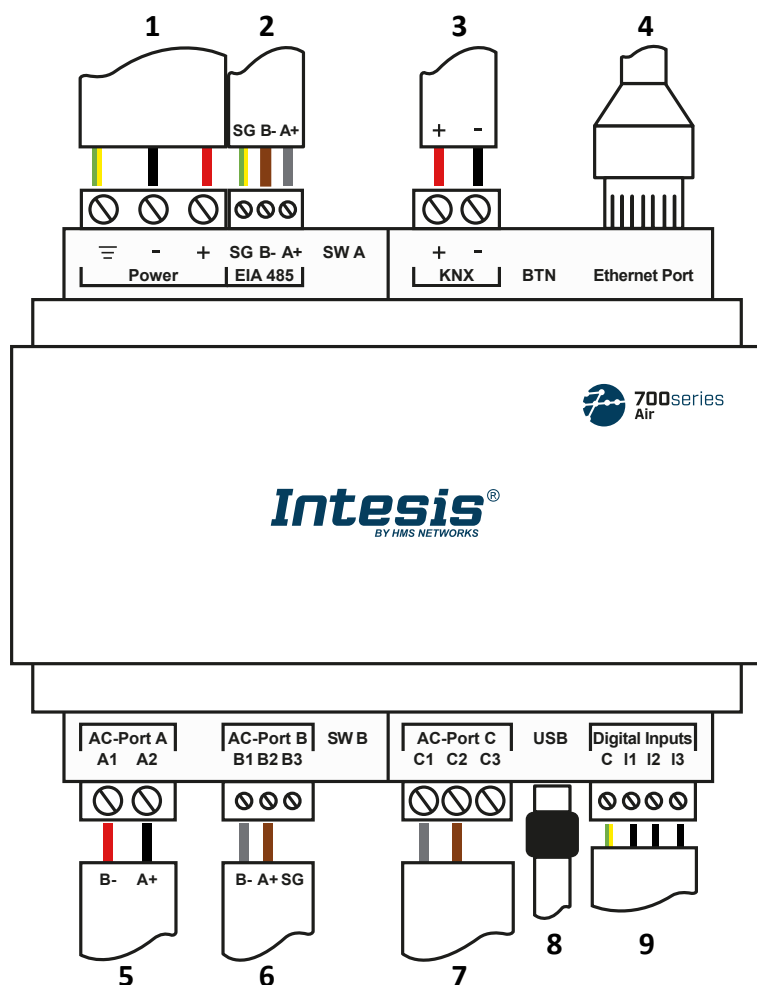

[Application web page](#)

[User manual](#)

[Back](#)

- 1. Power Supply (12-36VDC / 24VAC)
- 2. Modbus RTU
- 3. Not used
- 4. Modbus TCP & Console
- 5. Panasonic (P-Link)
- 6. Not used
- 7. Panasonic (P-Link)
- 8. Console
- 9. Binary inputs (dry contact) optional

IN-WMP-PA

 **700series**
Air


Panasonic to Home Automation

Panasonic

 **Home Automation**
[BMS]



Wiring Diagram

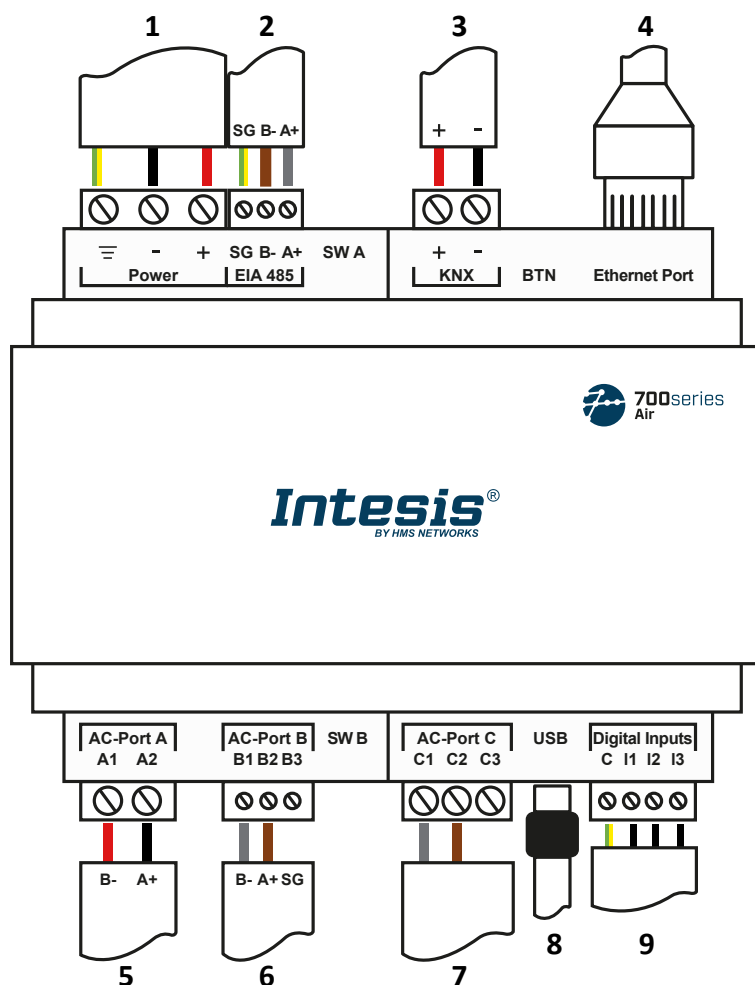

[Application web page](#)

[User manual](#)

[Back](#)

- 1. Power Supply (12-36VDC / 24VAC)
- 2. Not used
- 3. Not used
- 4. Home Automation & Console
- 5. Panasonic (P-Link)
- 6. Not used
- 7. Panasonic (P-Link)
- 8. Console
- 9. Binary inputs (dry contact) optional

HMS