

Product data sheet

Key card holder

JUNG



Reference number

A 590 CARD WW

for push-button insert ref.-no.: 531 U, 532 U, 533 U, 534 U

When inserting the key card (being supplied by the door lock manufacturer) a contact will be given to the distribution board (relay). Depending on the installation/wiring all connected lights and other electric consumers will be supplied with energy. Individual control of the lights and ac/heater by JUNG rocker switches or dimmers. The key card has to be removed when leaving the room; the energy supply will be cut automatically. Illumination (orienting light) possible.

When wallpapering, consider to install supporting frame onto the wallpaper (NO plaster compensation).

Colour:

white

Material:

thermoplastic