

Product data sheet

Rocker with arrow symbols for KNX push-button 2-gang



Reference number
CD 102 P SW
2-gang rocker with arrow symbols
for KNX push-button 2-gang ref.-no.: LS CD 1072 1ST, LS CD 1092 1ST, LS CD 1092 1TE
Duroplastic (scratch-proof) glossy
Colour: black
Material: duroplastic