

20 A1 Actuator-BCU Shutter 902402**Use of the application program**

Product family: Input/output
Product type: Binary/binary
Manufacturer: Siemens

Name: Shutter switch UP 520/01
Order no.: 5WG1 520-2AB01

Functional description

With the application program "20 A1 Actuator-BCU Shutter 902402", the output of the shutter switch can be used to control a shutter, roller blind or skylight. The following functions can be assigned to the 1-fold push button DELTA profil: switching (on/off/toggle/value), dimming (on/off or brighter/darker), controlling shutters, skylights and security gates etc., recalling/programming scenes and status display via LEDs.

Functions of the push button**Switching**

A separate communication object is available for each rocker contact. It is therefore possible to switch up to two different groups of luminaries. It is possible to set via parameters which switch function (on/off/toggle) is carried out when the rocker is pressed or released. An 8-bit value can also be assigned to each rocker contact. The corresponding value is sent immediately once the rocker has been pressed. It is therefore possible for a dimming actuator for example to be set to a defined value. A "bell function" is also possible. The On/Off signal is sent when the rocker is pressed and the inverse signal is sent when the rocker is released.

Dimming

A distinction is made between a short and long push button action. A short push button action sends a corresponding switching command (on, off or toggle). If the push button is pressed and held down for a longer period (the duration of which can be set), a dimming command is sent. The functions of "Dimming with stop telegram" and "Dimming with cyclical sending" are available. If "Dimming with stop telegram" is selected, a long push button action sends a command to the dimming object to dim by 100%. When the rocker is released, a stop command is sent. If "Dimming with cyclical sending" is selected, a dimming command is sent at set intervals for the duration of the push button action. It is also possible to assign parameters to the adjustment of the brightness value per dimming command (e.g. adjust by 1/8).

Shutter control

A distinction is made between a short and long push button action. If the rocker is pressed briefly, a switching telegram is sent which adjusts the louvres or stops any shutter movement. After a long push button action, the shutters are either raised or lowered. When assigning parameters, it is possible to choose between "Upper contact: Up, Lower contact: Down" or vice versa. Skylights and security gates for example can be controlled in both directions using this parameter. In this case the Up command corresponds to the Off command and the Down command corresponds to the On command.

Scene

Using the "Scene" function, users are able to reprogram a scene module themselves without changing the project design in ETS i.e. they can assign other brightness values or switching states to the individual groups of the respective scene. Two scenes can be recalled by pressing the rocker briefly (e.g. upper contact: scene 1, lower contact: scene 2) while a long rocker operation is used to program them. The scene is recalled via a 1 bit switching command, whereby scene 1 is recalled with a "0" telegram and scene 2 is recalled with a "1" telegram. It is possible to specify in the parameters which telegrams are sent by the upper and lower rocker contacts. The scene is saved via a 1 bit switching command, whereby scene 1 is saved with a "0" telegram and scene 2 is saved with a "1" telegram. An application with this type of function must also be used in the scene module. The application programs "12 C0 Scene 740701" and "12 C0 Scene 740801" are available. Before programming a scene, the actuators concerned must be set to the required brightness values or switching states using the sensors provided. The scene modules that have been addressed are requested on receipt of a telegram to scan the current brightness values and switching states of the actuators and to store them in the corresponding scene. A long rocker operation is indicated by the LED lighting up. It is possible to specify the period that distinguishes a short and long push button action.

LED

Two communication objects are available for the two LEDs of the push button. They can be used either to display the switching states or as an orientation light if the corresponding parameters have been selected.

20 A1 Actuator-BCU Shutter 902402

Functions of the shutter output

Shutter (Roller blind), Up/Down

When the "Up/Down" object receives a telegram, the shutter (roller blind) is moved in the required direction for a set period. The shutter is raised if the object value is "0" and lowered if the object value is "1". The shutter or roller blind can also be controlled via a dimming object. In this setting, the shutter and louvres objects are inverted to achieve a synchronisation with the push buttons that are being used. The relays are automatically opened once the set period for shutter or roller blind movement has elapsed. If the shutter (blind) is already travelling in a certain direction and "Up/Down" telegrams are received to move the shutter in the opposite direction, the shutter (blind) first stops for a set interval before it changes direction. This "Pause on change in direction" depends on the shutter motor that is being used and information should be obtained from the manufacturer.

When the shutter is lowered, it is completely closed. For this reason, it is possible to set a period ("Delay time on a direction change") which causes the shutter motor to move in another direction and thus leads to louvres adjustment. This is also the case if the lowering of the shutter is interrupted by a stop telegram. The time set for the "Pause on change in direction" is observed.

Louvres, Open/Closed

The behaviour of the shutter on receipt of a telegram for louvre adjustment depends on the current status of the shutter. If the shutter is travelling in a specific direction, the shutter movement is stopped. In the case of a roller blind, the receipt of a louvre adjustment telegram functions like a stop telegram. If the roller blind is stationary, it has no effect. During louvre adjustment, if another telegram is received to rotate the louvres in the same direction, the adjustment period is extended. If however a telegram is received to rotate the louvres in the opposite direction, the command is carried out once the pause on change in direction has been observed. If the shutter is stationary, a louvre adjustment telegram leads to shutter movement in the required direction.

Once the set period for movement has elapsed (normally 150 ms to 200 ms), the shutter motor is automatically switched off. If a shutter is lowered (without reverse step), the louvres remain closed in this direction. If the shutter is stopped and then raised step by step (louvre adjustment), the louvres are opened first of all and then rotated upwards again. If the louvres are completely closed, further telegrams to rotate the louvres in the same direction cause the shutters to be moved step by step in this direction.

Safety object (wind alarm)

The safety function can be enabled or disabled. In the event of an alarm signal, a "1" is received by the safety object and the shutters are raised. The safety position of the roller blinds can be selected. The safety object expects to receive cyclical telegrams from the signalling device (e.g. wind sensor) for monitoring purposes. Even if there is no alarm, the sensor must send telegrams with the value "0" (no alarm) at a set time interval (monitoring time). If the telegrams fail to appear, the shutters are also moved to the safety position. The object value of the safety object is thus set internally to "1" (alarm). The current alarm status can be read out via the safety object (if the safety function is enabled). If the safety position has been activated, the shutters/roller blinds can no longer be controlled via "Up/Down" or louvre adjustment telegrams. If the shutter or roller blind is moved to the safety position, thereby changing direction, the time set in the parameter "Pause on change in direction" is observed. The relays are not opened once the period for shutter or roller blind movement has elapsed. This guarantees that the shutter/roller blind reaches the safety position. The shutter/roller blind can only be operated once the safety object receives a telegram with the value "0" (no alarm).

Bus voltage failure and recovery

The shutter or roller blind is switched off on bus voltage recovery.

The shutter and roller blind can be moved up, moved down or stopped on bus voltage failure. In the event of a bus voltage failure, the pause on change in direction that is normally observed is not taken into account. This means for example that if a shutter is currently being lowered, it will change direction after approx. 20 ms. Shutter motors that require a pause are not able to carry out this change in direction. If the relay contacts were already opened before the bus voltage failure, the functionality is not taken into account.

Automatic opening of the relays

It is possible to prevent the relays from opening automatically (via the parameter "Function of louvres" in the "Shutter" parameter window). This deactivation takes effect if the relay has been closed for example by an "Open/Closed" telegram. Once a motor has been set in motion, it can then only be brought to a halt with a stop telegram (necessary for reverse circuits). For this reason, the louvre adjustment telegram is always interpreted as a stop telegram. This is also the case when the shutter is stationary (louvre adjustment telegrams no longer exist).

20 A1 Actuator-BA Shutter 902402



WARNING

When using the shutter switch UP 520/01 for roller blind drive mechanisms, the following should be noted when assigning parameters:

(It can otherwise lead to welding of the contacts

- The parameter "Pause on change in direction" must be set to the time given by the manufacturer of the roller blind (generally longer than 500 ms).
- The parameter "Behaviour on bus voltage failure" should be set to "STOP".

Assigning parameters to the push button

Switch

Communication objects

Phys. Addr.		Program		
no.	Object name	Function	Type	
01.01.007	20 A1 Actuator-BCU Shutter 902402			
0	Switch, Rocker A (upper rocker contact) On		1 Bit	
1	Switch, Rocker A (lower rocker contact) Off		1 Bit	
***	***	***	***	***

Obj	Object name	Function	Type	Flag
0	Switch, Rocker A (upper rocker contact)	On	1 Bit	CT
1	Switch, Rocker A (lower rocker contact)	Off	1 Bit	CT

These objects serve as switching objects for the upper and lower contacts of the rocker. Either an On or an Off telegram is sent depending on the parameters selected. If "Toggle" is selected, either an On or Off telegram is sent (toggling), depending on the current switching state.

Parameters

LED	Rocker	Shutter
Function of rocker	Switch	
Upper contact	On	
Lower contact	Off	

Parameters	Settings
Function of rocker	Switch Shutter Dimming with stop telegram Dimming with cyclical sending Scene (recall / program)

The function of the rocker is set via this parameter. The "Rocker" parameter window changes depending on the function that is selected here and the relevant parameters are displayed with default settings.

Upper contact	On Off Toggle 8-bit Value press: On, release: Off press: Off, release: On
---------------	--

Lower contact	On Off Toggle 8-bit Value press: On, release: Off press: Off, release: On
---------------	--

This parameter determines which switching state is sent via the corresponding switching object when the upper and lower rocker contacts are pressed.

"On" or "Off": An On or Off telegram is sent when the contact is pressed.

"Toggle": Each time the rocker is pressed, the inverse object value of the corresponding switching object is sent (toggling).

"8-bit Value": A value telegram is sent when the rocker is operated. When this setting is selected, the parameter window changes and an additional parameter is displayed for setting the 8-bit value.

"press: On, release: Off": An On telegram is generated when the contact is pressed while releasing the contact produces an Off telegram.

"press: Off, release: On": An Off telegram is generated when the contact is pressed while releasing the contact produces an On telegram.

20 A1 Actuator-BCU Shutter 902402

Shutter

Communication objects

Phys.Addr.		Program		
no.	Object name	Function	Type	
01.01.007	20 A1 Actuator-BCU Shutter 902402			
0	Louvres, Rocker A	Open / Closed	1 Bit	
1	Shutter, Rocker A	Up / Down	1 Bit	
...

Obj	Object name	Function	Type	Flag
0	Louvres, Rocker A	Open / Closed	1 Bit	CT
1	Shutter, Rocker A	Up / Down	1 Bit	CT

This object serves as a switching object for louvre adjustment after a short push button action. In the default setting, pressing the upper contact opens the louvres by a step with an Off telegram while pressing the lower contact closes the louvres by a step with an On telegram.

This object serves as a switching object for shutter movement after a long push button action. In the default setting, pressing the upper contact raises the shutter with an Off telegram while pressing the lower contact lowers the shutter with an On telegram.

Parameters

LED	Rocker	Shutter	
Function of rocker	Shutter		
Upper / Lower contact	Up / Down		
Long switch operation min.	0.5 seconds		

Parameters	Settings
Function of rocker	Switch Shutter Dimming with stop telegram Dimming with cyclical sending Scene (recall / program)

The function of the rocker is set via this parameter. The "Rocker" parameter window changes depending on the function that is selected here and the relevant parameters are displayed with default settings.

Parameters	Settings
Upper / Lower contact	Up / Down Down / Up

This parameter defines the function of the upper and lower rocker contacts. In the default setting, a brief operation of the upper contact opens the louvres by a step with an Off telegram. Pressing the lower contact closes the louvres by a step with an On telegram. A long operation of the upper contact raises the shutter with an Off telegram while a long operation of the lower contact lowers the shutter with an On telegram.

Long switch operation min.	0.3; 0.4; 0.5 ; 0.6; 0.8; 1.0; 1.2; 1.5; 2.0; 2.5; 3.0; 4.0; 5.0; 6.0; 7.0 seconds
----------------------------	---

This parameter defines the time limit for a short/long rocker operation. If a rocker is pressed for longer than the set period, the push button detects a long rocker operation.

Dimming with stop telegram

Communication objects

Phys.Addr.		Program		
no.	Object name	Function	Type	
01.01.007	20 A1 Actuator-BCU Shutter 902402			
0	Dimming On / Off, Rocker A	On / Off	1 Bit	
1	Dimming, Rocker A	Brighter / Darker	4 Bit	
...

Obj	Object name	Function	Type	Flag
0	Dimming On / Off, Rocker A	On / Off	1 Bit	CT

The switching telegrams of rocker A are sent via the group addresses in this object. It is possible to set via parameters which switching state is generated when the upper or lower rocker contact is pressed. If the setting "Toggle" is selected, the central addresses that are also contained in the actuator must be entered in order to synchronise the sensor.

1	Dimming, Rocker A	Brighter / Darker	4 Bit	CT
---	-------------------	-------------------	-------	----

This object serves as a dimming object for the rocker and sends a dimming telegram after a long push button action. The following applies: pressing the upper contact for a long period sends a "Dim brighter" telegram while a "Dim darker" telegram is sent when the lower contact is pressed. A stop telegram is sent when the rocker is released.

20 A1 Actuator-BA Shutter 902402

Parameters

LED	Rocker	Shutter
Function of rocker	Dimming with stop telegram	
Upper / Lower contact	On / Off	
Long switch operation min.	0.5 seconds	

Parameters	Settings
Function of rocker	Switch Shutter Dimming with stop telegram Dimming with cyclical sending Scene (recall / program)
The function of the rocker is set via this parameter. The "Rocker" parameter window changes depending on the function that is selected here and the relevant parameters are displayed with default settings.	
Upper / Lower contact	On / Off Toggle / Toggle
This parameter defines the function of the upper and lower rocker contacts. In the default setting, pressing the upper contact briefly sends an On telegram while pressing the lower contact sends an Off telegram. If a long push button action is detected, pressing the upper contact sends a "Dim brighter" telegram while pressing the lower contact sends a "Dim darker" telegram. A stop telegram is sent when the push button is released. If the setting "Toggle / Toggle" is selected, either an On or Off telegram is sent (toggling) when one of the contacts is pressed briefly, depending on the current object status. The dimming function remains the same as for the setting "On / Off".	
Long switch operation min.	0.3; 0.4; 0.5 ; 0.6; 0.8; 1.0; 1.2; 1.5; 2.0; 2.5; 3.0; 4.0; 5.0; 6.0; 7.0 seconds
This parameter defines the time limit for a short/long rocker operation. If a rocker is pressed for longer than the set period, the push button detects a long rocker operation.	

Dimming with cyclical sending

Communication objects

Phys.Addr.	Program				
		no.	Object name	Function	Type
01.01.007	20 A1 Actuator-BCU Shutter 902402				
0	Dimming On / Off / Toggle, Rocker A	On / Off / Toggle	1 Bit		
1	Dimming, Rocker A	Brighter / Darker	4 Bit		
...

Obj	Object name	Function	Type	Flag
0	Dimming On / Off / Toggle, Rocker A	On / Off / Toggle	1 Bit	CWT

This object serves as a switching object for the rocker after a short push button action. In the default setting, pressing the upper contact sends an On telegram while an Off telegram is sent when the lower rocker is pressed. If the setting "Toggle / Toggle" is selected, either an On or Off telegram is sent (toggling) depending on the current object status.

1	Dimming, Rocker A	Brighter / Darker	4 Bit	CT
---	-------------------	-------------------	-------	----

This object serves as a dimming object for the rocker and sends a dimming telegram after a long push button action. The following applies: pressing the upper contact for a long period sends a "Dim brighter" telegram while pressing the lower contact sends a "Dim darker" telegram at the repetition rate specified in the parameter "Interval for cyclical sending".

Parameters

LED	Rocker	Shutter
Function of rocker	Dimming with cyclical sending	
Upper / Lower contact	On / Off, Step=1/8	
Long switch operation min.	0.5 seconds	
Interval for cyclical sending	0.5 seconds	

Parameters	Settings
Function of rocker	Switch Shutter Dimming with stop telegram Dimming with cyclical sending Scene (recall / program)
The function of the rocker is set via this parameter. The "Rocker" parameter window changes depending on the function that is selected here and the relevant parameters are displayed with default settings.	

Application program description

October 2001

20 A1 Actuator-BCU Shutter 902402

Parameters	Settings
Upper / Lower contact	On / Off, Step = 1/1 On / Off, Step = 1/2 On / Off, Step = 1/4 On / Off, Step = 1/8 On / Off, Step = 1/16 On / Off, Step = 1/32 On / Off, Step = 1/64 Toggle / Toggle, adjustment = 1/1 Toggle / Toggle, adjustment = 1/4 Toggle / Toggle, adjustment = 1/8 Toggle / Toggle, adjustment = 1/16 Toggle / Toggle, adjustment = 1/32 Toggle / Toggle, adjustment = 1/64
This parameter determines which switching value is sent when the upper and lower contacts are pressed briefly. The change in the brightness value that is carried out by a dimming telegram when a long push button action is detected is also set here. For example, in the setting "Step = 1/8", 8 dimming telegrams have to be sent in order to dim from 0% to 100%.	
"On / Off, Step = x": A short operation of the upper contact generates an On telegram while an Off telegram is sent after the lower contact is pressed briefly. "Dim brighter" telegrams are sent if the upper contact is pressed for a long period while "Dim darker" telegrams are sent if the lower contact is pressed.	
"Toggle / Toggle, adjustment = x": The value in the switching object is inverted after a short push button action. The dimming function remains the same as for the setting "On / Off, Step = x".	
Long switch operation min.	0.3; 0.4; 0.5 ; 0.6; 0.8; 1.0; 1.2; 1.5; 2.0; 2.5; 3.0; 4.0; 5.0; 6.0; 7.0 seconds
This parameter defines the time limit for a short/long rocker operation. If a rocker is pressed for longer than the set period, the push button detects a long rocker operation and sends dimming telegrams.	
Interval for cyclical sending	0.3; 0.4; 0.5 ; 0.6; 0.8; 1.0; 1.2; 1.5; 2.0; 2.5; 3.0; 4.0; 5.0; 6.0; 7.0 seconds
The repetition rate for cyclical sending after a long push button action is set here. The bus load should be taken into consideration when setting this interval.	

Scene

Communication objects

no.	Object name	Program		Type
		Function	Type	
01.01.007	20 A1 Actuator-BCU Shutter 902402			
0	Scene, Rocker A	Recall	1 Bit	
1	Scene, Rocker A	Save	1 Bit	
...

Obj	Object name	Function	Type	Flag
0	Scene, Rocker A	Recall	1 Bit	CT
The telegrams for recalling scenes are sent via the group addresses in this object. On receipt of the telegram, the scene module sends the stored brightness values of the scene via the group objects to the switch/dim actuators that have been addressed.				
1	Scene, Rocker A	Save	1 Bit	CT
The programming telegrams are sent via the group address in this object to the corresponding scene module.				

Parameters

LED	Rocker	Shutter	
Function of rocker		Scene (recall / program)	
Upper / Lower contact		0 / 1	
Start to save scene at		5.0 seconds	

Parameters	Settings
Function of rocker	Switch Shutter Dimming with stop telegram Dimming with cyclical sending Scene (recall / program)

The function of the rocker is set via this parameter. The "Rocker" parameter window changes depending on the function that is selected here and the relevant parameters are displayed with default settings.

Upper / Lower contact	0 / 1 1 / 0
------------------------------	----------------

This parameter defines the sending signal when the rocker contacts are pressed.

"0 / 1": When the upper contact is pressed briefly, scene 1 is set with a "0" telegram by the scene modules that have been addressed. In the same way, scene 2 is set when the lower contact is pressed briefly. After a long push button action, these scene modules are requested on receipt of a telegram to scan the current brightness values and switching states of the actuators and to store them in the corresponding scene.

"1 / 0": The assignment of scenes to the rocker contacts is inverted in this setting.

20 A1 Actuator-BA Shutter 902402

Parameters	Settings
Start to save scene at	0.3; 0.4; 0.5; 0.6; 0.8; 1.0; 1.2; 1.5; 2.0; 2.5; 3.0; 4.0; 5.0 ; 6.0; 7.0 seconds

This parameter indicates the length of time that the rocker must be operated to distinguish between recalling the scene and switching to programming mode.
Shorter push button than the set time: The scene is recalled.
Longer push button than the set time: The scene is switched to programming mode.

LED

Communication objects

Phys.Addr.	Program		
no.	Object name	Function	Type
01.01.007	20 A1 Actuator-BCU Shutter 902402		
***	***	***	***
8	LED	Status	1 Bit
***	***	***	***

Obj	Object name	Function	Type	Flag
8	LED	Status	1 Bit	CRW

The switching telegrams are received via the group addresses in this object when the LED is used to display the status of a switching state. If "On" or "Off" is selected in the "LED" parameter window, this object is not displayed and has no function.

Parameters

LED	Rocker	Shutter	
Orientation light (LED)	Off		
Function of LED	Status (via separate object)		

Parameters	Settings
Orientation light (LED)	Off On

This parameter defines whether the second LED should always be switched off or used as an orientation light.

Function of LED	Off On Status (via separate object) Inverted (via separate object)
------------------------	--

Using these parameters, the first LED can be used for status display or as an orientation light.
If "On" is selected, the LED is used as an orientation light. If "Off" is selected, the LED is switched off.
In the settings "Status (via separate object)" or "Inverted (via separate object)", the relevant object is added to the object list. This object should then be linked with the corresponding group address.

Assigning parameters to the shutter outputs

Communication objects

Phys.Addr.	Program		
no.	Object name	Function	Type
01.01.007	20 A1 Actuator-BCU Shutter 902402		
***	***	***	***
12	Shutter	Down / Up	1 Bit
13	Louvres	Open / Closed	1 Bit
14	Wind alarm	Shutter Up	1 Bit
15	Shutter using dimming	Up/Down using Brighter/Darker	4 Bit

Obj	Object name	Function	Type	Flag
12	Shutter	Up / Down	1 Bit	CW
		Shutter movement (Up / Down) is initiated with this object. The shutter is raised on receipt of a logic "0" and lowered on receipt of a logic "1".		
13	Louvres	Open / Closed	1 Bit	CW
		This object serves for louvre adjustment. The louvres are rotated downwards on receipt of a logic "0" and rotated upwards on receipt of a logic "1".		
14	Wind alarm	Shutter Up	1 Bit	CW
		This object can be linked with a safety address e.g. from a wind sensor. In the idle state, the sensor sends a logic "0" at cyclic intervals. In the event of a wind alarm, it sends a logic "1". In this case, the shutter switch moves the shutter into the safety position and blocks the operation of the shutter. This also happens if the wind sensor fails and is therefore no longer able to send cyclical "0" signals. This object is only available if the parameter "Safety (e.g. wind alarm)" has been set to "enabled".		
15	Shutter using dimming	Up/Down using Brighter/Darker	4 Bit	CW
		A dimming sensor can control a shutter via this object, whereby dimming brighter raises the shutter and dimming darker lowers the shutter. All the dimming telegrams are interpreted as an adjustment by 100%, as the actuator does not know the current position. For this reason, it is only advisable to configure the dimming sensor for "Dimming with stop telegram".		
		This object is only available if the parameter "Shutter control using dim. command" has been set to "enabled". The object values of "Shutter" and "Louvres" are also inverted. This means that the object for the shutter that is controlled by a short push button action can be linked with the "Louvres" object. The louvres are thus opened by a short push button action of the upper contact (upper -> brighter; lower -> darker).		

Application program description

October 2001

20 A1 Actuator-BCU Shutter 902402

Parameters

LED	Rocker	Shutter
Function	Shutter	
Function of louvres (step)	using object, without reverse step after stop	
Time for shutter movement	12 minutes	
Time for louvres adjustment	200 milliseconds	
Pause on change in direction	700 milliseconds	
Shutter control using dim. command	enabled (Up/Down are changed)	
Behaviour on bus voltage failure	move shutter up	
Safety (e.g. wind alarm)	enabled	
Safety position of shutter	Up	
Monitoring time	12 minutes	

Parameters	Settings
Function	Shutter Roller blind
Function of louvres (step)	<p>using object, without reverse step after stop using object, with reverse step after stop using shutter up/down with stop telegram</p> <p>The function of the shutter switch is set via this parameter. The parameter window changes depending on the function selected and the relevant parameters are displayed with default settings.</p>
Time for shutter movement	<p>10; 30 seconds 1; 2; 3; 4; 5; 6; 7; 8; 10; 12; 15; 20; 25; 30; 35; 40; 60; 90; 120 minutes</p> <p>This parameter indicates the duration of the shutter movement before the shutter is automatically switched off. It is not displayed if the parameter "Function of louvres (step)" is set to "using shutter up/down with stop telegram".</p>

Parameters	Settings
Time for louvres adjustment	50; 80; 100; 120; 140; 160; 180; 200 ; 220; 240; 260; 280; 300; 360; 400; 500; 700; 800; 1000 milliseconds
Delay time on a direction change	50; 80; 100; 120; 140; 160; 180; 200 ; 220; 240; 260; 280; 300; 360; 400; 500; 700; 800; 1000 milliseconds
Pause on change in direction	10 milliseconds 40 milliseconds 70 milliseconds 100 milliseconds 200 milliseconds 400 milliseconds 700 milliseconds 1 second 2 seconds 4 seconds
Shutter control using dim. command	disabled (standard) enabled (Up/Down are changed)
Behaviour on bus voltage failure	move shutter up move shutter down STOP

October 2001

20 A1 Actuator-BA Shutter 902402

Parameters		Settings
Safety (e.g. wind alarm)		disabled enabled
The safety function can be enabled or disabled via this parameter. This parameter must be enabled when a wind sensor is being used.		
Safety position of shutter		Up
This parameter indicates the limit position of the shutter in the event of a safety alarm. The parameter only appears if the safety function has been enabled. The safety position cannot be changed.		
Monitoring time		12 minutes
The monitoring time is specified with this parameter. The safety object expects to receive cyclical telegrams ("0" signals). If the shutter actuator does not receive a signal within the monitoring period, the safety function is initiated.		

Obj	Object name	Function	Type	Flag
15	Roller blinds using dim. command	Up/Down using Brighter/Darker	4 Bit	CW
A dimming sensor can control a roller blind via this object, whereby dimming brighter raises the blind and dimming darker lowers the blind. All the dimming telegrams are interpreted as an adjustment by 100%, as the actuator does not know the current position. For this reason, it is only advisable to configure the dimming sensor for "Dimming with stop telegram".				
This object is only available if the parameter "Roller blinds control using dim. command" has been set to "enabled". The object value of the "Roller blinds" object is also inverted. This means that the object for the roller blind that is controlled by a short push button action can be linked with the "Roller blinds" object. The roller blind is thus raised by a short push button action of the upper contact (upper -> brighter; lower -> darker).				

Roller blind

Communication objects

Phys.Addr.	Program		
no.	Object name	Function	Type
01.01.007	20 A1 Actuator-BCU Shutter 902402		
...
12	Roller blinds	Up / Down	1 Bit
13	Roller blinds	STOP	1 Bit
14	Wind alarm	Roller blinds up	1 Bit
15	Roller blinds using dim. command	Up/Down using Brighter/Darker	4 Bit

Obj	Object name	Function	Type	Flag
12	Roller blinds	Up / Down	1 Bit	CW
The movement of the roller blind (Up / Down) is initiated with this object. The blind is raised on receipt of a logic "0" and lowered on receipt of a logic "1".				
13	Roller blinds	STOP	1 Bit	CW
This object serves as a receiving object for stopping the movement of the roller blind.				
14	Wind alarm	Roller blinds up	1 Bit	CW
This object can be linked with a safety address e.g. from a wind sensor. In the idle state, the sensor sends a logic "0" at cyclic intervals. In the event of wind alarm, it sends a logic "1". In this case, the shutter switch moves the roller blind into the set safety position (Up or Down) and blocks the operation of the roller blind. This also happens if the wind sensor fails and is therefore no longer able to send cyclical "0" signals. This object is only available if the parameter "Safety (e.g. wind alarm)" is set to "enabled".				

Parameters

LED	Rocker	Roller blinds
		Function
		Automatically stop roller blinds movement
		enabled
		Time for roller blinds movement
		12 minutes
		Pause on change in direction
		700 milliseconds
		Roller blinds control using dim. command
		enabled (Up/Down are changed)
		Behaviour on bus voltage failure
		move shutter up
		Safety (e.g. wind alarm)
		enabled
		Safety position of roller blinds
		Up
		Monitoring time
		12 minutes

Parameters	Settings
Function	Shutter Roller blind
The function of the shutter switch is set via this parameter. The parameter window changes depending on the function selected and the relevant parameters are displayed with default settings.	
Automatically stop roller blinds movement	disabled enabled
This parameter indicates whether the relay is automatically opened once the travel time for the roller blinds has elapsed. If "enabled" is selected, the parameter "Time for roller blinds movement" appears for setting the travel time.	
Time for roller blinds movement	10; 30 seconds 1; 2; 3; 4; 5; 6; 7; 8; 10; 12 ; 15; 20; 25; 30; 35; 40; 60; 90; 120 minutes
This parameter indicates the duration of the roller blind movement before the blind is automatically switched off. It is not displayed if the parameter "Automatically stop roller blinds movement" is set to "disabled".	

20 A1 Actuator-BCU Shutter 902402

Parameters	Settings
Pause on change in direction	10 milliseconds 40 milliseconds 70 milliseconds 100 milliseconds 200 milliseconds 400 milliseconds 700 milliseconds 1 second 2 seconds 4 seconds
	The pause on change in direction is set via this parameter. The roller blind remains stationary for the duration of the period. Note: The parameter must be set to the time <u>given by the manufacturer of the roller blind</u> (generally longer than 500 ms).
Roller blinds control using dim. command	disabled (standard) enabled (Up/Down are changed)
	This parameter controls whether a 4 bit object is made available for controlling the roller blind. It is therefore possible for a dimming sensor to control a roller blind, whereby dimming brighter raises the blind and dimming darker lowers the blind. All the dimming telegrams are interpreted as an adjustment by 100% since the actuator does not know the current position. For this reason, it is only advisable to configure the dimming sensor for "Dimming with stop telegram". If the setting "enabled" is selected, the corresponding object is displayed in the object list.
Behaviour on bus voltage failure	move shutter up move shutter down STOP
	This parameter indicates the behaviour of the roller blind on bus voltage failure. Note: When operating heavy roller blind motors, the setting "STOP" should be selected in order to protect the relay contacts.
Safety (e.g. wind alarm)	disabled enabled
	The safety function can be enabled or disabled via this parameter. This parameter must be enabled when a wind sensor is being used.
Safety position of roller blind	Up Down
	This parameter indicates the limit position of the shutter in the event of a safety alarm. The parameter only appears if the safety function has been enabled.
Monitoring time	12 minutes
	The safety object expects to receive cyclical telegrams ("0" signals). If these telegrams fail to appear, the safety function is triggered and the roller blind is moved to the safety position. The monitoring time is specified with this parameter. If the shutter actuator does not receive a signal within the monitoring period, the safety function is initiated.

Times

The times cannot be kept to exactly for reasons associated with the internal operating system. The following tables indicate the time bands that are applied.

Reversal in change of direction

Time [ms]	Time from [ms]		Time to [ms]
10	9.5	-	10.0
20	19.5	-	20.0
40	39.5	-	40.0
70	69.5	-	70.0
100	99.5	-	100.0
200	192.0	-	200.0
400	392.0	-	400.0
700	696.0	-	704.0
1,000	992.0	-	1000.0
2,000	1992.0	-	2000.0
4,000	3900.0	-	4030.0

Louvre adjustment time

Time [ms]	Time from [ms]	Time to [ms]
50	49.5	- 50.0
60	59.5	- 60.0
70	69.5	- 70.0
80	79.5	- 80.0
100	99.5	- 100.0
120	119.5	- 120.0
140	136.0	- 144.0
160	152.0	- 160.0
180	176.0	- 184.0
200	192.0	- 200.0
220	216.0	- 224.0
240	232.0	- 240.0
260	256.0	- 264.0
280	272.0	- 280.0
300	296.0	- 304.0
330	320.0	- 328.0
360	352.0	- 360.0
400	392.0	- 400.0
500	496.0	- 504.0
600	592.0	- 600.0
700	696.0	- 704.0
800	792.0	- 800.0
1,000	992.0	- 1000.0

20 A1 Actuator-BA Shutter 902402

Travel time for shutters and roller blinds


Time [min]	Time [ms]	Time [ms]		Time [min]	
		from	to	from	to
	10,000	9880.0	-	10010.0	0.2 - 0.2
	30,000	29900.0	-	30030.0	0.5 - 0.5
1	60,000	58800.0	-	60900.0	1.0 - 1.0
2	120,000	117600.0	-	119700.0	2.0 - 2.0
3	180,000	178500.0	-	180600.0	3.0 - 3.0
4	240,000	237300.0	-	239400.0	4.0 - 4.0
5	300,000	298200.0	-	300300.0	5.0 - 5.0
6	360,000	357000.0	-	359100.0	6.0 - 6.0
7	420,000	417900.0	-	420000.0	7.0 - 7.0
8	480,000	478800.0	-	480900.0	8.0 - 8.0
10	600,000	561000.0	-	594000.0	9.4 - 9.9
12	720,000	693000.0	-	726000.0	11.6 - 12.1
15	900,000	858000.0	-	891000.0	14.3 - 14.9
20	1,200,000	1155000.0	-	1188000.0	19.3 - 19.8
25	1,500,000	1452000.0	-	1485000.0	24.2 - 24.8
30	1,800,000	1782000.0	-	1815000.0	29.7 - 30.3
35	2,100,000	2079000.0	-	2112000.0	34.7 - 35.2
40	2,400,000	2376000.0	-	2409000.0	39.6 - 40.2
60	3,600,000	3564000.0	-	3597000.0	59.4 - 60.0
90	5,400,000	5379000.0	-	5412000.0	89.7 - 90.2
120	7,200,000	7161000.0	-	7194000.0	119.4 - 119.9

Safety times


Time [min]	Time [ms]	Time from [ms]	Time to [ms]	Time to [min]	Time from [min]
2	120,000	132000.0	-	165000.0	2.2 - 2.8
4	240,000	264000.0	-	297000.0	4.4 - 5.0
8	480,000	495000.0	-	528000.0	8.3 - 8.8
12	720,000	726000.0	-	759000.0	12.1 - 12.7
20	1,200,000	1221000.0	-	1254000.0	20.4 - 20.9
30	1,800,000	1815000.0	-	1848000.0	30.3 - 30.8
45	2,700,000	2706000.0	-	2739000.0	45.1 - 45.7
60	3,600,000	3630000.0	-	3663000.0	60.5 - 61.1

Timing diagrams: Examples for a push button


1. Configured for switch function: upper "On", lower "Off"

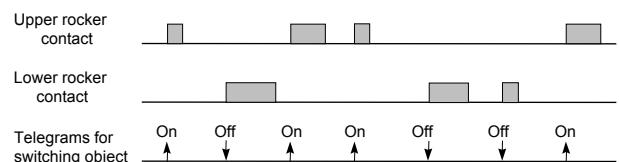


2. Configured for switch function: upper "Toggle", lower "press: On, release: Off"

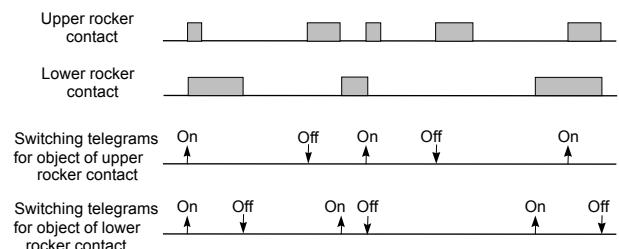

3. Configured for switch function: upper "8-bit Value", lower "8-bit Value"

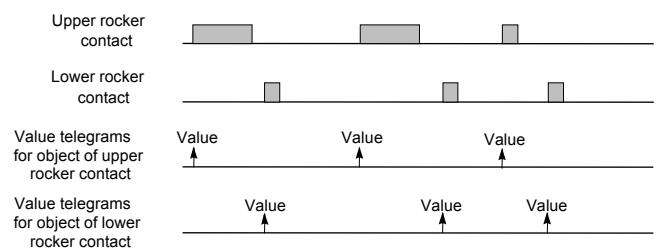


4. Configured for shutter: upper "Up", lower "Down"

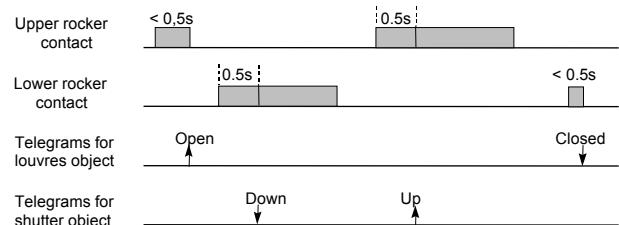

20 A1 Actuator-BCU Shutter 902402

5. Configured for dimming with cyclical sending

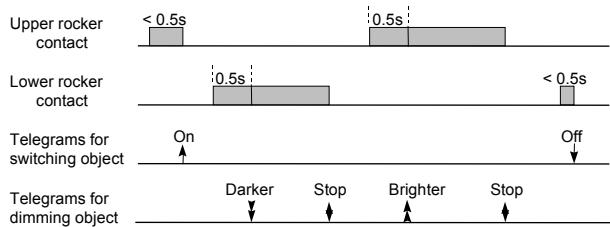

6. Configured for dimming with cyclical sending

