

AMPLIFICADOR 20W / 20W AMPLIFIER

E17G - E18G



E17G

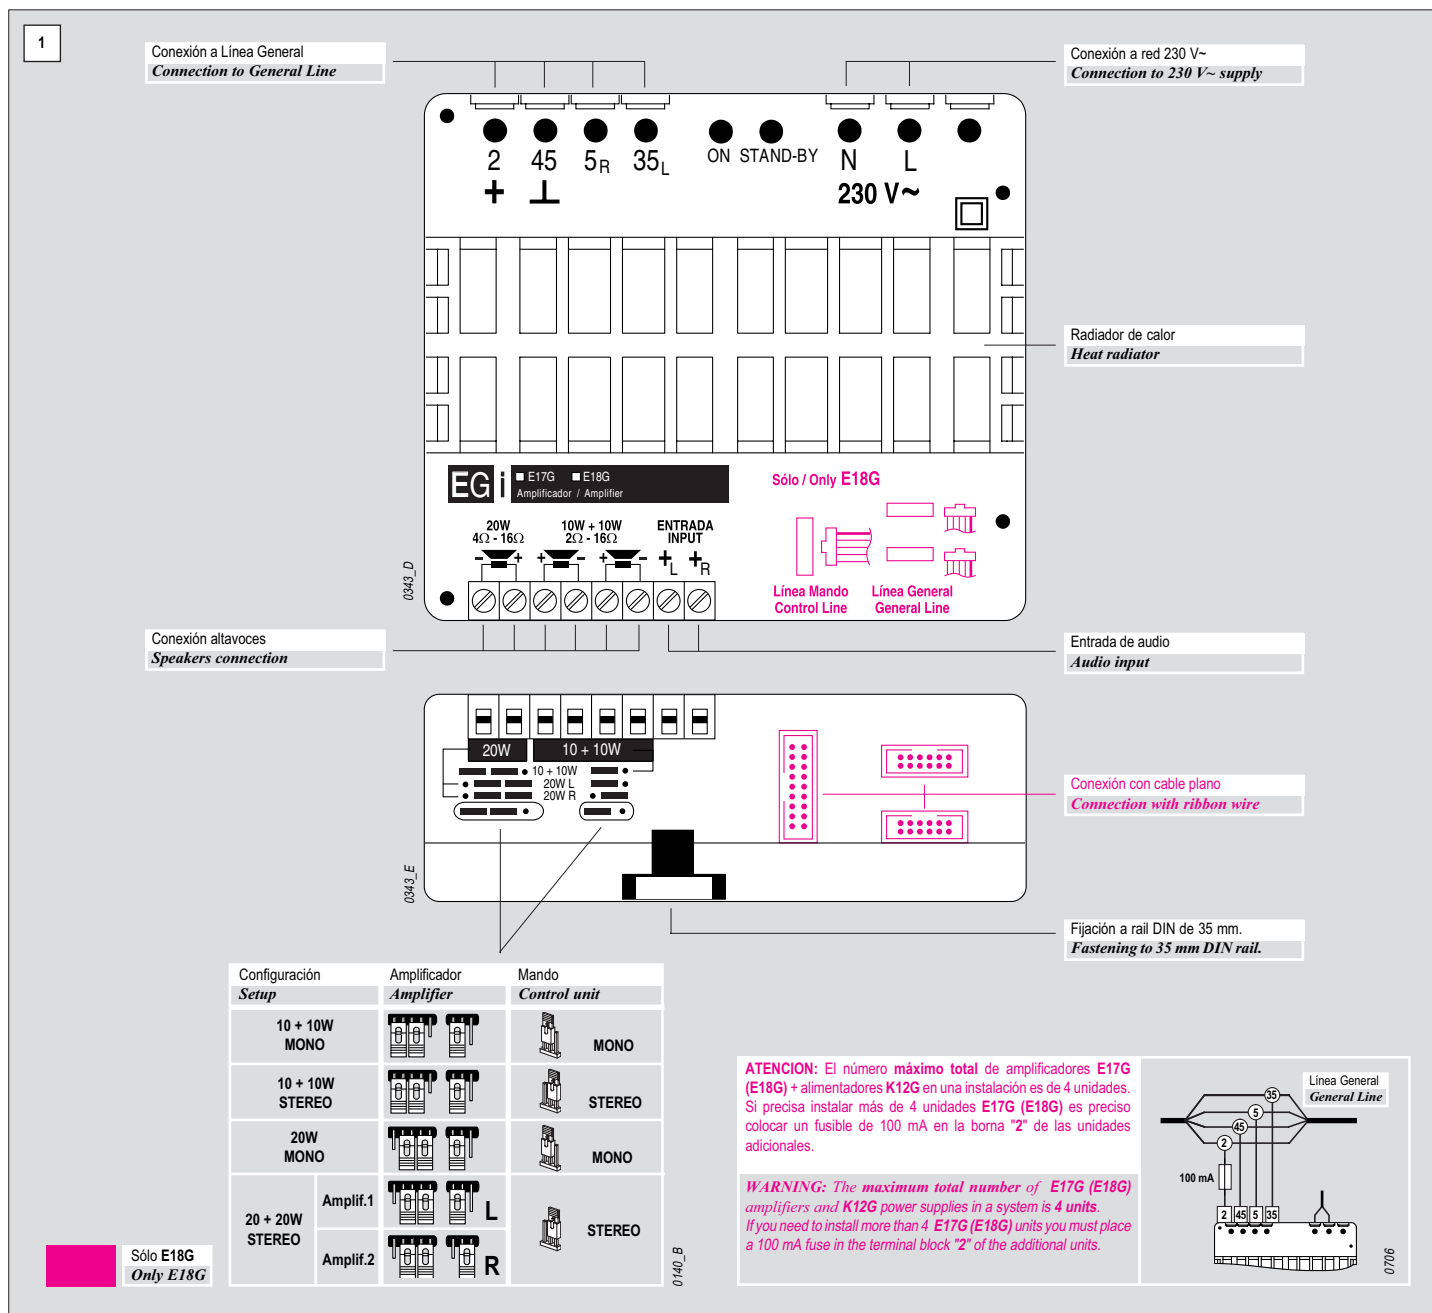
Para aumentar la potencia del sonido de una habitación hasta 20 ó 40W cuando se desee conectar Bafles, Altavoces HI-FI o muchos Altavoces. Sonido HI-FI, mono o stereo dependiendo del Mando.

Incorpora protección automática contra cortocircuitos en las salidas de alimentación y altavoces, mediante interruptor térmico de rearme automático. Se desconecta automáticamente de la red al apagar la Central.

To increase the sound power in one room to 20 or 40 W for connecting HI-FI loudspeakers or several loudspeakers. HI-FI sound, mono or stereo according to the Control unit.

This amplifier has a built-in automatic protection against short circuits at the power supply outputs and loudspeakers, by means of a self-restoring thermal switch. It is automatically disconnected from the mains when the Central is switched OFF.

E17G-CONEXION CON HILOS / STANDARD WIRES CONNECTION — E18G-CONEXION CON CABLE PLANO / RIBBON WIRE CONNECTION



ESPECIFICACIONES

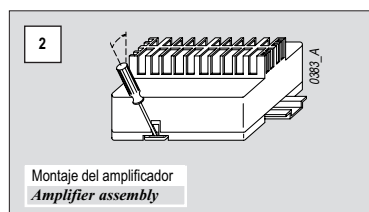
SPECIFICATIONS

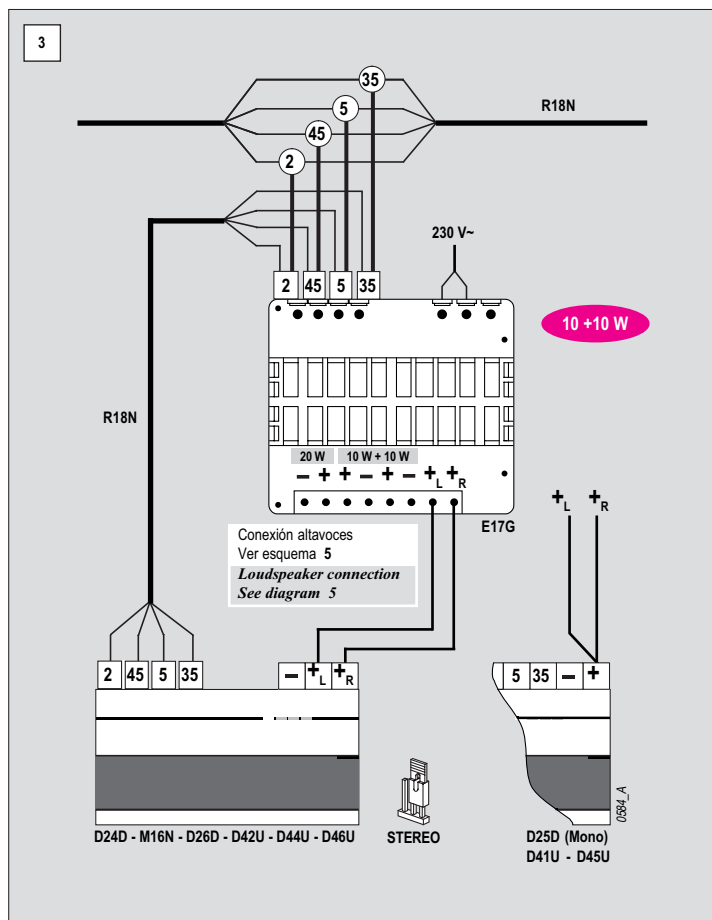
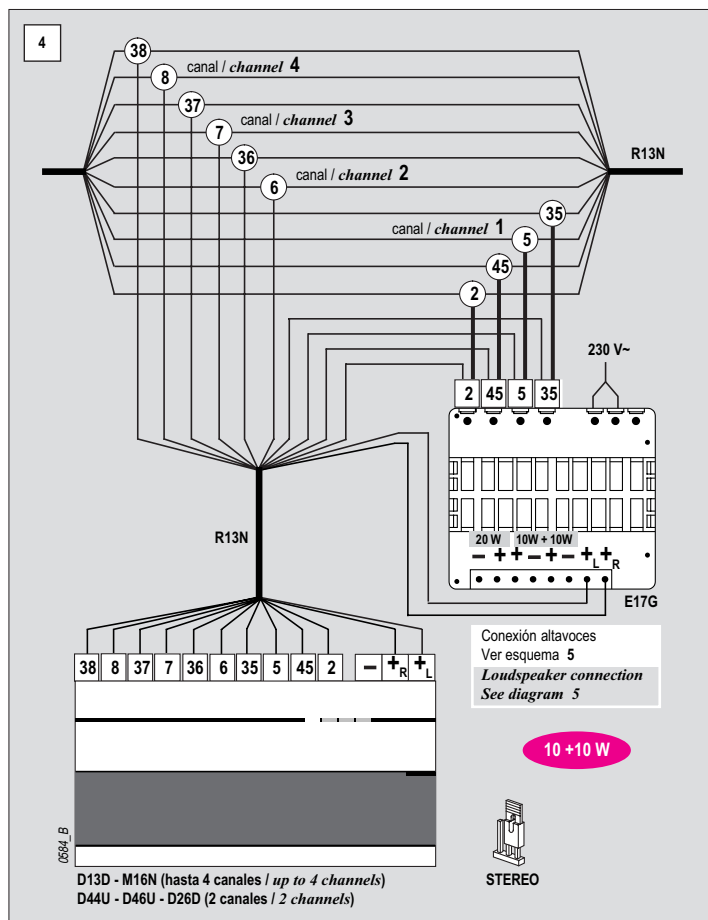
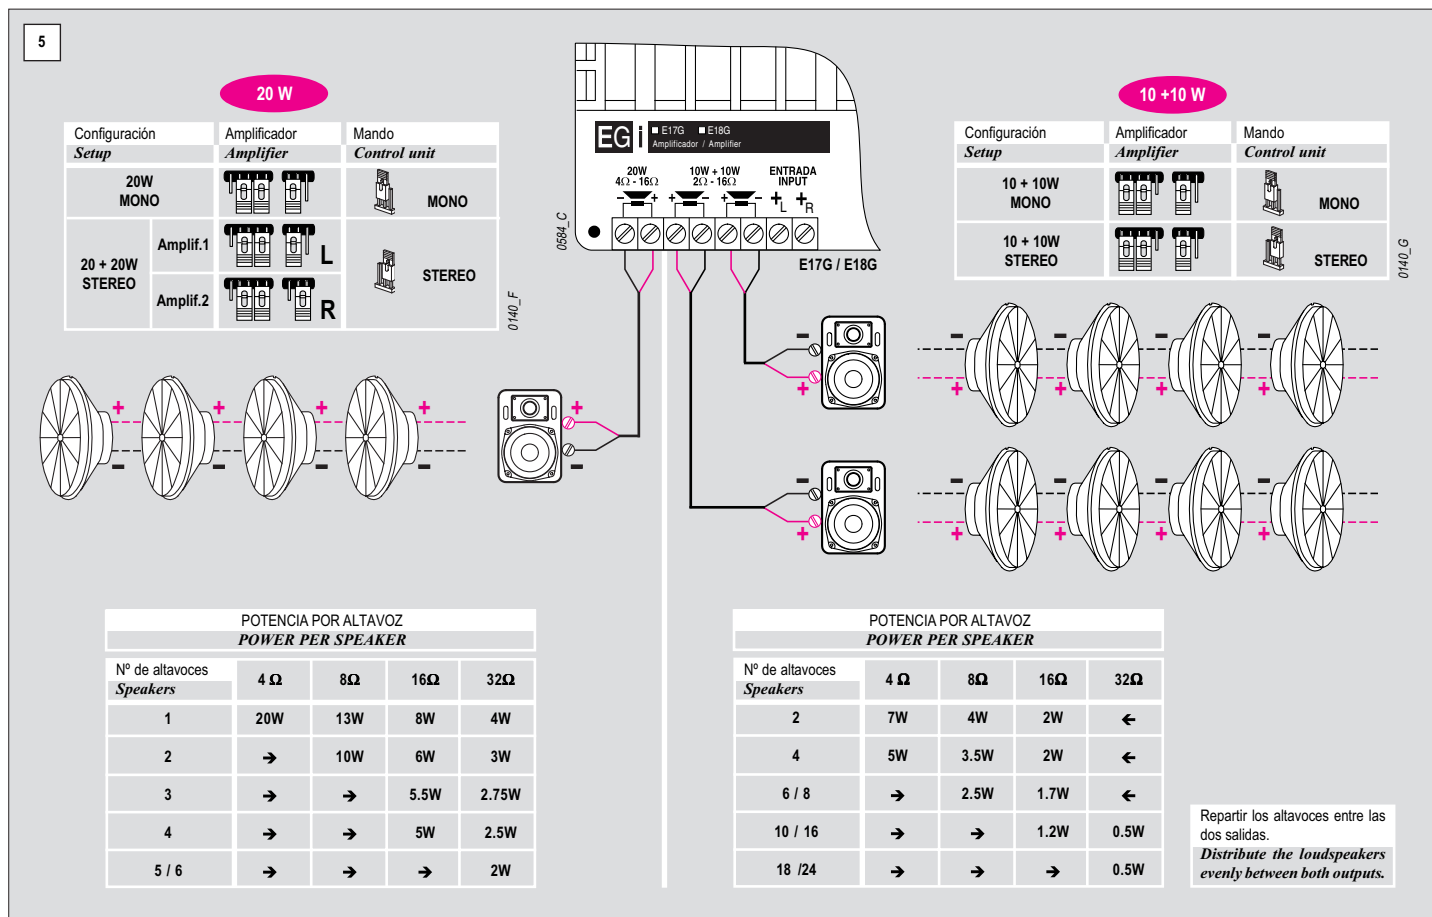
E17G

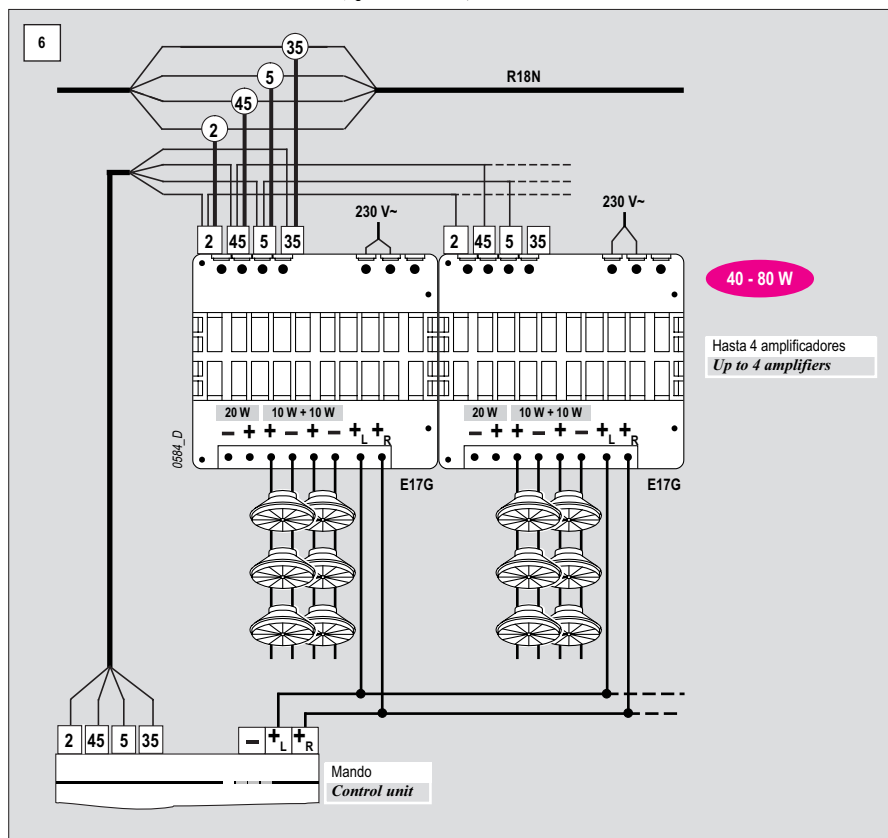
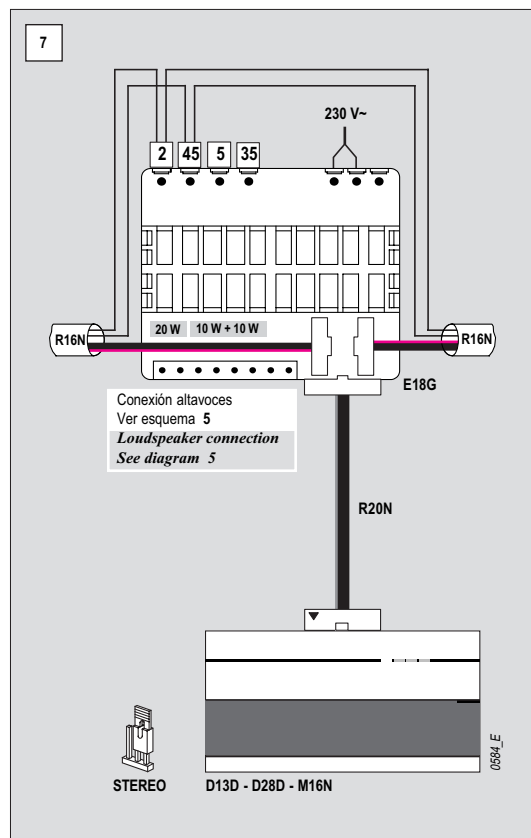
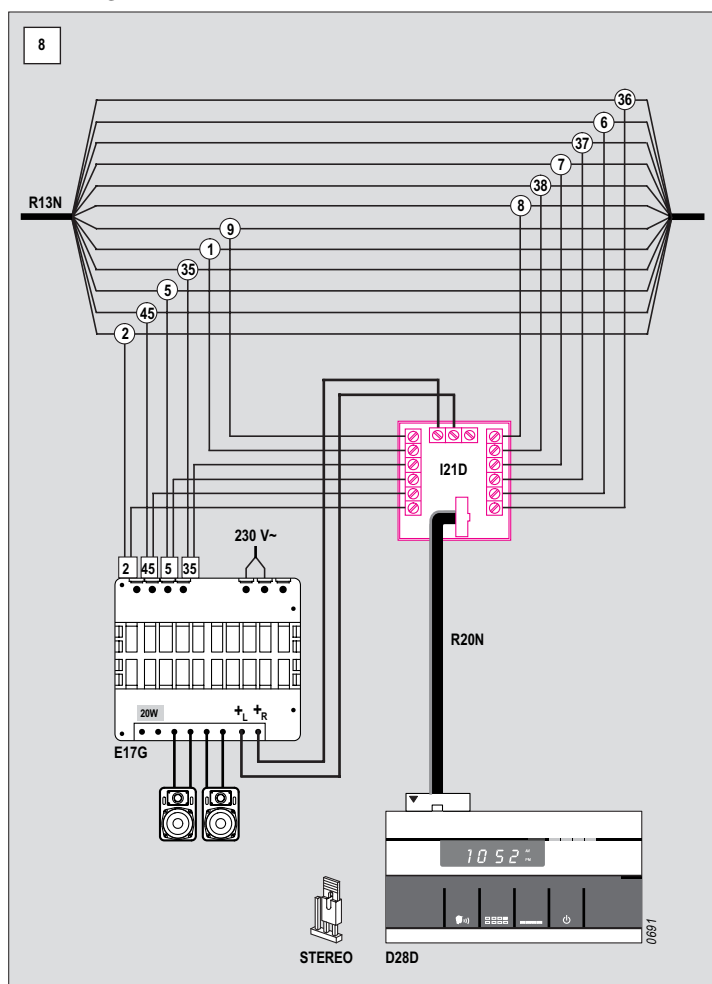
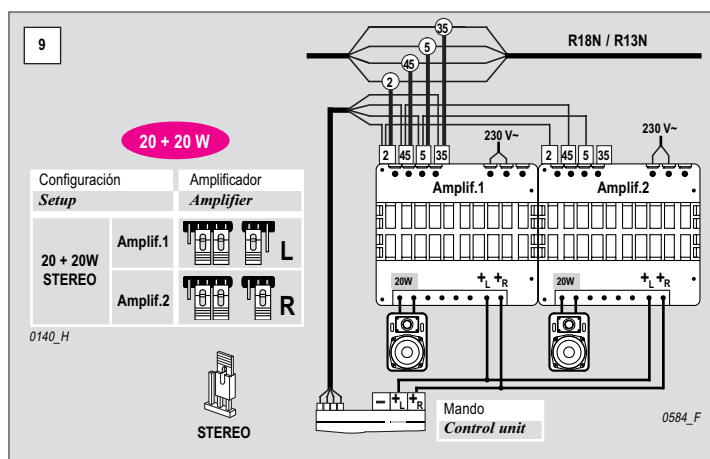
E18G

Alimentación red
Consumo
Potencia de sonido
Impedancia de altavoces
Salida de tensión continua
Nº de amplificadores por Mando

<i>Mains power supply</i>
<i>Consumption</i>
<i>Sound power</i>
<i>Speaker impedance</i>
<i>DC output</i>
<i>Nr. of amplifiers per Control unit</i>

$$\begin{array}{c} 230 \text{ V} \sim \pm 10\% \cdot 50/60 \text{ Hz} \\ \hline 2.5 \text{ VA (max. 36 VA)} \\ \hline 10 + 10\text{W (2}\Omega\text{)} \cdot 20\text{W (4}\Omega\text{)} \\ \hline 2 \cdot 16\Omega (10 + 10\text{W}) \cdot 4 \cdot 16\Omega (20\text{W}) \\ \hline 15 \text{ V} \text{--- (max. 1.5 A)} \\ \hline 4 \text{ u.} \end{array}$$


E17G 1 CANAL DE MUSICA. 10+10W
 1 MUSIC CHANNEL. 10+10W

E17G 4 CANALES DE MUSICA. CONEXION CON HILOS. 10+10W
 4 MUSIC CHANNELS. STANDARD WIRES CONNECTION. 10 + 10W

E17G / E18G CONEXION DE ALTAVOCES
 LOUDSPEAKER CONNECTION


E17G VARIOS AMPLIFICADORES (hasta 4u. / 80W)
 SEVERAL AMPLIFIERS (up to 4 u. / 80W)

E18G 4 CANALES DE MUSICA. CONEXION CON CABLE PLANO. 10+10W
 4 MUSIC CHANNELS. RIBBON WIRE CONNECTION. 10+10W

E17G CON MANDO D28D Y LINEA GENERAL DE HILOS
 WITH D28D CONTROL UNIT AND GENERAL LINE WITH STANDARD WIRES

E17G 1-4 CANALES. CONEXION CON HILOS. 20+20W STEREO
 1-4 CHANNELS. STANDARD WIRES CONNECTION. 20+20W STEREO

E18G 1-4 CANALES. CONEXION CON CABLE PLANO. 20+20W STEREO
 1-4 CHANNELS. RIBBON WIRE CONNECTION. 20+20W STEREO
