



P04i-W wind sensor

For WS1, WS1000 and KNX WS1000 Color/Style

Technical specifications and installation instructions

Part number 30137



elsner[®]
e l e k t r o n i k

Elsner Elektronik GmbH Control and Automation Technology
Sohlengrund 16
D - 75395 Ostelsheim Phone +49 (0) 70 33 / 30 945-0 info@elsner-elektronik.de
Germany Fax +49 (0) 70 33 / 30 945-20 www.elsner-elektronik.de

Technical Service: +49 (0) 70 33 / 30 945-250

1. Description

The **P04i-W wind sensor** records the wind-speed. The sensor is connected to the control system WS1 or (KNX) WS1000 Color Style via the P03/P04 data recorder.

Functions:

- **Wind measurement:** The wind strength is measured electronically and thus noiselessly and reliably, even during hail, snow and sub-zero temperatures. Even turbulent air and rising winds in the vicinity of the device are recorded
- Suitable for: WS1 Color, WS1 Style, WS1000 Color, WS1000 Style, KNX WS1000 Color, KNX WS1000 Style (each from software version 1.8). Connection via P03 data collector

1.0.1. Deliverables

- Wind sensor

1.0.2. Accessories

- P03/P04 data collector, No. 30132

1.1. Technical specifications

Housing	Plastic
Colour	White / Translucent
Assembly	Surface mount
Protection category	IP 44
Dimensions	approx. 62 x 71 x 145 (W x H x D, mm)
Weight	approx. 80 g
Ambient temperature	Operation -30...+50°C, Storage -30...+70°C
Voltage	24 V DC
Power	max. 105 mA
Wind sensor:	
Measurement range	0 m/s ... 35 m/s
Resolution	0.1 m/s
Accuracy	±15% of the measured value for an incident flow of 45°...315° (frontal incident flow corresponds to 180°)

The product is compliant with the provisions of EU guidelines.

2. Installation and commissioning

2.1. Installation notes



Installation, testing, operational start-up and troubleshooting should only be performed by an electrician.



CAUTION! **Live voltage!**

There are unprotected live components inside the device.

- National legal regulations are to be followed.
- Ensure that all lines to be assembled are free of voltage and take precautions against accidental switching on.
- Do not use the device if it is damaged.
- Take the device or system out of service and secure it against unintentional use, if it can be assumed, that risk-free operation is no longer guaranteed.

The device is only to be used for its intended purpose. Any improper modification or failure to follow the operating instructions voids any and all warranty and guarantee claims.

After unpacking the device, check it immediately for possible mechanical damage. If it has been damaged in transport, inform the supplier immediately.

The device may only be used as a fixed-site installation; that means only when assembled and after conclusion of all installation and operational start-up tasks and only in the surroundings designated for it.

Elsner Elektronik is not liable for any changes in norms and standards which may occur after publication of these operating instructions.

2.2. Installation location

Select an installation position on the building where the sensor can measure wind without hindrance. Please ensure that the extended awning is protected from the wind.

At least 60 cm of clearance must be left around the device. This facilitates correct wind speed measurement without eddies. This also prevents birds from biting it.

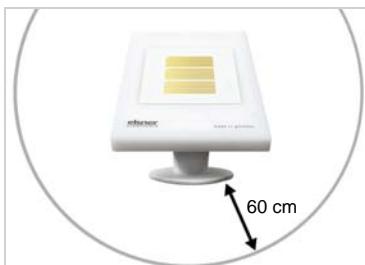


Fig. 1

There must be at least 60 cm clearance to other elements (structures, construction parts, etc.) below, to the sides and in front of the device.

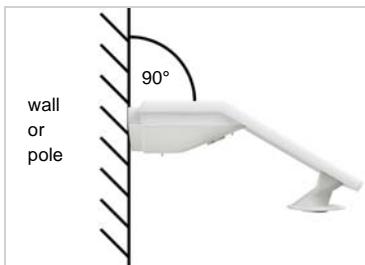


Fig. 2

The device must be attached to a vertical wall (or a pole).



Fig. 3

The device must be mounted in the horizontal (transverse) direction.

2.3. Device design



Fig. 4
1 Wind measurement



ATTENTION!

Sensitive wind sensor.

- Remove the protective transport sticker after installation.
- Do not touch the sensor on the wind measuring element (no. 1).



ATTENTION!

Even a few drops of water can damage the device electronics.

- Do not open the device if water (e.g. rain) can get into it.

2.3.1. Preparation for installation

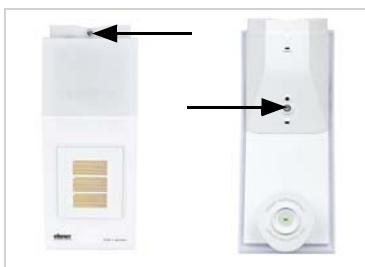


Fig. 5
Slacken both screws on the lid (top) and lower part (bottom) with a Phillips screwdriver.



Fig. 6

Pull the lid and lower part completely apart. This also releases the plug-in connection between the board in the lid and the socket in the lower part.

2.3.2. Fitting the lower part with mounting

Now, first of all, assemble the lower part of the housing with the integrated mounting for wall or pole installation.

Wall installation

Use fixing materials (dowels, screws) that are suitable for the base.

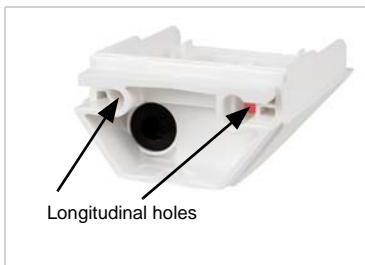



Fig. 7

The device is installed with two screws. Break off the two longitudinal holes in the lower part of the housing.



Fig. 8 a+b

- If the power lead is to be hidden when installed, it must emerge from the wall in the vicinity of the rear of the housing (marked area).*

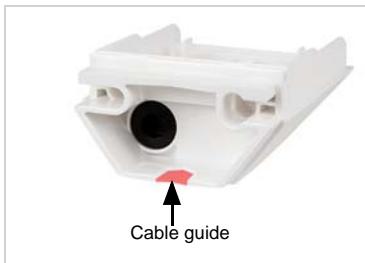

b) If the power lead is to be surface-mounted, the cable guide is broken off. The lead is then fed into the device at the underside of the housing.

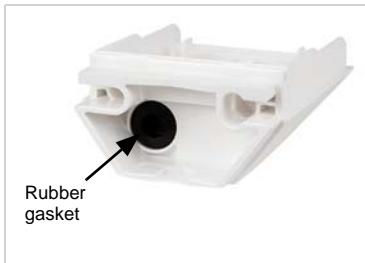


Fig. 9

Feed the power lead through the rubber gasket.

Drilling plan

ATTENTION! The printout of the data sheet does not have original size! A separate, dimensionally correct drilling plan is included ex works and this can be used as a template.

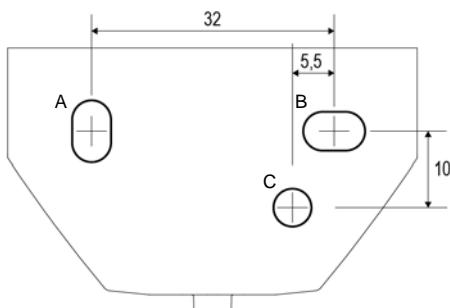


Fig. 10

Dimensions in mm. Variations are possible for technical reasons

A/B 2x longitudinal holes 8 mm x 5,5 mm

C Position of the cable outlet (rubber gasket) in the housing

Pole installation

The device is installed on the pole with the enclosed stainless steel mounting band.



Fig. 11

Feed the mounting band through the eyelets in the lower part of the housing.

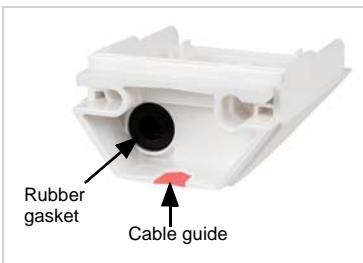


Fig. 12

Break the cable guide off.

Feed the power lead through the rubber gasket.

2.4. Connection


The connector is in the lower part of the housing.

The feed to the weather station may only be a maximum of 100 m long. The connection is made with off-the-shelf UV-resistant telephone cable (A-2Y(L)2Y 2x2x0.6 or A-2Y(L)2Y 2x2x0.8).



*Fig. 13
Connect the P03/P04 data collector
/voltage (+24 V DC/GND) to the terminals 1/2
P04i-GPS.*

*The terminal assignment is polarity-inde-
pendent*

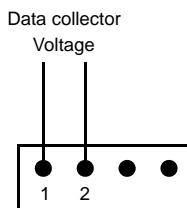

2.4.1. Closing the installation



*Fig. 14
Push the lid on the lower part. This also
makes the plug-in connection between the
board in the lid and the socket in the lower
part.*



*Fig. 15
Screw the lid (top) and lower part (bottom) to-
gether.*

2.5. Notes on mounting and commissioning

Remove all existing protection labels after installation.

The correct wind value may only be supplied about 30 seconds after the supply voltage has been connected.

**WARNING!****Risk of injury caused by components moved automatically!**

The automatic control can start system components and place people in danger.

- Always isolate the device from the mains for servicing and cleaning.

The device must regularly be checked for dirt twice a year and cleaned if necessary. In case of severe dirt, the sensor may not work properly anymore.

**ATTENTION**

The device can be damaged if water penetrates the housing.

- Do not clean with high pressure cleaners or steam jets.
