


**JUNG**

**KNX®**

## Product documentation

Room controller display Smart module  
Art. No. RCD .. 4092M..

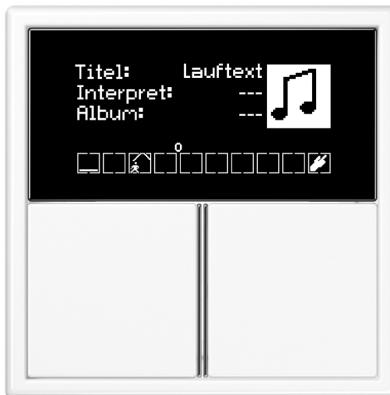

**ALBRECHT JUNG GMBH & CO. KG**  
Volmestraße 1  
58579 Schalksmühle

Telefon: +49.23 55.8 06-0  
Telefax: +49.23 55.8 06-2 04  
[kundencenter@jung.de](mailto:kundencenter@jung.de)  
[www.jung.de](http://www.jung.de)

**Service Center**  
Kupferstr. 17-19  
44532 Lünen  
Germany

Issue: 26.06.2013  
13557550

## Contents

<b>1 Product definition .....</b>	<b>4</b>
1.1 Product catalogue .....	4
1.2 Function .....	4
<b>2 Installation, electrical connection and operation .....</b>	<b>6</b>
2.1 Safety instructions .....	6
2.2 Device components .....	7
2.3 Fitting and electrical connection .....	10
2.4 Commissioning .....	14
2.5 Operation .....	16
2.5.1 Basic display .....	17
2.5.2 Second operating level .....	18
<b>3 Technical data .....</b>	<b>24</b>
<b>4 Software description .....</b>	<b>25</b>
4.1 Software specification .....	25
4.2 Software "RCS 146B11" .....	26
4.2.1 Scope of functions .....	26
4.2.2 Notes on software .....	29
4.2.3 Object table .....	30
4.2.3.1 Object table, push button sensor function section .....	30
4.2.3.2 Object table, controller function section .....	42
4.2.3.3 Display object table .....	61
4.2.4 Functional description .....	71
4.2.4.1 Push button sensor .....	71
4.2.4.1.1 Operation concept and button evaluation .....	71
4.2.4.1.2 Switching function .....	78
4.2.4.1.3 Dimming function .....	79
4.2.4.1.4 Venetian blind function .....	81
4.2.4.1.5 Value transmitter function .....	85
4.2.4.1.6 Scene extension function .....	88
4.2.4.1.7 2-channel operation function .....	89
4.2.4.1.8 Controller extension function .....	91
4.2.4.1.9 "Fan control" function .....	92
4.2.4.1.10 Function "Information button" .....	93
4.2.4.1.11 Function "page change" .....	94
4.2.4.1.12 "Controller operating mode" function .....	95
4.2.4.1.13 "Setpoint shift" function .....	96
4.2.4.1.14 Status LED .....	97
4.2.4.1.15 Disabling function .....	99
4.2.4.1.16 Transmission delay .....	103
4.2.4.1.17 Alarm signal .....	104
4.2.4.2 Room temperature controller .....	105
4.2.4.2.1 Operating modes and operating mode change-over .....	105
4.2.4.2.2 Control algorithms and calculation of command values .....	108
4.2.4.2.3 Adapting the control algorithms .....	115
4.2.4.2.4 Operating mode switchover .....	118
4.2.4.2.5 Temperature setpoints .....	127
4.2.4.2.6 Room temperature measurement .....	138
4.2.4.2.7 Command value and status output .....	141
4.2.4.2.8 Fan controller .....	149
4.2.4.2.9 Disable functions of the room temperature controller .....	156
4.2.4.2.10 Valve protection .....	157
4.2.4.3 Room temperature controller extension .....	158
4.2.4.3.1 Connection to room temperature controller .....	158

---

4.2.4.3.2	Operating functions .....	161
4.2.4.3.3	Display functions .....	163
4.2.4.3.4	Room temperature measurement .....	165
4.2.4.3.5	Behaviour after a device restart .....	166
4.2.4.4	Scene function .....	167
4.2.4.5	Display .....	170
4.2.4.5.1	Page structure and display functions .....	170
4.2.4.5.2	Symbols in the segment area .....	177
4.2.4.5.3	Info mode .....	179
4.2.4.5.4	Display control .....	180
4.2.4.6	Delivery state .....	182
4.2.5	Parameters .....	183
4.2.5.1	General parameters .....	183
4.2.5.2	Parameter for temperature measurement .....	188
4.2.5.3	Parameters on the push button sensor function section .....	190
4.2.5.3.1	Button/rocker function .....	190
4.2.5.3.2	Status LED .....	218
4.2.5.3.3	Info mode .....	222
4.2.5.3.4	Disabling function .....	224
4.2.5.3.5	Alarm signalling .....	228
4.2.5.4	Parameter for the controller function section .....	230
4.2.5.4.1	Room temperature control .....	230
4.2.5.4.2	Controller general .....	232
4.2.5.4.3	Fan controller .....	237
4.2.5.4.4	Command value and status output .....	241
4.2.5.4.5	Setpoint values .....	246
4.2.5.4.6	Controller functionality .....	255
4.2.5.4.7	Second operating level .....	257
4.2.5.5	Parameters for the display .....	259
4.2.5.6	Parameter on scene function .....	269
<b>5</b>	<b>Appendix .....</b>	<b>272</b>
5.1	Index .....	272

## 1 Product definition

### 1.1 Product catalogue

Product name: Room controller display Smart module

Use: Sensor

Design: FM (flush-mounted)

Art. No. RCD .. 4092M..

### 1.2 Function

This device combines the functions of a KNX/EIB bus coupling unit, a single-room temperature controller with setpoint specification, a push-button sensor, and a display unit in just one bus subscriber. The combination of these functions makes it possible, for example, to control the light, the blinds, and the room temperature centrally from the entry area of a room. The room temperature controller and push button sensor functions are each independent function sections of the device with their own parameter blocks in the ETS.

The device has 2 control surfaces that can be used to operate the integrated ambient temperature controller, the push-button and the display. The functions can be configured in the ETS. Optionally, the number of control surfaces can be expanded to include up to 4 additional ones by connecting an extension module to the basic unit. Configuration and commissioning of the extension module is clearly structured and easy to perform using the application program of the basic unit.

#### Push button functionality:

When a rocker or button is pressed, the device transmits telegrams to the KNX/EIB, depending on the ETS parameter settings. These can be, for instance, telegrams for switching or push button control, for dimming or for controlling blinds. It is also possible to program value transmitter functions, such as dimming value transmitters, light scene extensions, temperature value transmitters or brightness value transmitters.

In connection with a room temperature controller equipped with a 1-byte object for change-over of operating modes, the device can be used as a full-featured controller extension. The device can also be used for presence detection or for setpoint shifting purposes and to indicate different controller states.

The operation concept of an operating area can be configured in the ETS either as a rocker function or alternatively as a push button function. With the rocker function, one control surface is divided into two actuation pressure points with the same basic function. In the pushbutton function either an operating area is divided into 2 functionally separate actuation pressure points (2 buttons), or an operating area is evaluated as single-surface operation (only one button).

With the rocker function and the double-surface push-button function, the button arrangement can be set either as "vertical" (top-bottom operation) or as "horizontal" (left-right operation) for each control surface. With the rocker function it is also possible to trigger special functions using full-surface operation.

The device has two status LEDs for each control surface, which, according to the function of the rocker or button can be internally connected to the operating function. Each status LEDs can then also signal completely independent display information, operating states of room temperature controllers or indicate the results of logic value comparisons, flash or be permanently switched on or off.

#### Room temperature controller functionality:

The device can be used for single-room temperature control. Depending on the operating mode, the current temperature setpoint and on the room temperature, a command value for heating or cooling control can be sent to the KNX/EIB for the control circuit. In addition to the heating or cooling basic level, activating an additional heater and/or cooling unit means that an additional heating or cooling unit can be used. In this connection, you can set the temperature setpoint difference between the basic and the additional level by a parameter in the ETS. For major deviations between the temperature setpoint and the actual temperature, you can activate this additional level to heat up or cool down the room faster. You can assign different control algorithms to the basic and additional stages.

For heating and cooling functions, you can select continuous or switching PI or switching 2-point feedback control algorithms.

The room temperature can be recorded either by the internal or by an external temperature sensor. Combined temperature recording by both sensors can also be configured.

The controller distinguishes between different operating modes (comfort, standby, night, frost/heat protection) each with their own temperature setpoints for heating or cooling.

#### Display functionality:

The upper part of the device display (OLED) has a graphics area of 132 x 30 pixels. This can display one, two or three lines of text (time, date, temperatures, formatted and unformatted values), as well as large graphical icons (30 x 30 pixels). 30 graphic symbols are predefined in the device memory to show weather situations, the indoor or outdoor temperature, timer, shade or multimedia system, for example. The large symbols can be configured as necessary in the ETS and can also be switched via the bus using communication objects.

In addition, information texts can also be shown in the graphic area of the display. This info mode can be used to give the user help texts about how to use the control surfaces when a button is pressed on the display (intelligent nameplate).

In the bottom part of the display, there are permanently defined small symbols which display the various operating modes of the ambient temperature controller or the controller extension as well as the status of external timer channels and the information text mode.

The display possesses switchable and dimmable backlighting.

#### General:

A bus coupling unit is already permanently integrated in the device, allowing the device to be connected directly to the bus line during commissioning.

When used, an operation LED can either serve as an orientation light (also flashing), or can be activated via a separate communication object. When the device is in the programming mode, the operation LED flashes with a frequency of about 8 Hz. The same flashing rate is also used for indicating that a rocker has been actuated by a press on the full surface. In this case the LED returns to the programmed behaviour after the operation. If no or a wrong application has been loaded into the pushbutton sensor, the operation LED flashes with a frequency of about 0.75 Hz to indicate an error. The device does not then work.

## 2 Installation, electrical connection and operation

### 2.1 Safety instructions

Electrical equipment may only be installed and fitted by electrically skilled persons. The applicable accident prevention regulations must be observed.

Failure to observe the instructions may cause damage to the device and result in fire and other hazards.

Make sure during the installation that there is always sufficient insulation between the mains voltage and the bus. A minimum distance of at least 4 mm must be maintained between bus conductors and mains voltage cores.

The device may not be opened or operated outside the technical specifications.

## 2.2 Device components

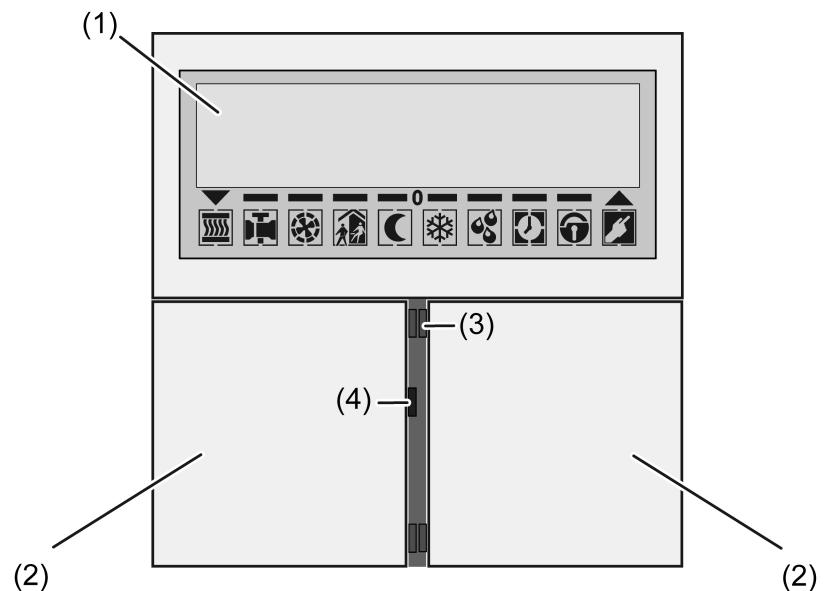


Figure 1: Device components, front side, without extension module

- (1) LED display (OLED)
- (2) Control surfaces (rockers 1...2)
- (3) Status LEDs (2 x per control surface)
- (4) Operation LED

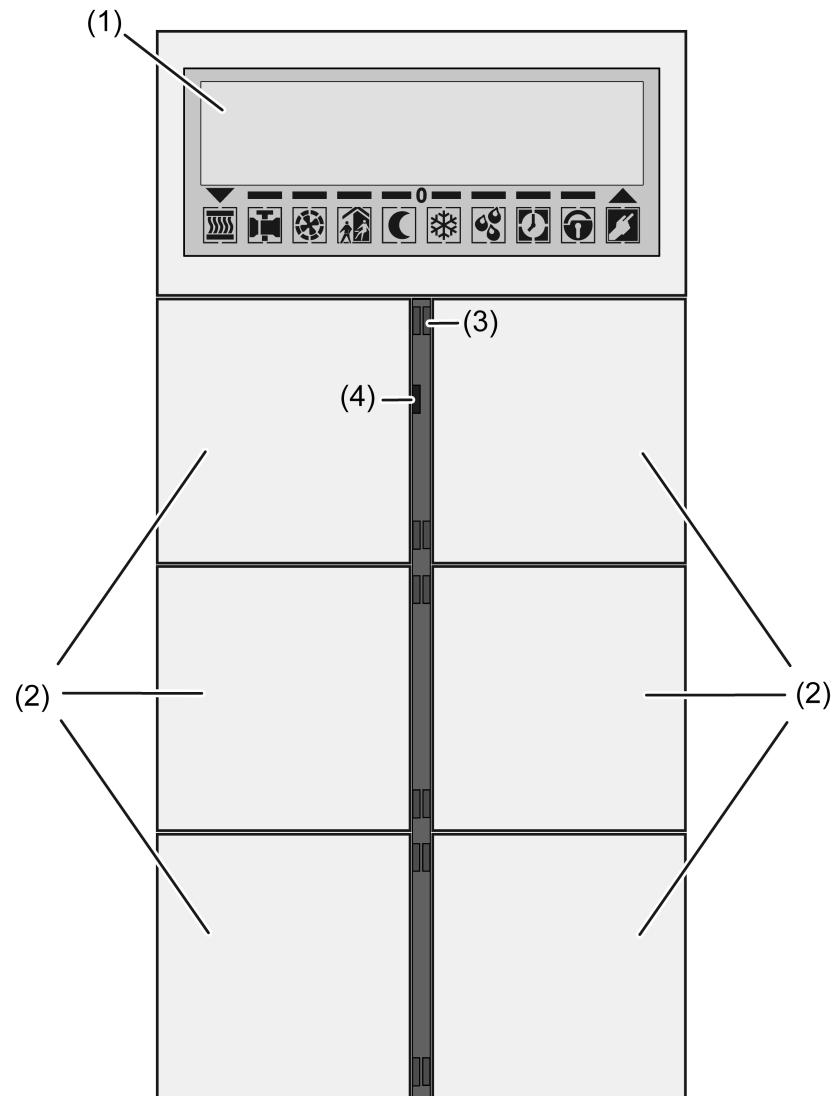


Figure 2: Device components, front side, as example with 4-gang extension module

- (1) LED display (OLED)
- (2) Control surfaces (rockers 1...6)
- (3) Status LEDs (2 x per control surface)
- (4) Operation LED

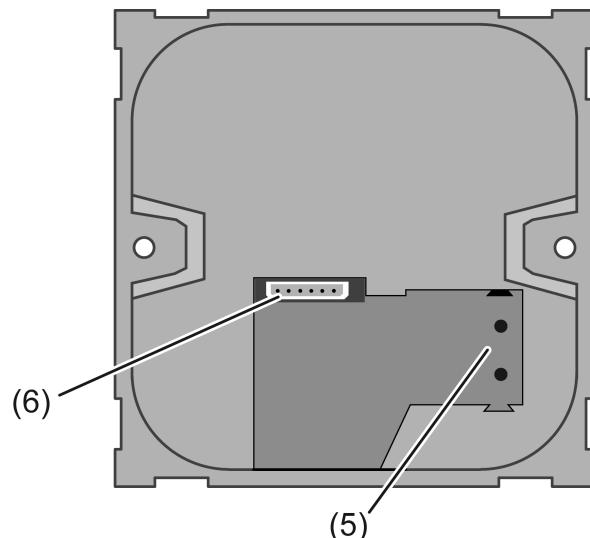


Figure 3: Device components, rear side

- (5) Connection for KNX bus cable
- (6) Connection for push-button extension module

## 2.3 Fitting and electrical connection

**DANGER!**

Electrical shock on contact with live parts in the installation environment.

Electrical shocks can be fatal.

Before working on the device, disconnect the power supply and cover up live parts in the working environment.

**DANGER!**

Danger of electrical shock!

When mounting with 230 V socket outlets under a common cover there is a danger of electrical shocks in the event of a fault!

Use only the enclosed plastic screws for fastening to the supporting frame!

**CAUTION!**

Protect the device against electrostatic discharges. Electrostatic discharges occur when the device is operated in a poor installation situation, dependent on the material characteristics of the floor, wall and device cover.

Electrostatic discharges can cause defects in the device.

Use only the enclosed plastic screws.

### Mounting and connecting the device

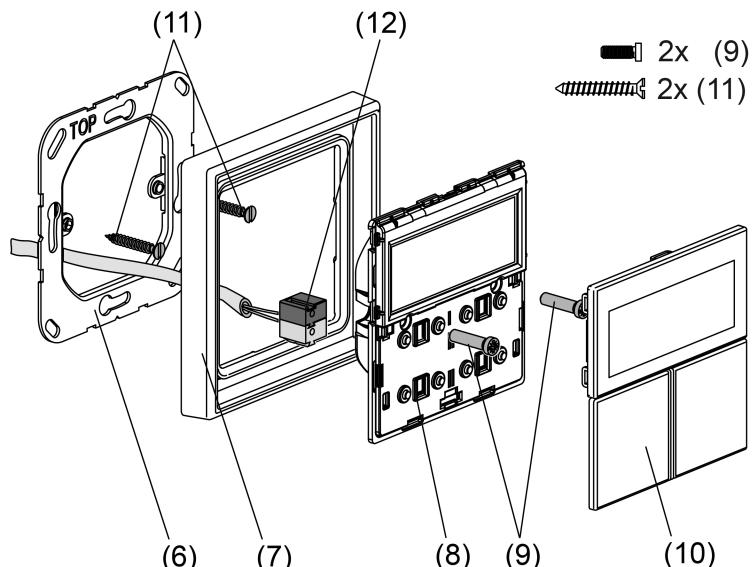


Figure 4: Fitting

- (6) Supporting frame
- (7) Design frame
- (8) Room controller module
- (9) Fastening screws (plastic)
- (10) Design control surfaces
- (11) Box screws
- (12) KNX connection terminal

- **i** Supporting frame side A for CD design ranges and FD design. Supporting frame side B for LS design ranges.
- **i** Recommended installation height: 1.50 m.
- Mount supporting frame (6) in the right orientation on an appliance box. Note marking **TOP**; marking **A** or **B** in front. Use the enclosed box screws (11).
- When mounting on only one flush-mounted box, the screws (9) must be countersunk into the wall, e.g. with a dia. 6 x10 mm hole. Use the supporting frame as template.
- Position the decorative frame (7) on the supporting frame.
- Connect the room controller module (8) with KNX connection terminal (12), which is connected to the KNX bus line, to the rear side of the module. Run the connection cable downwards from the room controller module and then into the accessory socket from the rear.
- Push the room controller module onto the supporting frame.
- Fasten the room controller module to the supporting frame using the enclosed screws (9 + 11) (protection against dismantling or theft). Tighten the screws only lightly.
- Before mounting the control surfaces (10), load the physical address into the device.

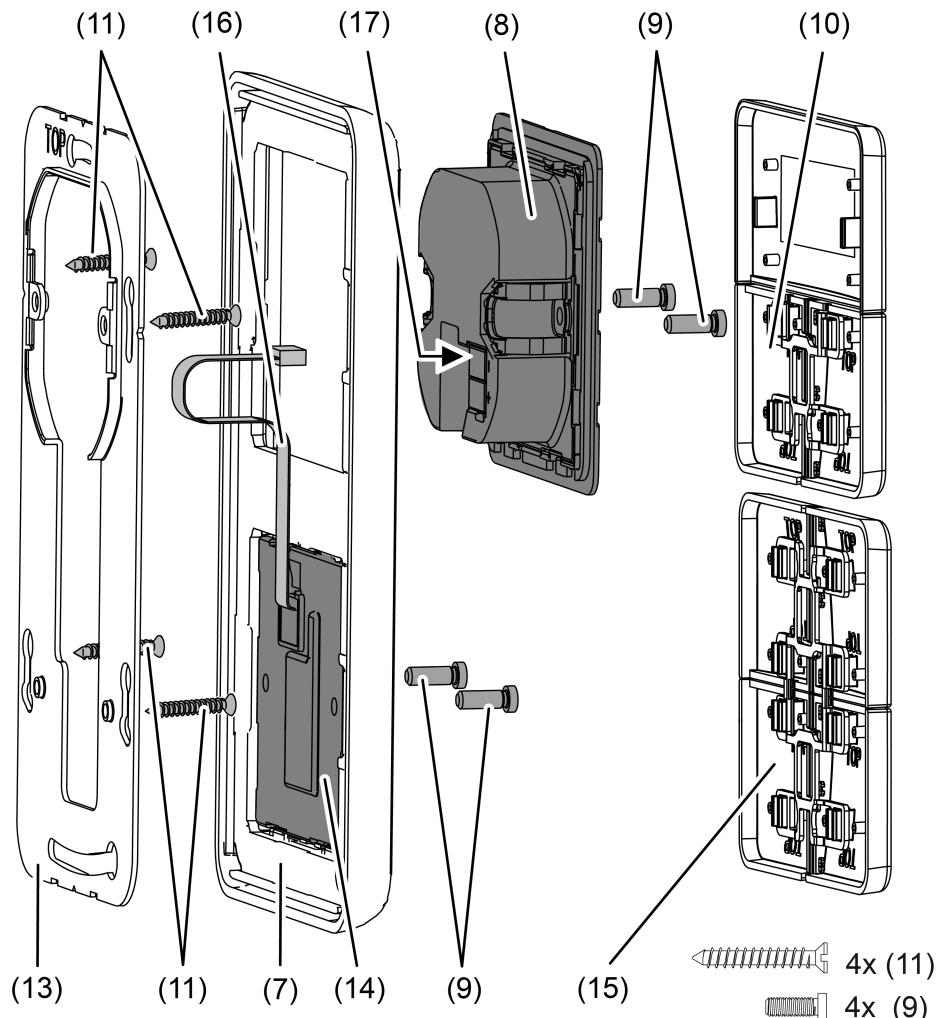
**Fitting and connecting the room controller module with push-button extension module**

Figure 5: Assembling the push-button extension module

(7) Design frame (here: 2-gang)

- (8) Room controller module
- (9) Fastening screws (plastic)
- (10) Design control surfaces for the room controller module
- (11) Box screws
- (13) Large supporting frame for combined mounting of room controller module and extension module
- (14) Push-button extension module
- (15) Design control surfaces for the extension module
- (16) Connecting cable for push-button extension module with plug
- (17) Connection point in room controller module for connecting cable of the extension module

- i** Supporting frame side A for CD design ranges and FD design. Supporting frame side B for LS design ranges.
- i** Recommended installation height for the room controller module: 1.50 m.

A push-button extension module can be connected to each room controller module. When mounting the extension module, the large supporting frame (13) must be fitted. The large supporting frame is contained in the scope of supply of the pushbutton sensor expansion module.

Mount the room controller module with the KNX bus connection in the appliance box and countersink the fastening screws of the extension module in the wall, for example using dia. 6 x 10 mm boreholes. The large supporting frame can be used as a template for this.

- Mount the large supporting frame in the right orientation on an appliance box. Note marking **TOP**; marking "A" or "B" in front. Use the enclosed box screws (11).
- Position the decorative frame (7) on the supporting frame.
- Mount the push-button extension module (14) in the large supporting frame. Route connecting cable (16) between supporting frame and intermediate web.
- With the plug of the connecting cable in the right orientation, insert it into the connection point in the room controller module (17). When doing so, ensure that the connecting cable is not pinched.
- Connect the room controller module (8) with KNX connection terminal, which is connected to the KNX bus line, on the rear side of the module. Run the connection cable downwards from the room controller module and then into the accessory socket from the rear.
- Push the room controller module onto the supporting frame.
- Fasten module to supporting frame using the enclosed plastic screws (9). Tighten the plastic screws only lightly.
- Mount the control surfaces on the push-button extension module (15). Before mounting the control surfaces to the room controller module (10), load the physical address into the device.



## 2.4 Commissioning

After the device has been connected to the bus and mounted on the wall, it can be put into operation. The commissioning is essentially confined to the programming of the actuator via the ETS.

### Assignment of the physical address



#### DANGER!

**Electrical shock on contact with live parts in the installation environment.**

**Electrical shocks can be fatal.**

**Before working on the device, disconnect the power supply and cover up live parts in the working environment.**

The device has an integrated bus coupling unit. It has no separate programming button or LED. Programming mode is activated by a defined and time-delayed press on the first rocker and signalled by the operation LED. To program the physical address, the decorative operating areas must not be in placed on the device.

The physical address is programmed as described below...

The device must have been connected and ready for use.

The Design control surfaces must not be mounted yet.

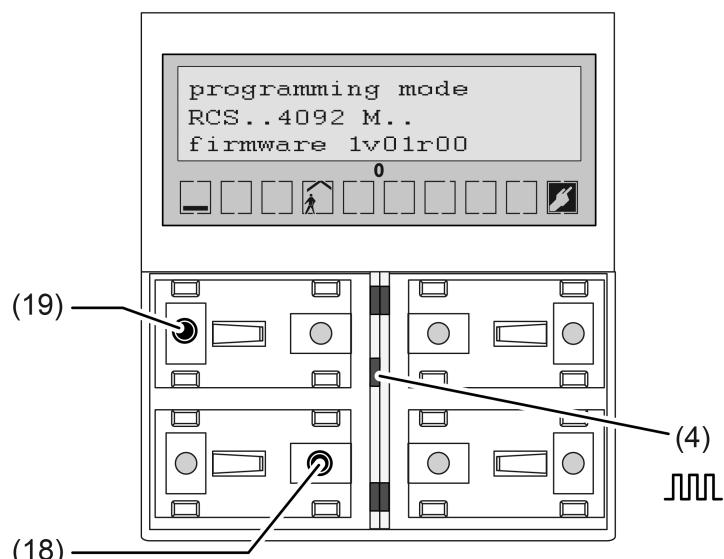


Figure 7: Buttons for activating Programming mode

- Activate Programming mode. Press button at the top left of rocker 1 (19) and keep it depressed (figure 7). Then press the second button at the bottom right of rocker 1 (18). Programming mode is activated. The operation LED (4) flashes quickly (approx. 8 Hz). The text "Programming mode" is shown in the display of the device along with the device type and the version of the device firmware.
  - Use suitable objects to push the buttons (e.g. thin screwdriver, tip of a ballpoint pen, etc.)
  - To exclude any inadvertent activation of Programming mode during a 'normal' use of the control surface in later operation, the time between the first and the second button actuation must be at least 200 ms. Pressing both buttons simultaneously (time between first and second actuation < 200 ms) will not result in an activation of Programming mode.

- i** It should be noted that the operation LED also flashes quickly in the case of a full-surface operation of rocker 1 (see functional description). The difference from quick flashing in programming mode is that with a full-surface operation the rocker of the LED returns to the parameterized basic state when the buttons are released. In Programming mode, the flashing rate remains the same until the mode is ended. The state of the LED defined by Programming mode will always prevail.
- Program the physical address with the help of the ETS.  
The operation LED switches back to the previous status (off, on or flashing slowly).
- i** If Programming mode is to be activated or deactivated in a device which is already programmed with a valid application, there is the possibility that telegrams will be transmitted to the bus at the time the button is pressed. The telegram transmitted depends on the button function programmed.

### Programming the application

The application must then be programmed into the device with the help of the ETS. The ETS3 detects automatically whether a valid application has already been programmed into the device. To reduce the programming time, the ETS3 downloads the whole application only if the device was programmed beforehand with another application or with no application at all. In all other cases, the ETS makes a time-optimised partial download in which only the modified data is loaded into the device. For device commissioning, ETS3 of Version f or higher or ETS4 is required.

During the ETS programming operation of the application program, the device shows various items of information in the display. Line 1 contains the message "Download active". Line 2 displays the device type and line 3 shows the current version number of the firmware.

## 2.5 Operation

The device consists of two mechanically-separated control surfaces, which can be optionally extended to up to 6 control surfaces through the connection of an extension module (20). The control surfaces are the design covers attached to the device with push button elements underneath (figure 8).



Figure 8: Arrangement of the control surfaces on the front of the device  
Left: basic device, right: with extension module (here 4-way)

The control surfaces are allocated to the pushbutton sensor function. The function of these rockers can also be configured in the ETS to any desired pushbutton sensor function (switching, dimming, shutter ...). Alternatively it is possible to set operation of the integrated room temperature controller and the display unit. It is also possible to activate and operate the second display operating level through button evaluation of the two control surfaces beneath the display (rockers 1 & 2).

The push button sensor function is an independent function section of the device with its own parameter blocks in the ETS. Insofar as the control surfaces are to operate the integrated room temperature controller, the following functions can be parameterised in the pushbutton configuration: setpoint shift, presence button, operating mode change-over, fan control. For a more detailed description of the operating functions, please see Chapter 4. of this documentation.

The operation concept of an operating area can be configured in the ETS either as a rocker function or alternatively as a push button function. With the rocker function, one control surface is divided into two actuation pressure points with the same basic function. In the push button function either a control surface is divided into 2 functionally separate actuation pressure points (2 buttons), or a control surface is evaluated as single-surface operation (only one large button). If a control surface is used as a single rocker function, then it is also possible to trigger special functions using full-surface operation.

With the rocker function and the double-surface push-button function, the button arrangement can be set either as "vertical" or as "horizontal" for each control surface. The variable specification of the button arrangement does not, however, apply to operation of the second display operating level via rockers 1 & 2. There the button arrangement is fixed.

Optionally, the number of control surfaces can be expanded to include up to 4 additional ones by connecting an extension module to the room controller module. The configuration and commissioning of the extension module are clearly structured and easy to perform using the application program of the room controller module. The control surfaces of the extension module can be set in the ETS to any desired pushbutton sensor function, or also to controller operation.

The red Status LEDs are located between the control surfaces, 2 for each rocker. These status LEDs can be internally connected to the operating function according to the function of the rocker or pushbuttons, thus indicating the operating status directly. They may, however, also be used for signalling completely independent functions or be permanently on or off.

The blue operation LED can also signal the switching state of its own object, flash or be permanently on or off. Besides functions that can be set using the ETS, the operation LED also indicates that the device is in the programming mode for commissioning or diagnosis purposes.

### 2.5.1 Basic display

During device operation, the basic display of the display can show up to four different display functions. This means that it is possible to display the time, the setpoint temperature, the actual temperature (room temperature) or the outdoor temperature (figure 9). The information is shown separately on the display. It is possible to change over between the information automatically after set times or in a controlled manner by pressing a button on the device. These properties, and the actually visible display information, are configured in the ETS before the device is commissioned (see page 170).

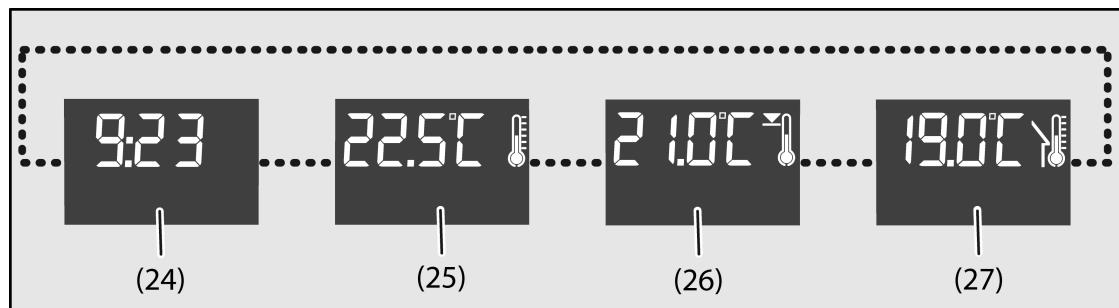


Figure 9: Possible display information of the basic display

- (24) Time display (with flashing seconds mark ":")
- (25) Actual temperature display (room temperature)
- (26) Setpoint temperature display
- (27) Outdoor temperature display

- i** The temperatures can be displayed in °C or alternately in °F. The display format can be configured in common for all temperature values in the ETS.

## 2.5.2 Second operating level

The second operating level makes it possible to make various basic settings on the unit locally without using the ETS. In order to avoid the unintentional disruption of essential functions, access to individual settings or to the entire second operating level can be prevented via the parameterisation in the ETS. An active button disable can also block access to the second operating level.

### Calling up the second operating level

The second operating level is called up by pressing buttons 1 and 3 on the device simultaneously (figure 10). It must be ensured here that the control surfaces are pressed at the upper left corner in order to be independent of the configured button arrangement.

The device leaves the second operating level again when buttons 1 and 3 are pressed again simultaneously. Depending on the setting of the ETS parameter "Save changes after manual exit?" all settings that have been made are saved or discarded in this case. The parameters "Automatic exit of the second operating level", "Time until automatic exit" and "Save changes?" define whether the device terminates the second operating level automatically if no entries are made, and whether in this case all of the changed settings are saved or discarded (see "Exiting the second operating level").

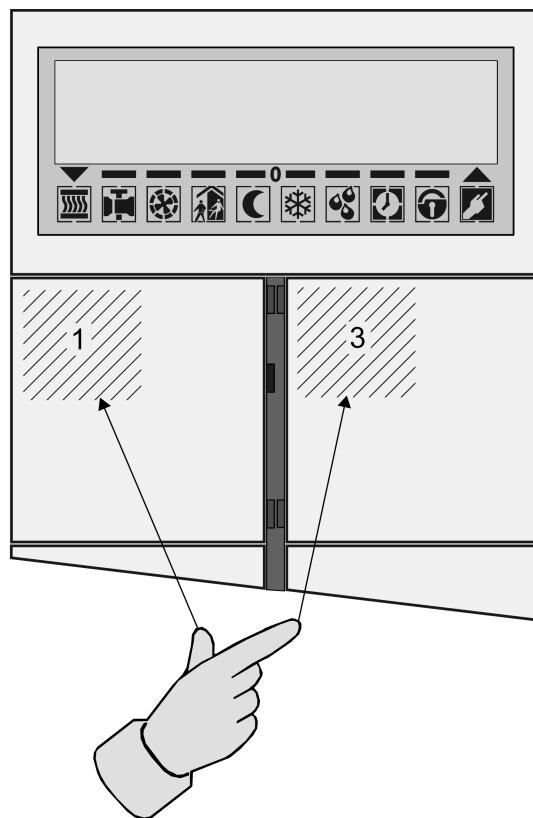


Figure 10: Button combination to call up the second operating level

### Operation in the second operating level

The settings in the second operating level are organised in a ring-shaped menu. This is shown in the display. Selection and settings are performed using the 1...4 buttons of the device (figure 11). Within the second operating level the button arrangement of the control surfaces is preset to "top / bottom" independently of the ETS configuration, and cannot be changed. Moreover, buttons 1...4 are always available for operation of the second operating level, independently of any single-surface operation configured in the ETS.

The four buttons have the following functions...

- Button 1: + The current setting is switched or the displayed value is increased.
- Button 2: - The current setting is switched or the displayed value is decreased.
- Button 3: ✓ Jump to the selected submenu, confirmation of the set value and jump back to the main menu.
- Button 4: ▼ Next entry. If the end of the list has been reached, the system switches to the first menu item.

**i** Continuous adjustment of the value settings is possible if buttons 1 or 2 are held in the depressed position.

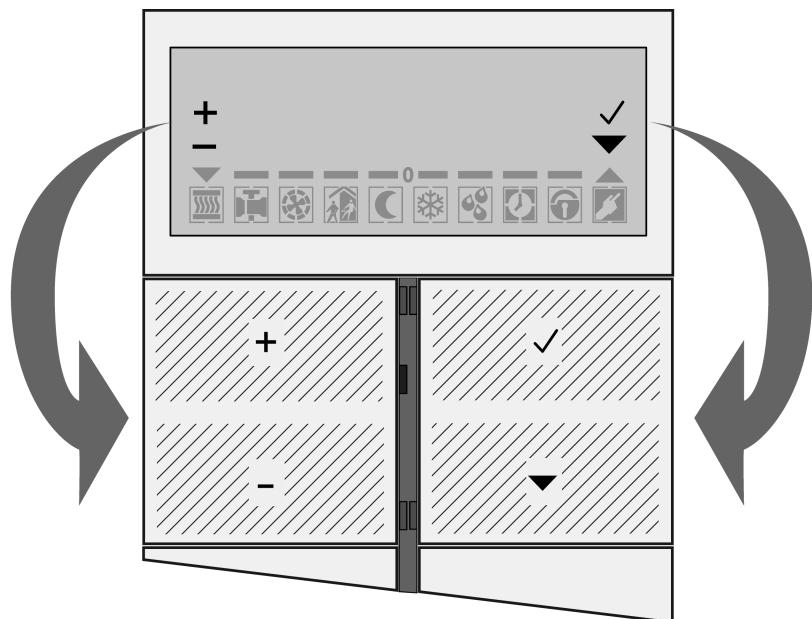


Figure 11: Button assignment for operation in the second operating level

Configuration in the ETS offers various options for influencing the entries that are visible and changeable in the menu...

1. If entries are configured via parameterisation as "hidden", they do not appear in the menu. This setting is performed in the ETS separately for various menu entries in the parameter node "General -> Second operating level". Some entries are always visible and can thus not be configured as invisible in the ETS. When the device functions as a controller extension, controller settings (setpoint temperatures, setpoint shifting, operating mode, fan control) are fundamentally not accessible in the second operating level.
2. The setpoint temperatures of the continuous controller can either be changeable, or can alternatively only show the current value and thus not be editable. This setting is performed in the ETS in the parameter node "Room temperature control -> Second operating level".

The menu entry that is shown as the first entry when the second operating level is called up can be selected in the ETS using the parameter "First menu item in second operating level". The sequence of the subsequent entries is then fixed as shown below. The following menu functions can be called up in the second operating level, if not explicitly disabled in the ETS.

Display function of a KNX alarm control centre (Menu "Alarm control centre")

In the "Alarm control centre", the room controller module can display message texts from a KNX alarm control centre. For this, the communication object "Alarm control centre selection" transmits a 1-bit telegram to the alarm control centre with a defined polarity. The alarm control centre then sends three telegrams with the 14-byte communication objects "Alarm control centre Line 1" to "Alarm control centre Line 3" back to the room controller module. These texts are then shown in the display. If no texts are received, the display shows "---".

In this submenu, the buttons have the following functions:

+/-: Without function, hidden.

√: Jump back to the main menu.

▼: Requirement of the next messages.

**i** Refer to the documentation of the KNX alarm control centre for further information on the control of the message texts.

Setting the information mode ("Information mode" menu)

In the "Information mode" submenu, the room control module shows the current status of the button help function of the device. In addition, the information mode can be switched on and off at this point.

In this submenu, the buttons have the following functions:

+/-: Change-over between "One-touch operation", "Double-touch operation" and "OFF".

√: Confirm and jump back to the main menu.

▼: without function, hidden.

Setting the controller setpoint temperatures (menu "continuous controller")

The "Continuous controller" submenu contains multiple entries, which can be blocked individually for editing purposes during parameterisation. If an entry can be set, the appropriate value flashes. If an entry is blocked, the appropriate value does not flash. In addition, individual setpoint temperatures are visible or invisible, depending on the set controller operating mode.

The submenu items have the following meaning...

- "Comfort mode": Setting the basic setpoint.
- "Heating standby": Setting the temperature reduction for standby mode in heating operation.
- "Cooling standby": Setting the temperature increase for standby mode in cooling operation.
- "Heating night red.": Setting the temperature reduction for night mode in heating operation.
- "Cooling night inc.": Setting the temperature increase for standby mode in heating operation.
- "Heat protection": Setting the setpoint temperature for heat protection.
- "Frost protection": Setting the setpoint temperature for frost protection.
- "Cooling operation max. limit value": Setting the limit value for the setpoint temperature limit (only visible with enabled function).
- "Cooling operation max. difference": Setting the maximum difference to the outdoor temperature for the setpoint temperature limit (only visible with enabled function).

In this submenu, the buttons have the following functions:

+/-: Setting of the appropriate values.

√: Confirm and jump back to the main menu.

▼: Selection of the submenu items.

Setting of the presence mode ("Presence" menu)

In the "Presence" submenu, the room control module displays the current status. The setting acts like the actuation of the presence button.

**i** The comfort extension cannot be activated using the presence function in the second operating level if the frost/heat protection has been activated via the window status!

**i** In the second operating level, presence mode and operating mode (see "Setting the operating mode" below) may never be changed at the same time before a "save" command. Otherwise the presence status is always reset, and thus the manual setting may not be applied. If the controller operating mode and the presence mode have to be changed, first the operating mode has to be changed and the setting has to be saved. Only after that is it possible to change the presence mode and save this setting by calling up the second operating level again.

In this submenu, the buttons have the following functions:

+/-: Switch between "Presence mode switched on" and "Presence mode switched off".

√: Confirm and jump back to the main menu.

▼: without function, hidden.

#### Setting the setpoint shift ("Setpoint shift" menu)

In the "Setpoint shift" submenu, the stepped adjustment of the shift of the basic setpoint can be influenced. For this, the device shows the numeric value of the offset in Kelvin (K) in the third line and, below that, the bar chart "---- 0 ----".

The step width of the shift depends on the ETS parameter

"Increment of the 4-level setpoint shift" in the parameter branch "Room temperature controller -> Controller general -> Setpoints".

In this submenu, the buttons have the following functions:

+/-: Adjustment of the shift in a positive or negative direction.

√: Confirm and jump back to the main menu.

▼: without function, hidden.

**i** A setpoint shift cannot be saved when the second operating level is exited if the frost/heat protection is activated in the controller! In this case the settings of the setpoint shift in the second operating level are lost.

#### Setting the operating mode ("Operating mode" menu)

In the "Operating mode" submenu, it is possible to display and change the current controller operating mode.

In this submenu, the buttons have the following functions:

+/-: Switch of the operating mode between "Comfort", "Standby", "Night" and "Frost/heat protection".

√: Confirm and jump back to the main menu.

▼: without function, hidden.

It should be noted that a set operating mode with a low priority cannot be activated immediately when the second operating level is exited if an operating mode with a higher priority (e.g. frost protection via window status) has been specified by the controller. The operating mode set in the second operating level is only accepted by the controller when the operating mode with a higher priority has been terminated and in the meantime no other operating mode specification with a higher priority has been performed (e.g. via operation of a pushbutton sensor or via communication objects).

#### Fan control ("Fan intens. levels" menu)

In the "Fan intens. levels" menu, it is possible to influence the fan operating mode (automatic / manual operation) of the fan controller. In manual mode, it is possible to change over the fan level independently of the controller command values.

In fan control in the second operating level the fan level and automatic mode can be set directly without taking into account the specific settings of the fan controller (Parameter "Fan level on change-over to manual", the switch-on level or fan run-on times).

The menu item "Fan levels" is only visible if the fan control is also enabled in the controller for the ETS.

In this submenu, the buttons have the following functions:

+/-: Switch between "Automatic operation", "OFF", "Manual: level 1", ... "Manual: level 8". The selection of the manual levels is dependent upon the configured number of levels.

√: Confirm and jump back to the main menu.

▼: without function, hidden.

#### Display of device information ("Device information" menu)

The "Device information" menu displays information on the device hardware and the loaded firmware. No settings can be changed here.

In this submenu, the buttons have the following functions:

+/-: Without function, hidden.

√: Confirm and jump back to the main menu.

▼: Switch to the next information entry.

#### Display settings ("Display" menu)

In the "Display" submenu, LED display settings can be made. The following menu items can be selected...

- "Brightness": Setting of the maximum display brightness in three levels. Changes to values become visible immediately.  
The set value is used when the LED display is switched using a button-press, the Night mode of the ambient temperature controller or the 1-bit object are switched on. The 1-byte value object for the brightness of the display permanently overwrites the value set here.
- "Pixel test": If this setting is chosen, all the pixels and symbols of the display are switched on for 2 seconds. Then the device returns automatically to the main menu.

In this submenu, the buttons have the following functions:

+/-: Setting of the appropriate values.

√: Confirm and jump back to the main menu.

▼: Switch between the setting options.

#### Exiting the second operating level by pressing Save ("Save" menu)

If this item in the main menu is selected, the second operating level can be exited with a "save" command (see "Exiting the second operating level").

The buttons then have the following functions:

+/-: Without function, hidden.

√: Confirmation and exiting of the second operating level.

▼: Switch further in the main menu.

#### Exiting the second level without saving: ("aborting" menu)

If this item in the main menu is selected, the second operating level can be exited without a "save" command being executed (see "Exiting the second operating level").

The buttons then have the following functions:

+/-: Without function, hidden.

√: Cancel. As a result, exit of the second operating level.

▼: Switch further in the main menu.

**i** All menu entries are displayed or not depending on the configuration of the ETS. If, for example, the controller is parameterised only for heating, no setpoints for cooling can be displayed or set in the menu. When the device functions as a controller extension, controller settings (setpoint temperatures, setpoint shifting, operating mode, fan control) are fundamentally not accessible in the second operating level.  
If an entry has been parameterised as the first menu item in the ETS that is not accessible at all due to the other settings, the first possible entry is displayed according to the defined menu sequence (see above).

- i** When a menu entry is shown on the display, the setting currently valid in the controller is identified using the display value if the setting has not already been changed previously in the second operating level. If the setting has already been changed and not yet accepted validly (see "Exiting the second operating level"), the last manual setting will be shown on the display, and not the real state of the controller.

### **Exiting the second operating level**

Settings that have been made in the second operating level are only accepted validly in the device when the operating level is exited with a "Save" command. It is possible to discard settings by exiting the second operating level without a "Save" process. When exiting the second operating level, a distinction is made among the following cases...

- Exiting by means of button combination: The second operating level is exited by pressing buttons 1 and 3 on the device simultaneously (figure 10). Here the parameter "Save changes after manual exiting?" defines whether the settings are saved or not when the second operating level is exited using the button combination.
- Automatic exiting: Automatic exiting of the second operating level can optionally be configured in the ETS using the parameter of the same name in the parameter branch "General -> Second operating level". In this case the device leaves the second operating level when no additional operation takes place after the last push-button operation within the "Time until automatic exit" configured in the ETS. With automatic exiting it is also possible to define with the parameter "Save changes after automatic exiting?" whether the settings are saved or not.
- Exiting through "Save": The second operating level can be exited by confirming the main menu item "Save". All settings are always saved in this case!
- Exiting through "Cancel": The second operating level can be exited by confirming the main menu item "Cancel". In this case the settings are not saved and are discarded!

### 3 Technical data

**General**

Protection class	III
Mark of approval	KNX
Ambient temperature	-5 ... +45 °C
Storage/transport temperature	-25 ... +70 °C

**KNX/EIB supply**

KNX medium	TP 1
Commissioning mode	S-mode
Rated voltage KNX	DC 21 ... 32 V SELV
Current consumption KNX	max. 20 mA
Connection mode KNX	Connection terminal

**Internal temperature sensor**

Measuring range	+5 ... +35 °C
Deviation	± 1%
Resolution	0.1 K
Relative humidity	0 ... 95 % (No moisture condensation)

## 4 Software description

### 4.1 Software specification

ETS search paths:	- Heating, A/C, Ventilation / Regulator / Room controller display Smart module - Push-button / Push-button, general / Room controller display Smart module
BAU used:	FZE 1066 + $\mu$ C
KNX/EIB type class:	3b device with cert. Physical layer + stack
Configuration:	S-mode standard
PEI type:	"00" <sub>Hex</sub> / "0" <sub>Dec</sub>
PEI connector:	no connector

#### Application program:

No.	Short description	Name	Version	from mask version
1	Multifunctional ambient temperature controller & push-button application with graphic display: Up to 6 control surfaces for the pushbutton sensor function and for operation of the integrated room temperature controller.	RCS 146B11	1.1 for ETS3.0 onwards	705

## 4.2 Software "RCS 146B11"

### 4.2.1 Scope of functions

#### General functions

- The operation LED can be permanently on or off or alternatively be switched via a communication object.
- Internal clock to indicate the time and date on the device display. The time and date information is made available to the device via two communication objects (e.g. by a KNX/EIB timer). Automatic time and date request possible after a device restart.
- Integrated scene control. Internal storage of up to eight scenes with eight output channels, recall of internal scenes by means of a presettable scene number, selection of object types for the output channels; for each scene, the storage of the individual output values and the transmission of the output values can be permitted or inhibited; the individual channels can be delayed during scene recall; as scene extension, 64 scenes can be recalled and stored.
- The number of control surfaces can be expanded using a push-button extension module.

#### Functions of the integrated push button sensor

- Each operating area can either be used as a single rocker or as two independent buttons.
- For push button function either double-surface or single-surface principle.
- Each rocker can be used for the functions 'switching', 'dimming', 'Venetian blind', '1 byte value transmitter', '2-byte value transmitter', 'scene extension' and '2-channel operation'.
- Each button can be used for the functions 'switching', 'dimming', 'Venetian blind', '1-byte value transmitter', '2-byte value transmitter', 'scene extension' and '2-channel operation', 'controller extension', 'fan controller', 'controller operating mode', 'setpoint shift', 'information button' and 'change in the display'. The 'fan controller', 'controller operating mode' and 'setpoint shift' functions are used to operate the integrated room temperature controller.
- 2-channel operating function: each rocker or each button can be set for controlling two independent channels. This means that only one button-press is enough to transmit up to two telegrams to the bus. The channels can be configured independently of one another for the Switching, Value transmitter (1 byte) or Temperature value transmitter (2 bytes) functions.
- For the rocker functions Dimming, Venetian blind (operation concept "Long – Short or Short") and 2-channel operation, full-surface rocker actuation can also be evaluated. With full-surface rocker operation, switching telegrams and scene recall requests can be triggered on the bus in addition to and independently of the configured rocker function.
- The switching function permits the following settings: reaction after pressing and/or releasing, switch on, switch off, and toggle.
- The dimming function permits the following settings: times for short and long actuation, dimming in different levels, telegram repetition on long press, transmission of stop telegram after end of press.
- The shutter control permits the following settings: four different operation concepts with times for short and long press and slat adjustment.
- The 1-byte and 2-byte value transmitter function permits the following settings: selection of the value range (0 ... 100 %, 0 ... 255, 0 ... 65535, 0 ... 1500 lux, 0 ... 40 °C), value on button-press, value change on sustained button-press with different step widths, optional overflow or reaching the end of a value range.
- The controller extension function permits the following settings to operate an external room temperature controller: operating mode change-over with normal and high priority, defined selection of an operating mode, change between different operating modes, change of presence status, setpoint shift.
- Each operating area has two status LEDs. When a status LED is internally connected with the rocker or the button, it can signal a button-press or the current status of a communication object. The status indication can also be in inverted form. When a status LED is not dependent on the rocker or button, it can be permanently on or off, indicate the status of an independent communication object, the operating state of a room temperature controller or the result of a comparison between signed or unsigned 1 byte values.
- The rockers or buttons can be disabled via a 1-bit object. The following settings are possible: polarity of the disabling object, behaviour at the beginning and at the end of disabling. During an active disable, all or some of the rockers / buttons can have no function, can perform the function of a selected button or execute one of two presettable disabling functions.

- A delay to the automatically transmitted communication objects of the controller external after a device reset can be configured. The delay time is automatically produced by the subscriber address (physical address).
- All LEDs of the push button sensor can flash simultaneously in the event of an alarm. The following settings are possible: Value of alarm signalling object for the states alarm / no alarm, alarm acknowledge by actuation of a button, transmission of the acknowledge signal to other devices.

**Functions of the integrated room temperature controller**

- Various operating modes can be activated: Comfort, Standby, Night and Frost/heat protection
- Each operating mode can be assigned its own temperature-setpoints (for heating and/or cooling).
- Configuring the temperature setpoints as relative (derived from basic setpoint) or absolute (independent setpoint temperatures for each operating mode).
- Comfort extension possible using presence button in Night or Frost/heat protection mode. Configurable duration of the comfort extension.
- Operating mode change-over via 1-byte object according to KONNEX or using up to four individual 1-bit objects.
- Frost/heat protection switchover via window status or by automatic frost protection.
- Indication of room temperature controller information via the device display
- Function buttons to operate the controller (setpoint shift and second operating level, for example to change the setpoint temperatures).
- Operating modes "Heating", "Cooling", "Heating and cooling" each with or without additional level.
- Various control types can be configured for each heating or cooling level: PI control (permanent or switching PWM) or 2-point feedback control (switching).
- Control parameter for PI controller (if desired: proportional range, reset time) and 2-point controller (hysteresis) adjustable.
- The temperature setpoints for the additional level are derived via a configurable level offset from the values of the basic level.
- Automatic or object oriented switch-over between "heating" and "cooling".
- A temporary or permanent setpoint shift for a relative setpoint presetting through operation of the function buttons on the device or via communication objects is possible (e.g. using a controller extension). Indication of the setpoint shift on the device display by means of a line graphic.
- Status feedback telegrams (also KNX compliant) can be configured.
- Deactivating the feedback control or the additional level possible using separate 1-bit objects.
- Internal and external temperature sensor for room temperature measurement possible.
- Configurable internal to external determination of measured value and external sensor for room temperature measurement. Settable polling time of the external temperature sensor.
- The room temperature measurement (actual value) can be adjusted separately for the internal and external sensor using parameters.
- The actual and setpoint temperatures can be output on the bus if a configurable deviation is detected (also periodically).
- Separate or shared command value output in heating and cooling mode. This produces one or two command value objects for each level.
- Normal or inverted command value output configurable.
- Automatic transmission and cycle-time for actuating output configurable.
- Command value limit possible.
- Clipping mode (response of the controller to command values = 100 %) can be set.
- Floor temperature limit possible in heating mode. Thus temperature-controlled switch-off of a floor heater as protective function.
- Setpoint temperature limit possible in cooling mode. If necessary, the controller limits the setpoint temperature to specific values and prevents an adjustment beyond statutory limits.

**Functions of the integrated controller extension**

- Alternatively to the function of the room temperature controller, the extension mode can be activated. This allows control of an external room temperature controller.

- Full control of the controller (operating modes, presence functions and setpoint shift).
- Full-featured indication of the controller status on the display of the extension (heating / cooling reporting, setpoint shift, room temperature, setpoint temperature and current operating mode).
- Room temperature measurement also possible on the extension.

**Functions of the LED display (OLED)**

- LED display with switchable and dimmable backlighting. On the display, icons signal various operating states of the integrated room temperature controller or the controller extension. In addition, up to four display pages, each with up to three pieces of text and value display information, can be shown on the display, either alternating over time or controlled by pressing a button. If necessary, large symbols (30 x 30 pixels) can be shown on the display to depict, for example, weather situations, the indoor or outdoor temperature, timer, shade or multimedia system.
- Alternatively, display of information texts. This information mode can be used to give the user help texts about how to use the control surfaces when a button is pressed on the display (intelligent nameplate).
- Display of compiled running texts (controlled via 2 x 14-byte objects).
- The second operating level can be called up to set controller parameters and to call up other display information.

#### 4.2.2 Notes on software

##### ETS configuration and commissioning

For configuration and commissioning of the device, at least ETS3.0 from Version f onwards is required. Advantages with regard to downloading (significantly shorter loading times) and parameter programming using the integrated database plug-in can be expected only if this ETS version or later versions are used.

The necessary product database is offered in the \*.VD5 format. No product database is available for ETS2 and older versions of ETS3.

#### 4.2.3 Object table

Number of addresses (max):	254
Number of assignments (max):	255
Dynamic table management	yes

##### 4.2.3.1 Object table, push button sensor function section

###### Objects for rocker or button function

Function: Switching

Object	Function	Name	Type	DPT	Flag
 0	Switching	B.rocker/B.button 1 1	1-bit	1.xxx	C, W, T, (R) <sup>2</sup>

Description 1-bit object for transmission of switching telegrams (ON, OFF).

Function: Dimming

Object	Function	Name	Type	DPT	Flag
 0	Switching	B.rocker/B.button 1 1	1-bit	1.xxx	C, W, T, (R) <sup>2</sup>

Description 1-bit object for transmission of switching telegrams (ON, OFF).

Function: Dimming

Object	Function	Name	Type	DPT	Flag
 18	Dimming	B.rocker/B.button 1 1	4-bit	3.007	C, W, T, (R) <sup>2</sup>

Description 4-bit object for the transmission of relative dimming telegrams.

Function: Venetian blind

Object	Function	Name	Type	DPT	Flag
 0	Short time operation	B.rocker/B.button 1 1	1-bit	1.007	C, -, T, (R) <sup>2</sup>

Description 1-bit object for the transmission of telegrams with which a Venetian blind or shutter drive motor can be stopped or with which the blind slats can be adjusted by short time operation.

1: The objects have been described for rocker 1 or button 1 as an example. The objects for the other rockers/buttons and for the module rockers are defined in the same way by shifting the object number and changing the object name.

2: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function: Venetian blind

Object	Function	Name	Type	DPT	Flag
 <sup>18</sup>	Long-time operation	B.rocker/B.button 1 1	1-bit	1.008	C, W, T, (R) <sup>2</sup>

Description 1-bit object for the transmission of telegrams with which a Venetian blind or shutter drive motor can be moved upwards or downwards.

---

Function: 1-byte value transmitter

Object	Function	Name	Type	DPT	Flag
 <sup>0</sup>	Value	B.rocker/B.button 1 1	1 byte	5.xxx	C, W, T, (R) <sup>2</sup>

Description 1-byte object for the transmission of values from 0 to 255 (corresponding to values from 0 % to 100 %). If the adjustment of the value is enabled, the object can transmit telegrams cyclically after long actuation with which the value can be reduced or increased by a presettable amount.

---

Function: 2-byte value transmitter

Object	Function	Name	Type	DPT	Flag
 <sup>0</sup>	Value	B.rocker/B.button 1 1	2 byte	7.xxx	C, W, T, (R) <sup>2</sup>

Description 2-byte object for the transmission of values from 0 to 65535. If the adjustment of the value is enabled, the object can transmit cyclical telegrams after a long press with which the value can be reduced or increased by an adjustable amount.

---

Function: 2-byte value transmitter

Object	Function	Name	Type	DPT	Flag
 <sup>0</sup>	Temperature value	B.rocker/B.button 1 1	2 byte	9.001	C, W, T, (R) <sup>2</sup>

Description 2-byte object for the transmission of a temperature value from 0 °C to 40 °C. If the adjustment of the value is enabled, the object can transmit telegrams cyclically after a long press with which the value can be reduced or increased by 1 K.

---

Function: 2-byte value transmitter

Object	Function	Name	Type	DPT	Flag
 <sup>0</sup>	Brightness value	B.rocker/B.button 1 1	2 byte	9.004	C, W, T, (R) <sup>2</sup>

Description 2-byte object for the transmission of a brightness level value from 0 to 1500 lux. If the adjustment of the value is enabled, the object can transmit cyclical telegrams after a long press with which the value can be reduced or increased by 50 lux.

---

1: The objects have been described for rocker 1 or button 1 as an example. The objects for the other rockers/buttons and for the module rockers are defined in the same way by shifting the object number and changing the object name.

2: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function: Scene extension

Object	Function	Name	Type	DPT	Flag
 0	Scene extension	B.rocker/B.button 1 1	1 byte	18.001	C, -, T, (R) 2

Description 1-byte object for recalling or for storing one of 64 scenes max. from a scene push button sensor.

---

Function: 2-channel operation

Object	Function	Name	Type	DPT	Flag
 0	Channel 1 switching	B.rocker/B.button 1 1	1-bit	1.xxx	C, W, T, (R) 2

Description 1-bit object for the transmission of switching telegrams, if 2-channel operation is activated.

---

Function: 2-channel operation

Object	Function	Name	Type	DPT	Flag
 0	Channel 1 value	B.rocker/B.button 1 1	1 byte	5.xxx	C, -, T, (R) 2

Description 1-byte object for the transmission of value telegrams, if 2-channel operation is activated.

---

Function: 2-channel operation

Object	Function	Name	Type	DPT	Flag
 0	Channel 1 value	B.rocker/B.button 1 1	2 byte	9.001	C, -, T, (R) 2

Description 2-byte object for the transmission of value telegrams, if 2-channel operation is activated.

---

Function: 2-channel operation

Object	Function	Name	Type	DPT	Flag
 18	Channel 2 switching	B.rocker/B.button 1 1	1-bit	1.xxx	C, W, T, (R) 2

Description 1-bit object for the transmission of switching telegrams, if 2-channel operation is activated.

---

1: The objects have been described for rocker 1 or button 1 as an example. The objects for the other rockers/buttons and for the module rockers are defined in the same way by shifting the object number and changing the object name.

2: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function: 2-channel operation

Object	Function	Name	Type	DPT	Flag
 <sup>18</sup>	Channel 2 value	B.rocker/B.button 1 1	1 byte	5.xxx	C, -, T, (R) 2

Description 1-byte object for the transmission of value telegrams, if 2-channel operation is activated.

---

Function: 2-channel operation

Object	Function	Name	Type	DPT	Flag
 <sup>18</sup>	Channel 2 value	B.rocker/B.button 1 1	2 byte	9.001	C, -, T, (R) 2

Description 2-byte object for the transmission of value telegrams, if 2-channel operation is activated.

---

#### Objects for full-surface operation with rocker function (for dimming, Venetian blind and 2-channel operation)

---

Function: Full-surface operation

Object	Function	Name	Type	DPT	Flag
 <sup>1</sup>	Switching	B.rocker 1 full-surface actuation <sup>1</sup>	1-bit	1.xxx	C, W, T, (R) <sup>2</sup>

Description 1-bit object for the transmission of switching telegrams (ON, OFF) for full-surface operation of a sensor area.

---

Function: Full-surface operation

Object	Function	Name	Type	DPT	Flag
 <sup>1</sup>	Scene extension	B.rocker 1 full-surface actuation <sup>1</sup>	1 byte	18.001	C, -, T, (R) 2

Description 1-byte object for recalling or for storing one of 64 scenes max. from a scene pushbutton sensor for full-surface operation of a sensor area.

---

1: The objects have been described for rocker 1 or button 1 as an example. The objects for the other rockers/buttons and for the module rockers are defined in the same way by shifting the object number and changing the object name.

2: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

**Objects for status LED**

Function: Status LED in case of rocker function

Object	Function	Name	Type	DPT	Flag
 <sup>36</sup>	Status LED top	B.Rocker 1 <sup>1</sup>	1-bit	1.xxx	C, W, -, (R) <sub>2</sub>

Description 1-bit object for activation of the status LED.

Function: Status LED in case of rocker function

Object	Function	Name	Type	DPT	Flag
 <sup>36</sup>	Status LED top	B.rocker 1 <sup>1</sup>	1 byte	5.xxx, 6.xxx, 20.102	C, W, -, (R) <sub>2</sub>

Description 1-byte object for activation of the status LED.

Function: Status LED in case of rocker function

Object	Function	Name	Type	DPT	Flag
 <sup>37</sup>	Status LED bottom	B.rocker 1 <sup>1</sup>	1-bit	1.xxx	C, W, -, (R)

Description 1-bit object for activation of the status LED.

Function: Status LED in case of rocker function

Object	Function	Name	Type	DPT	Flag
 <sup>37</sup>	Status LED bottom	B.rocker 1 <sup>1</sup>	1 byte	5.xxx, 6.xxx, 20.102	C, W, -, (R)

Description 1-byte object for activation of the status LED.

Function: Status LED in case of push button function

Object	Function	Name	Type	DPT	Flag
 <sup>36</sup>	Status LED	B.button 1 <sup>1</sup>	1-bit	1.xxx	C, W, -, (R) <sub>2</sub>

Description 1-bit object for activation of the status LED.

1: The objects have been described for rocker 1 or button 1 as an example. The objects for the other rockers/buttons and for the module rockers are defined in the same way by shifting the object number and changing the object name.

2: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

Function: Status LED in case of push button function

Object	Function	Name	Type	DPT	Flag
 36	Status LED	B.button 1 <sup>1</sup>	1 byte	5.xxx, 6.xxx, 20.102	C, W, -, (R) <sup>2</sup>

Description 1-byte object for activation of the status LED.

#### Objects for disabling functions (pushbutton sensor function section)

Function: Switching

Object	Function	Name	Type	DPT	Flag
 16, 17	Switching	B.Disabling function 1 / 2	1-bit	1.xxx	C, W, T, (R) <sup>3</sup>

Description 1-bit object for transmission of switching telegrams (ON, OFF).

Function: Dimming

Object	Function	Name	Type	DPT	Flag
 16, 17	Switching	B.Disabling function 1 / 2	1-bit	1.xxx	C, W, T, (R) <sup>3</sup>

Description 1-bit object for transmission of switching telegrams (ON, OFF).

Function: Dimming

Object	Function	Name	Type	DPT	Flag
 34, 35	Dimming	B.Disabling function 1 / 2	4-bit	1.007	C, W, T, (R) <sup>3</sup>

Description 4-bit object for the transmission of relative dimming telegrams.

Function: Venetian blind

Object	Function	Name	Type	DPT	Flag
 16, 17	Short time operation	B.Disabling function 1 / 2	1-bit	1.007	C, -, T, (R) <sup>3</sup>

Description 1-bit object for the transmission of telegrams with which a Venetian blind or shutter drive motor can be stopped or with which the blind slats can be adjusted by short time operation.

1: The objects have been described for rocker 1 or button 1 as an example. The objects for the other rockers/buttons and for the module rockers are defined in the same way by shifting the object number and changing the object name.

2: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

3: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function: Venetian blind

Object	Function	Name	Type	DPT	Flag
 34, 35	Long-time operation	B.Disabling function 1 / 2	1-bit	1.008	C, W, T, (R) <sup>1</sup>

Description 1-bit object for the transmission of telegrams with which a Venetian blind or shutter drive motor can be moved upwards or downwards.

---

Function: 1-byte value transmitter

Object	Function	Name	Type	DPT	Flag
 16, 17	Value	B.Disabling function 1 / 2	1 byte	5.xxx	C, W, T, (R) <sup>1</sup>

Description 1-byte object for the transmission of values from 0 to 255 (corresponding to values from 0 % to 100 %). If the adjustment of the value is enabled, the object can transmit telegrams cyclically after long actuation with which the value can be reduced or increased by a presettable amount.

---

Function: 2-byte value transmitter

Object	Function	Name	Type	DPT	Flag
 16, 17	Value	B.Disabling function 1 / 2	2 byte	7.xxx	C, W, T, (R) <sup>1</sup>

Description 2-byte object for the transmission of values from 0 to 65535. If the adjustment of the value is enabled, the object can transmit cyclical telegrams after a long press with which the value can be reduced or increased by an adjustable amount.

---

Function: 2-byte value transmitter

Object	Function	Name	Type	DPT	Flag
 16, 17	Temperature value	B.Disabling function 1 / 2	2 byte	9.001	C, W, T, (R) <sup>1</sup>

Description 2-byte object for the transmission of a temperature value from 0 °C to 40 °C. If the adjustment of the value is enabled, the object can transmit telegrams cyclically after a long press with which the value can be reduced or increased by 1 K.

---

Function: 2-byte value transmitter

Object	Function	Name	Type	DPT	Flag
 16, 17	Brightness value	B.Disabling function 1 / 2	2 byte	9.004	C, W, T, (R) <sup>1</sup>

Description 2-byte object for the transmission of a brightness level value from 0 to 1500 lux. If the adjustment of the value is enabled, the object can transmit cyclical telegrams after a long press with which the value can be reduced or increased by 50 lux.

---

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function:	Scene extension				
Object	Function	Name	Type	DPT	Flag
 16, 17	Scene extension	B.Disabling function 1 / 2	1 byte	18.001	C, -, T, (R) 1
Description	1-byte object for recalling or for storing one of 64 scenes max. from a scene push button sensor.				
Function:	2-channel operation				
Object	Function	Name	Type	DPT	Flag
 16, 17	Channel 1 switching	B.Disabling function 1 / 2	1-bit	1.xxx	C, W, T, (R) <sup>1</sup>
Description	1-bit object for the transmission of switching telegrams, if 2-channel operation is activated.				
Function:	2-channel operation				
Object	Function	Name	Type	DPT	Flag
 16, 17	Channel 1 value	B.Disabling function 1 / 2	1 byte	5.xxx	C, -, T, (R) 1
Description	1-byte object for the transmission of value telegrams, if 2-channel operation is activated.				
Function:	2-channel operation				
Object	Function	Name	Type	DPT	Flag
 16, 17	Channel 1 value	B.Disabling function 1 / 2	2 byte	9.001	C, -, T, (R) 1
Description	2-byte object for the transmission of value telegrams, if 2-channel operation is activated.				
Function:	2-channel operation				
Object	Function	Name	Type	DPT	Flag
 34, 35	Channel 2 switching	B.Disabling function 1 / 2	1-bit	1.xxx	C, W, T, (R) <sup>1</sup>
Description	1-bit object for the transmission of switching telegrams, if 2-channel operation is activated.				
Function:	2-channel operation				
Object	Function	Name	Type	DPT	Flag
 34, 35	Channel 2 value	B.Disabling function 1 / 2	1 byte	5.xxx	C, -, T, (R) 1
Description	1-byte object for the transmission of value telegrams, if 2-channel operation is activated.				

---

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function: 2-channel operation

Object	Function	Name	Type	DPT	Flag
 34, 35	Channel 2 value	B.Disabling function 1 / 2	2 byte	9.001	C, -, T, (R) 1

Description 2-byte object for the transmission of value telegrams, if 2-channel operation is activated.

---

Function: Disabling function

Object	Function	Name	Type	DPT	Flag
 54	Disabling	B.Disabling function 1 / 2	1-bit	1.001	C, W, -, (R) 2

Description 1-bit object by means of which the push button sensor can be disabled and enabled again (polarity configurable).

---

### Object for operation LED

---

Function: Operation LED

Object	Function	Name	Type	DPT	Flag
 52	Switching	B.Operation LED	1-bit	1.001	C, W, -, (R) 2

Description 1-bit object to switch on or switch off the operation LED (polarity configurable).

---

### Objects for alarm message

---

Function: Alarm signal

Object	Function	Name	Type	DPT	Flag
 56	Switching	B.Alarm message	1-bit	1.xxx	C, W, -, (R) 2

Description 1-bit object for the reception of an alarm signalling (polarity configurable).

---

Function: Alarm signal

Object	Function	Name	Type	DPT	Flag
 57	Switching	B.Alarm message acknowledge	1-bit	1.xxx	C, -, T, (R) 1

Description 1-bit object for transmitting the acknowledgement of an alarm signalling (polarity configurable).

---

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

2: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

**Objects for the controller extension**

Function: Controller extension

Object	Function	Name	Type	DPT	Flag
 58	Operating mode switch-over	B.Controller-extension	1 byte	20.102	C, W, T, (R) <sup>1</sup>

Description 1-byte object for changing over a room temperature controller between the Comfort, Standby, Night and Frost/heat protection operating modes.

Function: Controller extension

Object	Function	Name	Type	DPT	Flag
 59	Forced operating mode switch-over	B.Controller-extension	1 byte	20.102	C, W, T, (R) <sup>1</sup>

Description 1-byte object for changing over a room temperature controller under forced control between the Automatic, Comfort, Standby, Night and Frost / heat protection operating modes.

Function: Controller extension

Object	Function	Name	Type	DPT	Flag
 60	Presence button	B.Controller-extension	1-bit	1.001	C, W, T, (R) <sup>1</sup>

Description 1-bit object for switching over the presence status of a room temperature controller (polarity configurable)

Function: Controller extension

Object	Function	Name	Type	DPT	Flag
 61	Setpoint shift output	B.Controller-extension	1 byte	6.010	C, -, T, (R) <sub>1</sub>

Description 1-byte object for presetting a basic setpoint shift for a controller. The value of a counter value in the communication object is 0.5 K. The value "0" means that no shift is active. The value is depicted in a double complement in the positive and negative direction.  
Value object 62 + 1 (increase level value)  
Value object 62 - 1 (decrease level value)

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function: Controller extension

Object	Function	Name	Type	DPT	Flag
 62	Setpoint shift input	B.Controller-extension	1 byte	6.010	C, W, -, (R) 1

Description 1-byte object used by the extension unit for receiving the current setpoint shift of the room temperature controller. The value of a counter value in the communication object is 0.5 K. The value "0" means that no shift is active. The value is depicted in a double complement in the positive and negative direction.

---

Function: Controller extension

Object	Function	Name	Type	DPT	Flag
 63	Controller status	B.Controller-extension	1 byte	---	2 C, W, -, (R) 1

Description 1-byte object used by the extension unit for receiving the current state of operation of the controller. Status LEDs that can be used to indicate a status independently of a button function can display one of the various information units which are grouped in this byte (bit-oriented evaluation).

---

### Objects for light scene function

---

Function: Scene function

Object	Function	Name	Type	DPT	Flag
 66...73	Switching	B.Scenes-output 1 <sup>3</sup>	1-bit	1.001	C, W, T, (R) <sup>1</sup>

Description 1-bit objects for controlling up to eight actuator groups (ON, OFF).

---

Function: Scene function

Object	Function	Name	Type	DPT	Flag
 66...73	Value	B.Scenes-output 1 <sup>3</sup>	1 byte	5.001	C, W, T, (R) <sup>4</sup>

Description 1-byte objects for controlling up to eight actuator groups (0...255).

---

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

2: Non-standardised DP type (in accordance with KNX AN 097/07 rev 3).

3: Scene outputs 2 ... 8 see scene output 1, shift of the object number (66 + number of scene output - 1).

4: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function: Scene function

Object	Function	Name	Type	DPT	Flag
 74	Extension unit input	B.Scenes	1 byte	18.001	C, W, -, (R) 1

Description 1-byte object with which one of the eight internally stored scenes can be recalled or stored again.

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

#### 4.2.3.2 Object table, controller function section

##### Objects for room temperature measurement (Part 1)

Function: Room temperature measurement

Object	Function	Name	Type	DPT	Flag
 <sup>64</sup>	Actual temperature	C.Output	2 byte	9.001	C, W, T, R

Description 2-byte object for the display of the actual temperature (room temperature), which is determined by the controller or controller extension. Possible value range: -99.9 °C to +99.9 °C / Measurement range of internal temperature sensor: +5 °C to +35 °C +/- 1 %.  
The temperature value is always output in the format "°C".

Function: Room temperature measurement

Object	Function	Name	Type	DPT	Flag
 <sup>65</sup>	Received temperature value	C.Input	2 byte	9.001	C, W, -, (R) 1

Description 2-byte object for coupling an external room temperature sensor or a controller extension. Thus cascading of multiple temperature sensors for room temperature measurement. Possible range of values: -99.9 °C to +99.9 °C.  
The temperature value must always be specified in the format "°C".

##### Object for setpoint temperature specification

Function: Setpoint temperature specification

Object	Function	Name	Type	DPT	Flag
 <sup>80</sup>	Basic setpoint	C.Input	2 byte	9.001	C, W, -, (R) 1

Description 2-byte object for external setting of the basic setpoint for absolute setpoint presetting. Depending on the operating mode, the possible range of values is limited by the configured frost protection and/or heat protection temperature. The controller rounds the temperature values received via the object depending on the configured interval of the basic setpoint shift (0.1 K or 0.5 K).  
The temperature value must always be specified in the format "°C".

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

---

Function:	Setpoint temperature specification				
Object	Function	Name	Type	DPT	Flag
 80	Setpoint active operating mode	C.Input	2 byte	9.001	C, W, (T), (R) <sup>1</sup>

Description 2-byte object for external setting of a setpoint for absolute setpoint presetting. Depending on the operating mode, the possible range of values is limited by the configured frost protection and/or heat protection temperature. The controller rounds the temperature values received via the object to 0.1 K. The temperature value must always be specified in the format "°C". The setpoint modified by the setpoint shift can be reported back to the bus via the object by setting the "Transmit" flag.

### Objects for operating mode change-over

---

Function:	Operating mode switchover				
Object	Function	Name	Type	DPT	Flag
 82	Operating mode switchover	C.Input	1 byte	20.102	C, W, T, (R) <sup>2</sup>

Description 1-byte object for change-over of the operating mode of the controller according to the KNX specification. This object is only available in this way when the operating mode change-over is to take place over 1 byte (parameter-dependent).

---

Function:	Operating mode switchover				
Object	Function	Name	Type	DPT	Flag
 82	Comfort mode	C.Input	1-bit	1.001	C, W, T, (R) <sup>2</sup>

Description 1-bit object for change-over to the "Comfort" operating mode. This object is only available in this way when the operating mode change-over is to take place over 4 x 1 bit (parameter-dependent).

---

Function:	Operating mode switchover				
Object	Function	Name	Type	DPT	Flag
 83	Standby mode	C.Input	1-bit	1.001	C, W, T, (R) <sup>2</sup>

Description 1-bit object for change-over to the "Standby" operating mode. This object is only available in this way when the operating mode change-over is to take place over 4 x 1 bit (parameter-dependent).

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

2: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function: Operating mode switchover

Object	Function	Name	Type	DPT	Flag
 <sup>84</sup>	Night operation	C.Input	1-bit	1.001	C, W, T, (R) <sup>1</sup>

Description 1-bit object for change-over to the "Night" operating mode. This object is only available in this way when the operating mode change-over is to take place over 4 x 1 bit (parameter-dependent).

---

Function: Operating mode switchover

Object	Function	Name	Type	DPT	Flag
 <sup>85</sup>	Frost/heat protection	C.Input	1-bit	1.001	C, W, T, (R) <sup>1</sup>

Description 1-bit object for change-over to the "Frost / heat protection" operating mode. This object is only available in this way when the operating mode change-over is to take place over 4 x 1 bit (parameter-dependent).

---

Function: Operating mode switchover

Object	Function	Name	Type	DPT	Flag
 <sup>86</sup>	Operating mode forced-control	C.Input	1 byte	20.102	C, W, T, (R) <sup>1</sup>

Description 1-byte object for forced change-over (highest priority) of the operating mode of the controller according to the KNX specification. This object is only available in this way when the operating mode change-over is to take place over 1 byte (parameter-dependent).

---

Function: Operating mode change-over presence detection

Object	Function	Name	Type	DPT	Flag
 <sup>87</sup>	Presence object	C.Input / Output	1-bit	1.001	C, W, T, (R) <sup>1</sup>

Description 1-bit object through which a motion detector or an external presence button (e.g. from a controller extension) can be linked to the controller. The object can optionally be read (set "Read" flag), meaning that an internally changed presence status (e.g. through operating a button on the controller) can also be evaluated in other bus devices. No telegram is sent automatically in the case of an internal change in the presence status!

Polarity: presence detected = "1", presence not detected = "0".

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function: Operating mode change-over window status

Object	Function	Name	Type	DPT	Flag
 88	Window status	C.Input	1-bit	1.019	C, W, -, (R) 1

Description 1-bit object for the coupling of window contacts. Polarity:  
Window open = "1", window closed = "0".

---

### Object for operating mode change-over

Function: Operating mode change-over

Object	Function	Name	Type	DPT	Flag
 89	Heating / cooling change-over	C.Output	1-bit	1.100	C, -, T, (R) 2

Description 1 bit object to transmit the automatically set operating mode of the controller ("Heating" or "Cooling" modes).  
Object value "1" = Heating; Object value "0" = Cooling. This object is only available in this way when the operating mode change-over is to take place automatically (parameter-dependent).

---

Function: Operating mode change-over

Object	Function	Name	Type	DPT	Flag
 89	Heating / cooling change-over	C.Input / Output	1-bit	1.100	C, W, T, (R) 2

Description 1 bit object to change-over the operating mode of the controller ("Heating" or "Cooling" modes). Object value "1" = Heating; Object value "0" = Cooling. This object is only available in this way when the operating mode change-over is to take place manually (not automatically by the controller) (parameter-dependent).

---

### Object for controller status

Function: Status signal

Object	Function	Name	Type	DPT	Flag
 90	Controller status	C.Output	1 byte	---	C, -, T, (R) 2

Description 1-byte object used by the controller to output the current state of operation (e.g. to a controller extension).  
Only when "Controller status" = "Controller general".

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

2: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function:	Status signal				
Object	Function	Name	Type	DPT	Flag
 90	Controller status ...	C.Output	1-bit	1.001	C, -, T, (R) <sup>1</sup>
Description	1-bit object for single status feedback of configured controller functions. This object is only available in this way when a part of the controller status is to be transmitted singly as 1-bit information (parameter-dependent).				
Function:	Status signal				
Object	Function	Name	Type	DPT	Flag
 90	KNX status operating mode	C.Output	1 byte	20.102	C, -, T, (R) <sup>1</sup>
Description	1-byte object used by the controller to output the current operating mode. This object is generally used to enable controller extensions to display the controller operating mode correctly in the KNX compliant status display. Therefore this object should be connected with controller extensions if the KNX compliant status feedback is not configured. Only when "Controller status" = "KNX compliant".				
Function:	Status signal				
Object	Function	Name	Type	DPT	Flag
 81	KNX status forced oper. mode	C.Output	1 byte	20.102	C, -, T, (R) <sup>1</sup>
Description	1-byte object used by the controller to output the operating mode in the event of forced position. This object is generally used to enable controller extensions to display the controller operating mode correctly in the KNX compliant status display. Therefore this object should be connected with controller extensions if the KNX compliant status feedback is not configured. Only when "Controller status" = "KNX compliant".				
Function:	Status signal				
Object	Function	Name	Type	DPT	Flag
 105	KNX controller status	C.Output	2 byte	22.101	C, -, T, (R) <sup>1</sup>
Description	2-byte object that the controller uses to display elementary basic functions in a KNX-harmonised manner. Only when "Controller status" = "KNX compliant".				
Function:	Status signal				
Object	Function	Name	Type	DPT	Flag
 108	Status signal addition	C.Output	1 byte	---	C, -, T, (R) <sub>1</sub>
Description	1-byte object used by the controller to output the current enlarged state of operation (e.g. to a controller extension). Only when "Controller status" = "Controller general".				

---

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

**Objects for heating / cooling signal functions**

Function: Heating energy message

Object	Function	Name	Type	DPT	Flag
 91	Heating message	C.Output	1-bit	1.001	C, -, T, (R) 1

Description 1-bit object for the controller to report a request for heating energy. Object value = "1": energy request, object value = "0": no energy request.

Function: Cooling energy message

Object	Function	Name	Type	DPT	Flag
 92	Cooling message	C.Output	1-bit	1.001	C, -, T, (R) 1

Description 1-bit object for the controller to report a request for cooling energy. Object value = "1": energy request, object value = "0": no energy request.

**Objects for controller disabling functions**

Function: Disable controller

Object	Function	Name	Type	DPT	Flag
 94	Disable controller	C.Input	1-bit	1.001	C, W, -, (R) 2

Description 1-bit object for deactivating the controller (activating dew point operation). Polarity: Controller deactivated = "1", controller activated = "0".

Function: Disable controller

Object	Function	Name	Type	DPT	Flag
 95	Disable additional level	C.Input	1-bit	1.001	C, W, -, (R) 2

Description 1-bit object for deactivating the additional level of the controller. Polarity: Additional level deactivated = "1", additional level activated = "0". This object is only available in this way if two-level heating or cooling operation is configured.

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

2: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

**Object for heating command value output and combined valve heating/cooling**

---

Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 96	Command value for heating / command value, basic heating	C.Output	1 byte	5.001	C, -, T, (R) 1
Description	1-byte object to output the continuous command value of the heating mode. In two-level heating mode, command value output for the basic heating. This object is only available in this way if the type of feedback control is configured to "Continuous PI control".				
Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 96	Command value for heating (PWM) / command value, basic heating (PWM)	C.Output	1-bit	1.001	C, -, T, (R) 1
Description	1-bit object to output the PWM command value of the heating mode. In two-level heating mode, command value output for the basic heating. This object is only available in this way if the type of feedback control is configured to "Switching PI control (PWM)".				
Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 96	Command value for heating / command value, basic heating	C.Output	1-bit	1.001	C, -, T, (R) 1
Description	1-bit object to output the switching command value of the heating mode. In two-level heating mode, command value output for the basic heating. This object is only available in this way if the type of feedback control is configured to "Switching 2-point feedback control".				
Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 96	Command value for heating/cooling / command value, basic level	C.Output	1 byte	5.001	C, -, T, (R) 1
Description	1-byte object to output the combined continuous command value of the heating and cooling mode. In two-level heating/cooling mode, command value output for the basic level. This object is only available in this way if the command values for heating and cooling mode are output to a shared object (parameter-dependent). The type of feedback control must also be configured to "Continuous PI control".				

---

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 96	Command value for heating/cooling (PWM) / command value, basic level (PWM)	C.Output	1-bit	1.001	C, -, T, (R) 1
Description	1-bit object to output the combined PWM command value of the heating and cooling mode. In two-level heating/cooling mode, command value output for the basic level This object is only available in this way if the command values for heating and cooling mode are output to a shared object (parameter-dependent). The type of feedback control must also be configured to "Switching PI control (PWM)".				
Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 96	Command value for heating/cooling / command value, basic level	C.Output	1-bit	1.001	C, -, T, (R) 1
Description	1-bit object to output the combined switching command value of the heating and cooling mode. In two-level heating/cooling mode, command value output for the basic level This object is only available in this way if the command values for heating and cooling mode are output to a shared object (parameter-dependent). The type of feedback control must also be configured to "Switching 2-point feedback control".				

---

**Object for command value output, additional heating and combined valve additional heating/cooling**

---

Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 97	Command value, additional heating	C.Output	1 byte	5.001	C, -, T, (R) 1
Description	1-byte object to output the continuous command value for additional heating in two-level operation. This object is only available in this way if the type of feedback control is configured to "Continuous PI control".				
Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 97	Command value, additional heating (PWM)	C.Output	1-bit	1.001	C, -, T, (R) 1
Description	1-bit object to output the continuous PWM command value for additional heating in two-level operation. This object is only available in this way if the type of feedback control is configured to "Switching PI control (PWM)".				

---

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 97	Command value, additional heating	C.Output	1-bit	1.001	C, -, T, (R) 1
Description	1-byte object to output the switching command value for additional heating in two-level operation. This object is only available in this way if the type of feedback control is configured to "Switching 2-point feedback control".				
Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 97	Command value, additional level	C.Output	1 byte	5.001	C, -, T, (R) 1
Description	1-byte object to output the combined continuous command value for additional level in two-level operation. This object is only available in this way if the command values for heating and cooling mode are output to a shared object (parameter-dependent). The type of feedback control must also be configured to "Continuous PI control".				
Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 97	Command value, additional level (PWM)	C.Output	1-bit	1.001	C, -, T, (R) 1
Description	1-bit object to output the combined switching PWM command value for additional level in two-level operation. This object is only available in this way if the command values for heating and cooling mode are output to a shared object (parameter-dependent). The type of feedback control must also be configured to "Switching PI control (PWM)".				
Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 97	Command value, additional level	C.Output	1-bit	1.001	C, -, T, (R) 1
Description	1-bit object to output the combined switching command value for additional level in two-level operation. This object is only available in this way if the command values for heating and cooling mode are output to a shared object (parameter-dependent). The type of feedback control must also be configured to "Switching 2-point feedback control".				

---

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

**Object for command value output, cooling**

Function: Command value

Object	Function	Name	Type	DPT	Flag
 98	Command value for cooling / command value, basic cooling	C.Output	1 byte	5.001	C, -, T, (R) 1

Description 1-byte object to output the continuous command value of the cooling mode. In two-level cooling mode, command value output for the basic cooling. This object is only available in this way if the type of feedback control is configured to "Continuous PI control".

Function: Command value

Object	Function	Name	Type	DPT	Flag
 98	Command value for cooling (PWM) / command value, basic cooling (PWM)	C.Output	1-bit	1.001	C, -, T, (R) 1

Description 1-bit object to output the PWM command value of the cooling mode. In two-level cooling mode, command value output for the basic cooling. This object is only available in this way if the type of feedback control is configured to "Switching PI control (PWM)".

Function: Command value

Object	Function	Name	Type	DPT	Flag
 98	Command value for cooling / command value, basic cooling	C.Output	1-bit	1.001	C, -, T, (R) 1

Description 1-bit object to output the switching command value of the cooling mode. In two-level cooling mode, command value output for the basic cooling. This object is only available in this way if the type of feedback control is configured to "Switching 2-point feedback control".

**Object for command value output, additional cooling**

Function: Command value

Object	Function	Name	Type	DPT	Flag
 99	Command value, additional cooling	C.Output	1 byte	5.001	C, -, T, (R) 1

Description 1-byte object to output the continuous command value for additional cooling in two-level operation. This object is only available in this way if the type of feedback control is configured to "Continuous PI control".

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 99	Command value, additional cooling (PWM)	C.Output	1-bit	1.001	C, -, T, (R) 1
Description	1-bit object to output the continuous PWM command value for additional cooling in two-level operation. This object is only available in this way if the type of feedback control is configured to "Switching PI control (PWM)".				
Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 99	Command value, additional cooling	C.Output	1-bit	1.001	C, -, T, (R) 1
Description	1-byte object to output the switching command value for additional cooling in two-level operation. This object is only available in this way if the type of feedback control is configured to "Switching 2-point feedback control".				

---

**Object for additional PWM heating command value output and combined valve PWM additional heating/cooling**

---

Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 100	PWM command value for heating / PWM command value, basic heating	C.Output	1 byte	5.001	C, -, T, (R) 1
Description	1-byte object to output the internal continuous command value of a PWM controller of the heating mode. In two-level heating mode, command value output for the basic heating. This object is only available in this way if the type of feedback control is configured to "Switching PI control (PWM)". In addition to the switching 1 bit command value of the PWM, the calculated continuous command value of the controller can also be transmitted to the bus and displayed, e.g. in a visualisation.				

---

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function:	Command value					
Object	Function	Name	Type	DPT	Flag	
 100	PWM command value for heating/cooling / PWM command value, basic level	C.Output	1 byte	5.001	C, -, T, (R)	1

Description 1-byte object to output the combined continuous command value of a PWM controller of the heating and cooling mode. In two-level heating/cooling mode, command value output for the basic level. This object is only available in this way if the command values for heating and cooling mode are output to a shared object (parameter-dependent). The type of feedback control must also be configured to "Switching PI control (PWM)". In addition to the switching 1 bit command value of the PWM, the calculated continuous command value of the controller can also be transmitted to the bus and displayed, e.g. in a visualisation.

**Object for additional command value output, PWM additional heating and combined valve PWM additional heating/cooling**

---

Function:	Command value					
Object	Function	Name	Type	DPT	Flag	
 101	PWM command value, additional heating	C.Output	1 byte	5.001	C, -, T, (R)	1

Description 1-byte object to output the internal continuous command value of a PWM controller for additional heating in two-level operation. This object is only available in this way if the type of feedback control is configured to "Continuous PI control". In addition to the switching 1 bit command value of the PWM, the calculated continuous command value of the controller can also be transmitted to the bus and displayed, e.g. in a visualisation.

---

Function:	Command value					
Object	Function	Name	Type	DPT	Flag	
 101	PWM command value, additional level	C.Output	1 byte	5.001	C, -, T, (R)	1

Description 1-byte object to output the combined continuous command value of a PWM feedback controller for additional level in two-level operation. This object is only available in this way if the command values for heating and cooling mode are output to a shared object (parameter-dependent). The type of feedback control must also be configured to "Switching PI control (PWM)". In addition to the switching 1 bit command value of the PWM, the calculated continuous command value of the controller can also be transmitted to the bus and displayed, e.g. in a visualisation.

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

**Object for additional command value output, PWM cooling**

---

Function:	Command value					
Object	Function	Name	Type	DPT	Flag	
 102	PWM command value for cooling / PWM command value, basic cooling	C.Output	1 byte	5.001	C, -, T, (R) 1	
Description	1-byte object to output the internal continuous command value of a PWM feedback controller of the cooling mode. In two-level cooling mode, command value output for the basic cooling. This object is only available in this way if the type of feedback control is configured to "Switching PI control (PWM)". In addition to the switching 1 bit command value of the PWM, the calculated continuous command value of the controller can also be transmitted to the bus and displayed, e.g. in a visualisation.					

**Object for additional command value output, PWM additional cooling**

---

Function:	Command value					
Object	Function	Name	Type	DPT	Flag	
 103	PWM command value, additional cooling	C.Output	1 byte	5.001	C, -, T, (R) 1	
Description	1-byte object to output the internal continuous command value of a PWM feedback controller for additional cooling in two-level operation. This object is only available in this way if the type of feedback control is configured to "Switching PI control (PWM)". In addition to the switching 1 bit command value of the PWM, the calculated continuous command value of the controller can also be transmitted to the bus and displayed, e.g. in a visualisation.					

**Object for outputting the setpoint temperature**

---

Function:	Setpoint temperature					
Object	Function	Name	Type	DPT	Flag	
 104	Setpoint temperature	C.Output	2 byte	9.001	C, -, T, R	
Description	2-byte object for the output of the current temperature setpoint. Depending on the operating mode, the possible range of values is limited by the configured frost protection and/or heat protection temperature. The temperature value is always output in the format "°C".					

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

**Object for basic setpoint shift (only for relative setpoint presetting)**

Function: Basic setpoint shift

Object	Function	Name	Type	DPT	Flag
 106	Acknowledge setpoint shift	C.Output	1 byte	6.010	C, -, T, R

Description 1-byte object for giving feedback on the current setpoint shifting. The value of a counter value in the communication object is 0.5 K. The value "0" means that no shift is active. The value is depicted in a double complement in the positive and negative direction.  
This object is only available in this way if relative setpoint presetting is configured.

Function: Basic setpoint shift

Object	Function	Name	Type	DPT	Flag
 107	Setpoint shift specification	C.Input	1 byte	6.010	C, W, -, (R) 1

Description 1-byte object for setting a basic setpoint shifting, e.g. via a controller extension. The value of a counter value in the communication object is 0.5 K. The value "0" means that no shift is active. The value is depicted in a double complement in the positive and negative direction.  
In case the limits of the value range are exceeded by the preset external value, the controller will automatically reset the received value to the minimum and maximum limits.  
This object is only available in this way if relative setpoint presetting is configured.

**Object for room temperature measurement (Part 2)**

Function: Room temperature measurement

Object	Function	Name	Type	DPT	Flag
 109	Actual temp. not adjusted	C.Output	2 byte	9.001	C, -, T, R

Description 2-byte object for following-up the determined and unadjusted room temperature value.  
The temperature value is always output in the format "°C".

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

2: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

**Objects for fan control (Part 1)**

Function: Fan controller

Object	Function	Name	Type	DPT	Flag
 110	Ventilation, automatic/manual	C.Input	1-bit	1.001	C, W, T, (R) <sup>1</sup>

Description 1-bit object to change-over the operating mode of the fan controller (configurable polarity). When the operating mode is changed over using a push-button function, a telegram matching the current status is transmitted to the bus.

Function: Fan controller

Object	Function	Name	Type	DPT	Flag
 111	Ventilation, fan level 1-8	C.Output	1-bit	5.010	C, -, T, R

Description 1-byte object for value-guided activation of the fan levels. This object is only available in this way when the fan control is to take place over 1 byte (parameter-dependent).

Function: Fan controller

Object	Function	Name	Type	DPT	Flag
 111	Ventilation, fan level 1	C.Output	1-bit	1.001	C, -, T, R

Description 1-bit object for switching activation of the first fan level. This object is only available in this way when the fan control is to take place over 3 x 1 bit and at least one fan level is enabled (parameter-dependent).

Function: Fan controller

Object	Function	Name	Type	DPT	Flag
 112	Ventilation, fan level 2	C.Output	1-bit	1.001	C, -, T, R

Description 1-bit object for switching activation of the second fan level. This object is only available when the fan control is to take place over 3 x 1 bit and at least two fan levels are enabled (parameter-dependent).

Function: Fan controller

Object	Function	Name	Type	DPT	Flag
 113	Ventilation, fan level 3	C.Output	1-bit	1.001	C, -, T, R

Description 1-bit object for switching activation of the third fan level. This object is only available when the fan control is to take place over 3 x 1 bit and at least three fan levels are enabled (parameter-dependent).

1: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function: Fan controller

Object	Function	Name	Type	DPT	Flag
 <sup>114</sup>	Ventilation, fan level 4	C.Output	1-bit	1.001	C, -, T, R

Description 1-bit object for switching activation of the fourth fan level. This object is only available when the fan control is to take place over 3 x 1 bit and at least four fan levels are enabled (parameter-dependent).

---

Function: Fan controller

Object	Function	Name	Type	DPT	Flag
 <sup>115</sup>	Ventilation, fan level 5	C.Output	1-bit	1.001	C, -, T, R

Description 1-bit object for switching activation of the fifth fan level. This object is only available when the fan control is to take place over 3 x 1 bit and at least five fan levels are enabled (parameter-dependent).

---

Function: Fan controller

Object	Function	Name	Type	DPT	Flag
 <sup>116</sup>	Ventilation, fan level 6	C.Output	1-bit	1.001	C, -, T, R

Description 1-bit object for switching activation of the sixth fan level. This object is only available when the fan control is to take place over 3 x 1 bit and at least six fan levels are enabled (parameter-dependent).

---

Function: Fan controller

Object	Function	Name	Type	DPT	Flag
 <sup>117</sup>	Ventilation, fan level 7	C.Output	1-bit	1.001	C, -, T, R

Description 1-bit object for switching activation of the seventh fan level. This object is only available when the fan control is to take place over 3 x 1 bit and at least seven fan levels are enabled (parameter-dependent).

---

Function: Fan controller

Object	Function	Name	Type	DPT	Flag
 <sup>118</sup>	Ventilation, fan level 8	C.Output	1-bit	1.001	C, -, T, R

Description 1-bit object for switching activation of the eighth fan level. This object is only available when the fan control is to take place over 3 x 1 bit and at least eight fan levels are enabled (parameter-dependent).

---

---

Function: Fan controller

Object	Function	Name	Type	DPT	Flag
 119	Ventilation, forced position	C.Input	1-bit	1.001	C, W, -, (R) 1

Description 1-bit object for activation of the fan forced position. Polarity:  
Forced position ON = "1"; Forced position OFF = "0".

---

Function: Fan controller

Object	Function	Name	Type	DPT	Flag
 120	Ventilation, level limit	C.Input	1-bit	1.001	C, W, -, (R) 1

Description 1-bit object for activation of the fan level limitation. Polarity:  
Fan level limitation ON = "1"; Fan level limitation OFF = "0".

---

Function: Fan controller

Object	Function	Name	Type	DPT	Flag
 121	Ventilation, fan protection	C.Input	1-bit	1.001	C, W, -, (R) 1

Description 1-bit object for activating the fan protection. Polarity:  
Fan protection ON = "1" / Fan protection OFF = "0".

---

### Object for detecting the outdoor temperature

Function: Outdoor temperature

Object	Function	Name	Type	DPT	Flag
 122	Outdoor temperature	C.Input	2 byte	9.001	C, W, T, (R) <sup>2</sup>

Description 2-byte object for detecting the outdoor temperature. The received value is used solely for the display. Possible range of values: -99.9 °C to +99.9 °C.  
The temperature value must always be specified in the format "°C".

---

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

2: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

**Object for limiting the setpoint temperature**

Function: Setpoint temperature limit

Object	Function	Name	Type	DPT	Flag
 123	Limit of cooling setpoint temperature	C.Input	1-bit	1.001	C, W, -, (R) 1

Description 1-bit object for activating the setpoint temperature limit. Polarity:  
Setpoint temperature limit ON = "1"; Setpoint temperature limit OFF = "0".**Object for limiting the floor temperature**

Function: Floor temperature limitation

Object	Function	Name	Type	DPT	Flag
 124	Floor temperature	C.Input	2 byte	9.001	C, W, -, (R) 1

Description 2-byte object for coupling an external temperature sensor for floor temperature limitation.  
The temperature value must always be specified in the format "°C".**Objects to display timer channels**

Function: Display of timer switching channels

Object	Function	Name	Type	DPT	Flag
 125	Timer switching channel 1	C.Input	1-bit	1.001	C, W, -, (R) 1

Description One-bit object to control the timer switch symbol of the first timer switch channel on the display.  
Polarity: ON symbol = "1"; OFF symbol = "0".

Function: Display of timer switching channels

Object	Function	Name	Type	DPT	Flag
 126	Timer switching channel 2	C.Input	1-bit	1.001	C, W, -, (R) 1

Description One-bit object to control the timer switch symbol of the second timer switch channel on the display.  
Polarity: ON symbol = "1"; OFF symbol = "0".

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

---

Function: Display of timer switching channels

Object	Function	Name	Type	DPT	Flag
 127	Timer switching channel 3	C.Input	1-bit	1.001	C, W, -, (R) 1

Description One-bit object to control the timer switch symbol of the third timer switch channel on the display.  
Polarity: ON symbol = "1"; OFF symbol = "0".

---

Function: Display of timer switching channels

Object	Function	Name	Type	DPT	Flag
 128	Timer switching channel 4	C.Input	1-bit	1.001	C, W, -, (R) 1

Description One-bit object to control the timer switch symbol of the fourth timer switch channel on the display.  
Polarity: ON symbol = "1"; OFF symbol = "0".

---

### Objects for fan control (Part 2)

---

Function: Fan controller

Object	Function	Name	Type	DPT	Flag
 129	Ventilation visualisation	C.Output	1 byte	5.010	C, -, T, R

Description 1-byte object for additional value-guided acknowledgement of the active fan level. Value meaning: "0" = Fan OFF, "1" = level 1 active, "2" = level 2 active, ..., "8" = level 8 active.

---

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

#### 4.2.3.3 Display object table

##### Objects for display control

Function: Time

Object Function

 <sup>130</sup> Time

Name

D.Input

Type

3 byte

DPT

10.001

Flag

<sub>1</sub> C, W, -, (R)

Description 3-byte object for receiving the current time via the bus. The time can be shown on the display (parameter-dependent).

Function: Date

Object Function

 <sup>131</sup> Date

Name

D.Input

Type

3 byte

DPT

11.001

Flag

<sub>1</sub> C, W, -, (R)

Description 3-byte object for receiving the current date via the bus. The date can be shown on the display (parameter-dependent).

Function: Date/time

Object Function

 <sup>132</sup> Request date / time

Name

D.Output

Type

1-bit

DPT

1.003

Flag

<sub>2</sub> K, -, U, (L)

Description One-bit object for the synchronisation of the internal clock. If the time information is invalid, the device uses this object to request the current time and date once only by sending a read telegram to the bus. The read request must then be confirmed by another bus subscriber (e.g. KNX system clock) using a response telegram to the "Time" and "Date" objects.

Function: Display brightness

Object Function

 <sup>133</sup> Display On/Off

Name

D.Input

Type

1-bit

DPT

1.001

Flag

<sub>1</sub> C, W, -, (R)

Description One-bit object for switching control of the display lighting ("1" = configured maximum brightness, "0" = 5% minimum brightness).

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

2: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function: Display brightness

Object	Function	Name	Type	DPT	Flag
 133	Display brightness	D.Input	1 byte	5.001	C, W, -, (R) 1

Description One-byte object for level change-over of the display brightness ("0" = 5% minimum brightness, "1" = Level 1 60%, "2" = Level 2 80%, "3" = Level 3 100%, "4"..."255" = no reaction).

### Objects for info mode

---

Function: Info mode

Object	Function	Name	Type	DPT	Flag
 134	Info mode	D.Input / Output	1-bit	1.001	C, W, (T), (R) <sup>2</sup>

Description One-bit object, with which the information mode can be switched on or off or the status of the information mode can be transmitted to the bus. The information mode can also be controlled using the menu control of the second operating level or the parameterisation.  
The object is rendered invisible when the parameter "Information displays after initialisation" is configured to OFF. If status feedback is required via this object, then the "T" flag must be set.

### Objects for controlling the display pages and the display contents

---

Function: Open page

Object	Function	Name	Type	DPT	Flag
 135	Fixed page recall	D.Input	1-bit	1.001	C, W, -, (R) 1

Description One-bit object, with which a specially parameterised page can be shown in the display. This object is only visible when a page recall should take place via the switching object.

---

Function: Open page

Object	Function	Name	Type	DPT	Flag
 135	Variable page recall	D.Input	1 byte	5.010	C, W, -, (R) 1

Description One-bit object, with which any page can be shown in the display, controlled by the value. This object is only visible when a page recall should take place via the value object.

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

2: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function: Control of display information

Object	Function	Name	Type	DPT	Flag
 136, 137, 138, 140, 141, 142, 144, 145, 146, 148, 149, 150	Switching	D.Input [Page 1...4 row 1...3]	1-bit	1.001	C, W, -, (R) 1

Description One-bit object, which can receive the switching status to be shown on the display.  
This object is available separately, depending on the ETS configuration for lines 1...3 of pages 1...4 (coding in the object name).

---

Function: Control of display information

Object	Function	Name	Type	DPT	Flag
 136, 137, 138, 140, 141, 142, 144, 145, 146, 148, 149, 150	Dimming value	D.Input [Page 1...4 row 1...3]	1 byte	5.001 5.010	C, W, -, (R) 1

Description One-byte object, which can receive values, e.g. dimming values of lighting, to be shown on the display.  
This object is available separately, depending on the ETS configuration for lines 1...3 of pages 1...4 (coding in the object name).

---

Function: Control of display information

Object	Function	Name	Type	DPT	Flag
 136, 137, 138, 140, 141, 142, 144, 145, 146, 148, 149, 150	Value, 1-byte	D.Input [Page 1...4 row 1...3]	1 byte	5.0xx 6.0xx	C, W, -, (R) 1

Description One-byte object, which can receive values to be shown on the display.  
Various options for value formatting (static text, value conversion, unit text) are available, depending on the selected data point type in the ETS.  
This object is available separately, depending on the ETS configuration for lines 1...3 of pages 1...4 (coding in the object name).

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

---

Function: Control of display information

Object	Function	Name	Type	DPT	Flag
 136, 137, 138, 140, 141, 142, 144, 145, 146, 148, 149, 150	Value, 2-byte	D.Input [Page 1...4 row 1...3]	2 byte	7.xxx 8.xxx 9.xxx	C, W, -, (R) 1

Description Two-byte object, which can receive values to be shown on the display. Various options for value formatting (static text, value conversion, unit text) are available, depending on the selected data point type in the ETS. This object is available separately, depending on the ETS configuration for lines 1...3 of pages 1...4 (coding in the object name).

---

Function: Control of display information

Object	Function	Name	Type	DPT	Flag
 136, 137, 138, 140, 141, 142, 144, 145, 146, 148, 149, 150	Value, 4-byte	D.Input [Page 1...4 row 1...3]	4 byte	12.xxx 13.xxx 14.xxx	C, W, -, (R) 1

Description Four-byte object, which can receive values to be shown on the display. Various options for value formatting (static text, value conversion, unit text) are available, depending on the selected data point type in the ETS. This object is available separately, depending on the ETS configuration for lines 1...3 of pages 1...4 (coding in the object name).

---

Function: Control of display information

Object	Function	Name	Type	DPT	Flag
 136, 137, 138, 140, 141, 142, 144, 145, 146, 148, 149, 150	Venetian blind	D.Input [Page 1...4 row 1...3]	1-bit	1.008	C, W, -, (R) 1

Description One-bit object, which can receive drive control telegrams (long-time operation) to be shown on the display. This object is available separately, depending on the ETS configuration for lines 1...3 of pages 1...4 (coding in the object name).

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

---

Function: Control of display information

Object	Function	Name	Type	DPT	Flag
 136, 137, 138, 140, 141, 142, 144, 145, 146, 148, 149, 150	Light scene	D.Input [Page 1...4 row 1...3]	1 byte	18.001	C, W, -, (R) 1

Description One-byte object, which can receive scene numbers to be shown on the display.

This object is available separately, depending on the ETS configuration for lines 1...3 of pages 1...4 (coding in the object name).

---

Function: Control of display information

Object	Function	Name	Type	DPT	Flag
 136, 137, 138, 140, 141, 142, 144, 145, 146, 148, 149, 150	ASCII, 14-bytes	D.Input [Page 1...4 row 1...3]	14 Byte	16.00x	C, W, -, (R) 1

Description Fourteen-byte object, which can receive ASCII character chains of maximum 14 characters to be shown on the display.

This object is available separately, depending on the ETS configuration for lines 1...3 of pages 1...4 (coding in the object name).

---

Function: Control of display information

Object	Function	Name	Type	DPT	Flag
 136, 137, 138, 140, 141, 142, 144, 145, 146, 148, 149, 150	ASCII text, 14-byte	D.Input [Page 1...4 row 1...3]	14 Byte	16.00x	C, W, -, (R) 1

Description 14-byte object, which can receive ASCII character chains of maximum 14 characters to show a running text on the display.

This object is available separately, depending on the ETS configuration for lines 1...3 of pages 1...4 (coding in the object name).

---

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

---

Function: Control of display information

Object	Function	Name	Type	DPT	Flag
 136, 137, 138, 140, 141, 142, 144, 145, 146, 148, 149, 150	ASCII text supp., 14-byte	D.Input [Page 1...4 row 1...3]	14 Byte	16.00x	C, W, -, (R) 1

Description 14-byte object, which can receive ASCII character chains of maximum 14 characters to show a running text on the display (Part 2 of the running text). This object is available separately, depending on the ETS configuration for lines 1...3 of pages 1...4 (coding in the object name).

---

Function: Symbol recall

Object	Function	Name	Type	DPT	Flag
 139, 143, 147, 151	Symbol recall, page 1...4	D.Input	1-bit	1.001	C, W, -, (R) 1

Description One-bit object, with which a large symbol (30 x 30 pixels) defined in the ETS can be displayed on the right-hand edge of the display in the graphic area. This object is only visible when the symbol is to be recalled via the 1-bit object. The object is available separately for each display page (assignment indicated in the object name).

---

Function: Symbol recall

Object	Function	Name	Type	DPT	Flag
 139, 143, 147, 151	Symbol recall, page 1...4	D.Input	1 byte	5.010	C, W, -, (R) 1

Description One-byte object, with which one of the large symbols (30 x 30 pixels) defined in the device memory can be displayed on the right-hand edge of the display in the graphic area. This object is only visible when the symbol is to be recalled via the 1-byte object. The 1-byte object possesses the data point type "ShowElementNo". This is an unsigned integer. Possible object values are...  
0 = Hide symbol  
1 = Show symbol no. 1  
2 = Show symbol no. 2  
...  
255 = Show symbol no. 255  
In the as-delivered state, thirty symbols are predefined in the room controller module. If the object receives a value for which no symbol exists, the value is ignored.  
The object is available separately for each display page (assignment indicated in the object name).

---

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

---

Function:	Display of a central alarm system message				
Object	Function	Name	Type	DPT	Flag
 152, 153, 154	Alarm central unit rows 1...3	D.Input	14 Byte	16.00x	C, W, -, (R) 1
Description	Fourteen-byte objects which can receive separate 3-line texts from an alarm control centre to be shown on the display. The message contents are prescribed by the alarm control centre and recalled or acknowledged by the 1-bit object "Alarm control centre selection".				
Function:	Display of a central alarm system message				
Object	Function	Name	Type	DPT	Flag
 155	Alarm contr. centre, selection	D.Output	1-bit	1.001	C, -, T, (R) 2
Description	One-bit object with which signal messages of an alarm control centre can be polled or acknowledged. The alarm control centre sends the message texts back to the objects "Alarm control centre, line 1...3".				

---

### **Additional objects for display control with a controller extension**

---

Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 100	Command value for heating	D.Input Controller ext.	1 byte	5.001	C, W, -, (R) 1
Description	1-byte object to evaluate the continuous command value of the heating mode on the controller extension. This object is only available in this way if the adaptation of the type of feedback control is configured to "Continuous PI feedback control" in the controller extension. This object should be connected to the main controller object with the same function.				
Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 100	Cmd. value heating/cooling	D.Input Controller ext.	1 byte	5.001	C, W, -, (R) 1
Description	1-byte object to evaluate the combined continuous command value of the heating and cooling mode on the controller extension. This object is only available in this way if the controller outputs the command values for heating and cooling mode to a shared object and the mode adaptation of feedback control is configured to "Continuous PI feedback control" in the controller extension. This object should be connected to the main controller object with the same function.				

---

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

2: For reading, the R-flag must be set. The last value written to the object via the bus or by the device will be read.

---

Function:	Command value					
Object	Function	Name	Type	DPT	Flag	
 100	Command value for heating (PWM)	D.Input Controller ext.	1-bit	1.001	C, W, -, (R)	1
Description	1-bit object to evaluate the switching PWM command value of the heating mode on the controller extension. This object is only available in this way if the adaptation of control is configured to "Switching PI control (PWM)" in the controller extension. This object should be connected to the main controller object with the same function.					
Function:	Command value					
Object	Function	Name	Type	DPT	Flag	
 100	Cmd. value heat./cool. (PWM)	D.Input Controller ext.	1-bit	1.001	C, W, -, (R)	1
Description	1-bit object to evaluate the combined switching PWM command value of the heating and cooling mode on the controller extension. This object is only available in this way if the controller outputs the command values for heating and cooling mode to a shared object and the mode adaptation of control is configured to "Switching PI control (PWM)" in the controller extension. This object should be connected to the main controller object with the same function.					
Function:	Command value					
Object	Function	Name	Type	DPT	Flag	
 100	Command value for heating	D.Input Controller ext.	1-bit	1.001	C, W, -, (R)	1
Description	1-byte object to evaluate the switching command value of the heating mode on the controller extension. This object is only available in this way if the adaptation of the type of feedback control is configured to "Switching 2-point feedback control" in the controller extension. This object should be connected to the main controller object with the same function.					
Function:	Command value					
Object	Function	Name	Type	DPT	Flag	
 100	Cmd. value heating/cooling	D.Input Controller ext.	1-bit	1.001	C, W, -, (R)	1
Description	1-bit object to evaluate the combined switching command value of the heating and cooling mode on the controller extension. This object is only available in this way if the controller outputs the command values for heating and cooling mode to a shared object and the adaptation of the type of feedback control is configured to "Switching 2-point feedback control" in the controller extension. This object should be connected to the main controller object with the same function.					

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

---

Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 102	Command value for cooling	D.Input Controller ext.	1 byte	5.001	C, W, -, (R) 1
Description	1-byte object to evaluate the continuous command value of the cooling mode on the controller extension. This object is only available in this way if the adaptation of the type of feedback control is configured to "Continuous PI feedback control" in the controller extension. This object should be connected to the main controller object with the same function.				

---

Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 102	Command value for cooling (PWM)	D.Input Controller ext.	1-bit	1.001	C, W, -, (R) 1
Description	1-bit object to evaluate the switching PWM command value of the cooling mode on the controller extension. This object is only available in this way if the adaptation of control is configured to "Switching PI control (PWM)" in the controller extension. This object should be connected to the main controller object with the same function.				

---

Function:	Command value				
Object	Function	Name	Type	DPT	Flag
 102	Command value for cooling	D.Input Controller ext.	1-bit	1.001	C, W, -, (R) 1
Description	1-bit object to evaluate the switching command value of the cooling mode on the controller extension. This object is only available in this way if the adaptation of the type of feedback control is configured to "Switching 2-point feedback control" in the controller extension. This object should be connected to the main controller object with the same function.				

---

Function:	Display of setpoint temperature				
Object	Function	Name	Type	DPT	Flag
 104	Setpoint temperature	D.Input Controller ext.	2 byte	9.001	C, W, -, - 1
Description	2-byte object for the display of the current temperature setpoint. This object should be connected to the main controller object of the same name.				

---

Function:	Controller status indication				
Object	Function	Name	Type	DPT	Flag
 108	Status signal addition	D.Input Controller ext.	1 byte	--- 2	C, W, T, (R) 1
Description	1-byte object to display various controller states on the controller extension. This object should be connected to the main controller object of the same name.				

1: For reading, the R-flag must be set. The last value written to the object via the bus will be read.

2: Non-standardised DP type.

---

Function: Fan display

Object	Function	Name	Type	DPT	Flag
 129	Ventilation visualisation	D.Input Controller	1 byte	5.010	C, W, T, R

Description 1-byte object to display the active fan level on the controller extension. This object should be connected to the object of the same name in the main controller. Value meaning: "0" = Fan OFF, "1" = level 1 active, "2" = level 2 active, ..., "8" = level 8 active.

#### 4.2.4 Functional description

##### 4.2.4.1 Push button sensor

###### 4.2.4.1.1 Operation concept and button evaluation

###### Control surfaces

The device consists of two mechanically-separated control surfaces, which can be optionally extended to up to 6 control surfaces through the connection of an extension module. The control surfaces are the design covers attached to the device with push button elements underneath.



Figure 12: Arrangement of the control surfaces on the front of the device  
left: basic device, right: with extension module (here 4-way)

(20) Control surfaces incl. status LED

Function: Any desired pushbutton sensor function or controller operation. Operation in the second display operating level (rockers 1 & 2).

The control surfaces are allocated to the pushbutton sensor function. The function of these rockers can also be configured in the ETS to any desired push button sensor function. Alternatively it is possible to set operation of the integrated room temperature controller. It is also possible to activate and operate the second display operating level via button evaluation of these surfaces.

The push button sensor function is an independent function section of the device with its own parameter blocks in the ETS. Insofar as the control surfaces are to operate the integrated room temperature controller, the following functions can be parameterised in the pushbutton configuration: setpoint shift, presence button, operating mode change-over, fan control.

Optionally, the number of control surfaces can be expanded to include up to 4 additional ones by connecting an extension module to the room controller module. The configuration and commissioning of the extension module are clearly structured and easy to perform using the application program of the room controller module. The control surfaces of the extension module can be set in the ETS to any desired pushbutton sensor function, or also to controller operation.

For each control surface, the device has two status LEDs which can be internally connected to the operating function, depending on the function of the rocker or button. Each status LEDs can then also signal completely independent display information, operating states of room temperature controllers or indicate the results of logic value comparisons, flash or be permanently switched on or off. The control surface next to the display does not have status LEDs.

### **Button configuration**

Button configuration defines whether an extension module is connected to the room controller module. A push-button extension module expands the number of control surfaces in addition to the control surfaces of the room controller module, so that up to four rockers more are available (figure 13).

The rockers or buttons of the extension module are evaluated by the application program of the room controller module. In addition, each control surface of the extension module has two status LEDs that are also activated by the application program of the room controller module. Consequently, an extension module does not have any application or bus coupling module of its own and is configured and put into operation in the ETS via the product database of the room controller module. Only one room controller module can be connected to each extension module.

Configuration of the control surfaces of the connected extension module is carried out in the ETS in the parameter node "Button configuration". The button configuration of the room controller module is defined by the application program used in the ETS project and cannot be changed.

If a push-button extension module is connected, the module type must be configured in the ETS. For this, the parameter "Type of extension module" must be set to the appropriate module type. The module control surfaces enabled in this manner are displayed and configured in the ETS in the same way as the rockers or buttons of the room controller module.

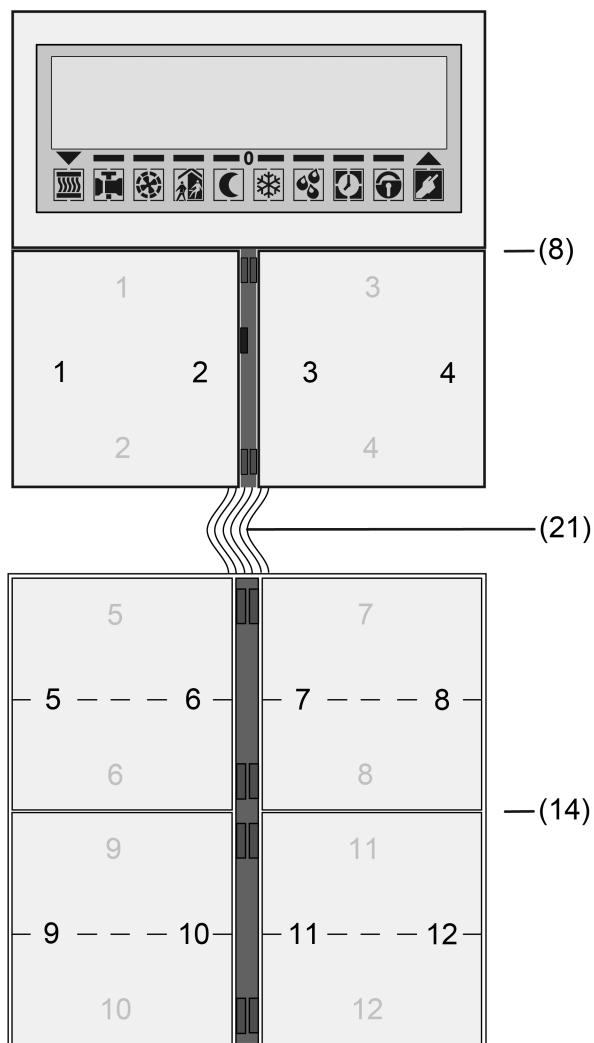


Figure 13: Example of button pair/control surface numbering in connection with a 4gang extension module

- (8) Room controller module
- (14) Push-button extension module
- (21) Module connecting cable

**i** The numbers (1...12) on the surfaces identify the button numbers.  
Black: button arrangement "left/right" / grey: button arrangement "top/bottom"

### Operation concept and button evaluation

In the ETS, the change-over between rocker and button operation of a control surface takes place on the "Operation concept..." parameter page..

The "Operation concept..." parameters specify for each control surface whether the button pair in question is combined into a common rocker function, or alternatively is divided into two separate push-button functions.

The additional parameter pages and the communication objects of the rockers or buttons are then also created and adapted depending on the setting parameterized here.

**i** Pressing several rockers or buttons at the same time will be considered as a wrong operation. The special rocker function "Full-surface operation" is an exception to the above rule. In this case, the parameterisation of the rocker decides whether the operation is a wrong operation or not.  
A button evaluation that has been begun is continued until all buttons have been released.

#### Button pair as rocker function

If a control surface is used as a rocker, both actuation points jointly affect the communication objects that are assigned to the rocker. As a rule, actuation of the two actuation points then result in directly opposite information (e.g. switching: ON - OFF / blind: UP - DOWN). Generally the commands when a button is pressed should be made independently of each other.

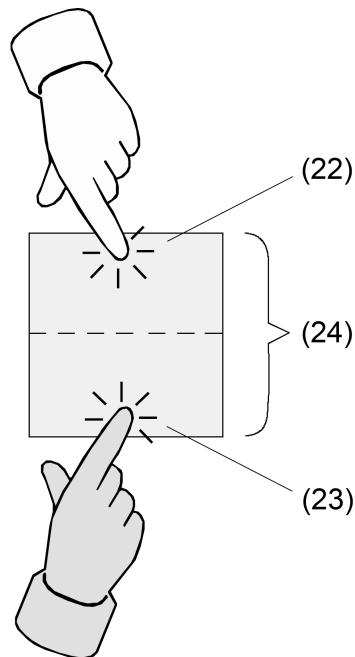


Figure 14: Example of rocker actuation

(22) Actuation point X.1

(23) Actuation point X.2

(24) Control surface as rocker with two actuation points

**i** Depending on the button arrangement configured in the ETS, the actuation points can be arranged either top / bottom or left / right. The example illustration shows a top / bottom button arrangement.

#### Full-surface operation with rocker function

Depending on the basic function of a rocker, it is also possible with some settings to use a press on the full surface with a separate function.

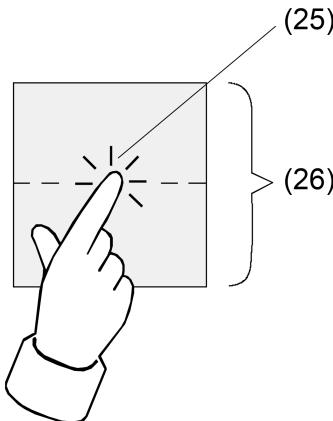


Figure 15: Example of full-surface actuation

(25) Actuation point for full-surface operation

(26) Control surface as rocker with full-surface operation

#### Button pair as push-button function

In push-button operation, a distinction is made whether the control surface is divided into two separate and functionally independent buttons (double-surface operation), or whether a control surface functions as a single "large" button (single-surface operation).

The parameter "Button evaluation" configures either double-surface or single-surface operation for each button pair.

In double-surface operation the buttons are configured independently of each other, and can fulfil completely different functions (e.g. switching: TOGGLE – thermostat operating mode: Comfort). Full-surface actuation of an operating area is not possible as a push button function.

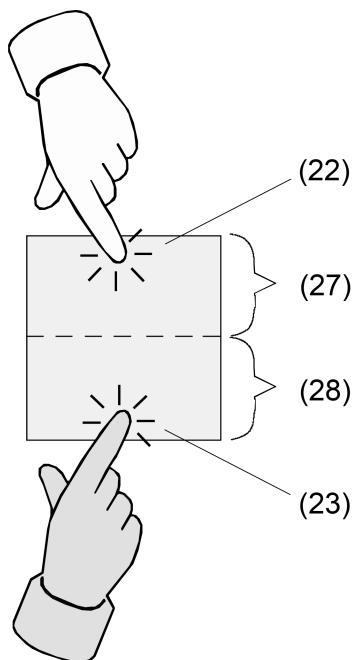


Figure 16: Example of button actuation with double-surface operation

(22) Actuation point for button X ( $X = 1, 3, 5, \dots$ )

(23) Actuation point for button Y ( $Y = 2, 4, 6, \dots$ )

(27) First part of the control surface as button with a single actuation point

(28) Second part of the control surface as button with a single actuation point

- i** Depending on the button arrangement configured in the ETS, the buttons and thus the actuation points of a control surface can be arranged either top / bottom or left / right for double-surface operation of the buttons. The example illustration shows a top / bottom button arrangement. With single-surface operation the button arrangement cannot be adjusted, because there is only one button per control surface.

In single-surface operation, the entire control surface is evaluated only as a single "large" button. This button is configured independently of the other buttons or rockers of the push button sensor and can fulfil various functions (e.g. Switching: TOGGLE).

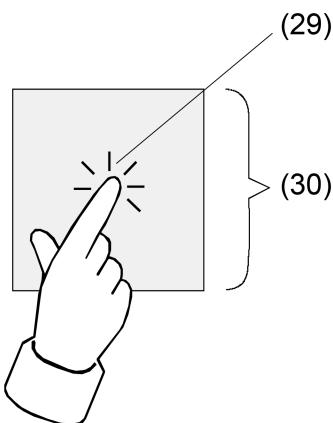


Figure 17: Example of button actuation in single-surface operation

(29) Actuation point for button X (X = 1, 3, 5, ...)

(30) Entire control surface as button with a single actuation point

- i** An operating area is always created in the ETS as a button pair. However, because in single-surface operation only one button functionally exists, the second button of the button pair has no function and is physically not present. During configuration in the ETS it is shown without any further button parameters. Only the status LED of this button which is physically not used can be configured separately and if needed also activated via its own communication object.  
The physically present button which is to be evaluated in single-surface operation is always created as a button with an uneven button number. If, for example, the first operating area of a push button sensor is configured to single-surface operation, then button 1 can be configured in the ETS. Button 2 is then the physically not present button without parameters.

### Button arrangement

On the parameter page "Operation concept", it is possible to set, for each button pair of a control surface configured in the ETS as a rocker function or as a double-surface push-button function, how the buttons are to be arranged on the surface, i.e. where the actuation points are located.

Here the parameter "Button arrangement" specifies the actuation point evaluation.

In the default setting the two actuation points of a control surface are arranged vertically (top / bottom) (figure 18). Alternatively the actuation points can be arranged horizontally (left / right) (figure 19).

The following illustrations show examples of the button arrangements of the control surfaces of rockers 1 & 2.



Figure 18: button arrangement "top / bottom"

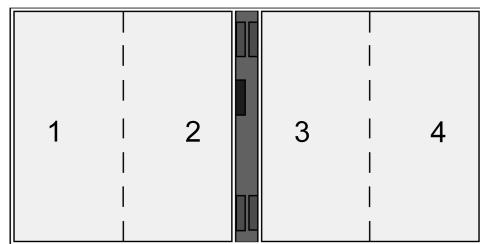


Figure 19: button arrangement "left / right"

It is also possible to combine different button arrangement in the same push-button sensor (figure 20).



Figure 20: Different button configurations in the same push-button sensor

- i** The configuration can still be changed later on. Assigned group addresses or parameter settings remain unaffected by such changes.

#### 4.2.4.1.2 Switching function

For each rocker or each button with the function set to "Switching", the ETS indicates a 1-bit communication object. The parameters of the rocker or button permit fixing the value this object is to adopt on pressing and / or on releasing (ON, OFF, TOGGLE – toggling of the object value). No distinction is made between a brief or long press.

The status LEDs can be configured independently (see chapter 4.2.4.1.14. Status LED).

#### 4.2.4.1.3 Dimming function

For each rocker or each button with the function set to "Dimming", the ETS indicates a 1-bit object and a 4-bit object. Generally, the push button sensor transmits a switching telegram after a brief press and a dimming telegram after a long press. In the standard parameterisation, the push button sensor transmits a telegram for stopping the dimming action after a long press. The time needed by the pushbutton sensor to detect an actuation as a long actuation can be set in the parameters.

The status LEDs can be configured independently (see chapter 4.2.4.1.14. Status LED).

##### Single-surface and double-surface operation in the dimming function

As a rocker, the device is preprogrammed for double-surface actuation for the dimming function. This means that the pushbutton sensor transmits a telegram for switch-on after a brief press and a telegram for increasing the brightness after a long press of the left button ("brighter"). Similarly, the pushbutton sensor transmits a telegram for switch-off after a brief press and a telegram for reducing the brightness after a long press on the right button ("darker").

As a button, the device is preprogrammed for single-surface actuation for the dimming function. In this mode, the push button sensor transmits on each brief press ON and OFF telegrams in an alternating pattern ("TOGGLE"). After a long press, the push button sensor transmits "brighter" and "darker" telegrams in an alternating pattern.

The parameter "Command on pressing the button" or Command on pressing the rocker" on the parameter pages of the buttons or rockers defines the single-surface or double-surface operation principle for the dimming function.

For the rocker and also for the button function, the command issued on pressing the button or rocker can basically be selected at the user's discretion.

##### Advanced parameters

For the dimming function, the pushbutton sensor can be programmed with advanced parameters which are hidden in the standard view for greater clarity. If necessary, these advanced parameters can be activated and thus be made visible.

The advanced parameters can be used to determine whether the pushbutton sensor is to cover the full adjusting range of the actuator with one dimming telegram continuously ("Increase brightness by 100 %", "Reduce brightness by 100 %") or whether the dimming range is to be divided into several small levels (50 %, 25 %, 12.5 %, 6 %, 3 %, 1.5 %).

In the continuous dimming mode (100%), the push button sensor transmits a telegram only at the beginning of the long press to start the dimming process and generally a stop telegram after the end of the press. For dimming in small levels it may be useful if the push button sensor repeats the dimming telegram in case of a sustained press for a presettable time (parameter "Telegram repetition"). The stop telegram after the end of the press is then not needed.

When the parameters are hidden ("Advanced parameters = deactivated"), the dimming range is set to 100 %, the stop telegram is activated and the telegram repetition is deactivated.

##### Full-surface operation

When a rocker is used for dimming, the push button sensor needs some time at the beginning of each operation in order to distinguish between a short and a long operation. When the full-surface operation is enabled in the ETS, the pushbutton sensor can make use of this time span to evaluate the otherwise invalid simultaneous actuation of both actuation points.

The pushbutton sensor detects a full-surface operation of a rocker if a control surface is depressed over a large area so that both buttons of the rocker are actuated.

When the pushbutton sensor has detected a valid full-surface actuation, the operation LED flashes quickly at a frequency of about 8 Hz for the duration of such actuation. Full-surface operation must have been detected before the first telegram has been transmitted by the dimming function (switching or dimming). If this is not so, even a full-surface operation will be interpreted as a wrong operation and not be executed.

Full-surface actuation is independent. It has a communication object of its own and can optionally be used for switching (ON, OFF, TOGGLE – toggling of the object value) or for scene recall without or with storage function. In the last case, a press on the full surface causes a scene to be recalled in less than a second. If the push button sensor is to send the telegram for storing a scene, full-surface actuation must be maintained for more than five seconds. If full-surface actuation ends between the first and the fifth second, the push button sensor will not send any

telegrams. If the status LEDs of the rocker are used as "button-press displays", they will light up for three seconds during transmission of the storage telegram.

- i Full-surface actuation cannot be configured in the push button functions.

#### 4.2.4.1.4 Venetian blind function

For each rocker or button with the function set to "Venetian blind", the ETS indicates the two 1-bit objects "Short-time operation" and "Long-time operation".

The status LEDs can be configured independently (see chapter 4.2.4.1.14. Status LED).

##### Operation concept for the Venetian blind function

For the control of Venetian blind, roller shutter, awning or similar drives, the push button sensor supports four operation concepts in which the telegrams are transmitted in different time sequences. The push button can therefore be used to operate a wide variety of drive configurations.

The different operation concepts are described in detail in the following chapters.

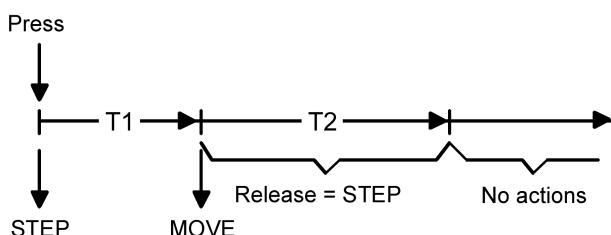


Figure 21: Operation concept "short – long – short"

##### Operation concept "short - long - short":

In the operation concept "short – long – short", the push button sensor shows the following behaviour:

- Immediately on pressing the button, the push button sensor transmits a short time telegram. Pressing the button stops a running drive and starts time T1 ("time between short time and long time command"). No other telegram will be transmitted, if the key is released within T1. This short time serves the purpose of stopping a continuous movement. The "time between short and long time command" in the push button sensor should be selected shorter than the short time operation of the actuator to prevent a jerky movement of the blind.
- If the button is kept depressed longer than T1, the push button sensor transmits a long time telegram after the end of T1 for starting up the drive and time T2 ("slat adjusting time") is started.
- If the button is released within the slat adjusting time, the push button sensor sends another short time telegram. This function is used for adjusting the slats of a blind. The function permits stopping the slats in any position during their rotation. The "slat adjusting time" should be chosen as required by the drive for a complete rotation of the slats. If the "slat adjusting time" is selected longer than the complete running time of the drive, a push button function is possible as well. This means that the drive is active only when the button is kept depressed.
- If the button is kept depressed longer than T2, the push button sensor transmits no further telegram. The drive remains on until the end position is reached.

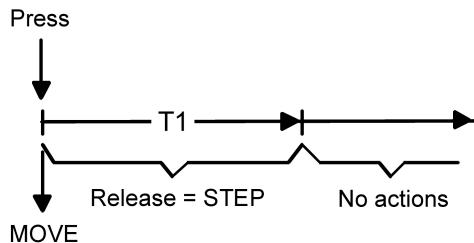


Figure 22: Operation concept "long – short"

#### Operation concept "long – short":

If the operation concept "long – short" is selected, the push button sensor shows the following behaviour:

- Immediately on pressing the button, the push button sensor transmits a long time telegram. The drive begins to move and time T1 ("slat adjusting time") is started.
- If the button is released within the slat adjusting time, the push button sensor transmits a short time telegram. This function is used for adjusting the slats of a blind. The function permits stopping the slats in any position during their rotation. The "slat adjusting time" should be chosen as required by the drive for a complete rotation of the slats. If the "slat adjusting time" is selected longer than the complete running time of the drive, a push button function is possible as well. This means that the drive is active only when the button is kept depressed.
- If the button is kept depressed longer than T1, the push button sensor transmits no further telegram. The drive remains on until the end position is reached.

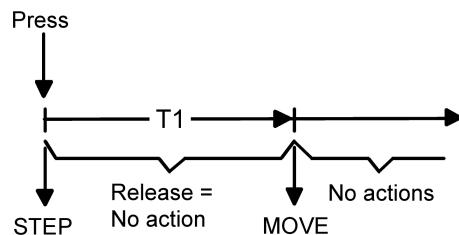


Figure 23: Operation concept "short – long"

#### Operation concept "short – long":

In the operation concept "short – long", the push button sensor shows the following behaviour:

- Immediately on pressing the button, the push button sensor transmits a short time telegram. Pressing the button stops a running drive and starts time T1 ("time between short time and long time command"). No other telegram will be transmitted, if the key is released within T1. This short time serves the purpose of stopping a continuous movement. The "time between short and long time command" in the push button sensor should be selected shorter than the short time operation of the actuator to prevent a jerky movement of the blind.
- If the button is kept depressed longer than T1, the push button sensor transmits a long time telegram after the end of T1 for starting the drive.
- No further telegram is transmitted when the button is released. The drive remains on until the end position is reached.

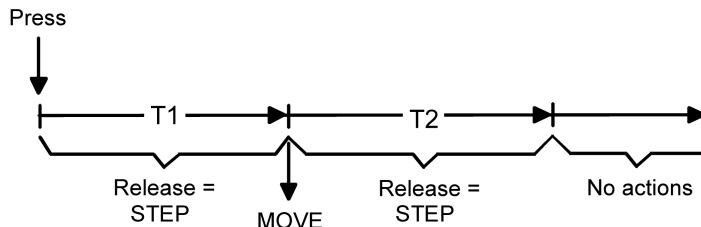


Figure 24: Operation concept "long – short or short"

#### Operation concept "long – short or short":

In the operation concept "long – short or short", the push button sensor shows the following behaviour:

- Immediately on pressing the button, the push button sensor starts time T1 ("time between short and long time command") and waits. If the button is released again before T1 has elapsed, the push button sensor transmits a short time telegram. This telegram can be used to stop a running drive. A stationary drive rotates the slats by one level.
- If the button is kept depressed after T1 has elapsed, the push button sensor transmits a long time telegram and starts time T2 ("slat adjusting time").
- If the button is released within T2, the push button sensor sends another short time telegram. This function is used for adjusting the slats of a blind. The function permits stopping the slats in any position during their rotation.  
The "slat adjusting time" should be chosen as required by the drive for a complete rotation of the slats. If the "slat adjusting time" is selected longer than the complete running time of the drive, a push button function is possible as well. This means that the drive is active only when the button is kept depressed.
- If the button is kept depressed longer than T2, the push button sensor transmits no further telegram. The drive remains on until the end position is reached.

**i** In this operation concept, the push button sensor will not transmit a telegram immediately after depressing one side of the rocker. This principle permits detecting a full-surface operation when the sensor is configured as a rocker.

#### Single-surface and double-surface operation in the blind function

As a rocker, the device is preprogrammed for double-surface actuation for the Venetian blind function. This means, for example, that the pushbutton sensor transmits a telegram for moving upwards on pressing the left button and a telegram for moving downwards on pressing the right button.

As a button, the device is preprogrammed for single-surface actuation for the Venetian blind function. In this case, the push button sensor alternates between the directions of the long time telegram (TOGGLE) on each long actuation of the sensor. Several short time telegrams in succession have the same direction.

The parameter "Command on pressing the button" or "Command on pressing the rocker" on the parameter pages of the buttons or rockers defines the single-surface or double-surface operation principle for the Venetian blind function.

For the button function, the command issued on pressing the button can basically be selected at the user's discretion.

#### Full-surface operation with Venetian blind function

When a rocker is configured for Venetian blind operation and if the operation concept "long – short or short" is used, the push button sensor needs some time at the beginning of each operation in order to distinguish between a short and a long operation. When full-surface operation is enabled, the push button sensor can make use of this time span to evaluate the otherwise invalid simultaneous actuation of both actuation points.

The pushbutton sensor detects a full-surface operation of a rocker if a control surface is depressed over a large area so that both buttons of the rocker are actuated.

When the pushbutton sensor has detected a valid full-surface actuation, the operation LED flashes quickly at a frequency of about 8 Hz for the duration of such actuation. Full-surface operation must have been detected before the first telegram has been transmitted by the Venetian blind function (short time or long time). If this is not so, even a full-surface operation

will be interpreted as a wrong operation and not be executed.

Full-surface actuation is independent. It has a communication object of its own and can optionally be used for switching (ON, OFF, TOGGLE – toggling of the object value) or for scene recall without or with storage function. In the last case, a press on the full surface causes a scene to be recalled in less than a second. If the push button sensor is to send the telegram for storing a scene, full-surface actuation must be maintained for more than five seconds. If full-surface actuation ends between the first and the fifth second, the push button sensor will not send any telegrams. If the status LEDs of the rocker are used as "button-press displays", they will light up for three seconds during transmission of the storage telegram.

- i** Full-surface actuation cannot be configured in the push button functions.

#### 4.2.4.1.5 Value transmitter function

For each rocker or button with the function set to "1-byte value transmitter" or "2-byte value transmitter" the ETS indicates a corresponding object. On the press of a button, the configured value or the value last stored internally by a value change (see below) will be transmitted to the bus. In case of the rocker function, different values can be configured or varied for both buttons.

The status LEDs can be configured independently (see page 97-98).

##### Value ranges

The "Function" parameter determines the value range used by the push button.

As a 1-byte value transmitter, the pushbutton sensor can optionally transmit integers from 0 ... 255 or relative values within a range of 0 ... 100 % (e.g. as dimming value transmitter).

As a 2-byte value transmitter, the pushbutton sensor can optionally transmit integers from 0 ... 65535, temperature values within a range of 0 ... 40 °C or brightness values from 0 ... 1500 lux.

For each of these ranges, the value that can be transmitted to the bus for each actuation of a rocker or button is configurable.

##### Adjustment by means of long button-press

If the value adjustment feature has been enabled in the ETS, the button must be kept depressed for more than 5 seconds in order to vary the current value of the value transmitter.

The value adjustment function continues to be active until the button is released again. In a value adjustment, the push button sensor distinguishes between the following options...

- The "Starting value in case of value adjustment" parameter defines the original starting value for the adjustment. Adjustment can begin from the value configured in the ETS, from the final value of the last adjustment cycle or from the current value of the communication object, with the last option not being available for the temperature and brightness value transmitter.
- The parameter "Direction of value adjustment" defines whether the values will always be increased ("upwards"), always reduced ("downwards") or alternately increased and reduced ("toggling").
- For the value transmitters 0 ... 255, 0 ... 100 % and 0 ... 65535, the "step width" by which the current value is to be changed during the value adjustment can be specified. In case of the temperature and the brightness value transmitter, the step width specifications (1 °C and 50 lux) are fixed.
- The parameter "Time between two telegrams" can be used in connection with the step width to define the time required to cycle through the full respective value range. This value defines the time span between two value transmissions.
- If, during the value adjustment, the push button sensor detects that the preset step width would result in the limits being exceeded with the next telegram, it adapts the step width once in such a way that the respective limit value is transmitted together with last telegram. Depending on the setting of the parameter "Value adjustment with overflow", the push button sensor stops the adjustment at this instance or inserts a pause consisting of two levels and then continues the adjustment beginning with the other limit value.

Type	Function	Lower numerical limit	Upper numerical limit
1-byte value transmitter	0...255	0	255
1-byte value transmitter	0...100 %	0 % (value = 0)	100 % (value = 255)
2-byte value transmitter	0...65535	0	65535
2-byte value transmitter	Temperature value	0 °C	40 °C
2-byte value transmitter	Brightness value	0 lux	1.500 lux

Table 1: Value range limits for the different value transmitters

- During a value adjustment, the newly adjusted values are only in the volatile RAM memory of the push button sensor. Therefore, the stored values are replaced by the preset values programmed in the ETS when a reset of the push button sensor occurs (bus voltage failure or ETS programming).
- In the functions "Always OFF", "Always ON" and "Button-press display", the status LED indicates an active value change when the value of the corresponding button is changed. The status LED is then switched off and will then light up for approx. 250 ms whenever a new value is transmitted.
- With the 1-byte value transmitter in the "Value transmitter 0...100 %" function, the step width of the adjustment will also be indicated in "%". If the starting value of the communication object is used, it may happen in this case during value adjustment that the value last received via the object must be rounded and adapted before a new value can be calculated on the basis of the step width and transmitted. Due to the computation procedure used, the new calculation of the value may be slightly inaccurate.

### Value adjustment examples

Configuration example:

- Value transmitter 1-byte (all other value transmitters identical)
- Function = value transmitter 0...255
- Value configured in the ETS (0...255) = 227
- Step width (1...10) = 5
- Start on value adjustment = same as configured value
- Direction of value adjustment = toggling (alternating)
- Time between two telegrams = 0.5 s

Example 1: Value adjustment with overflow? = No

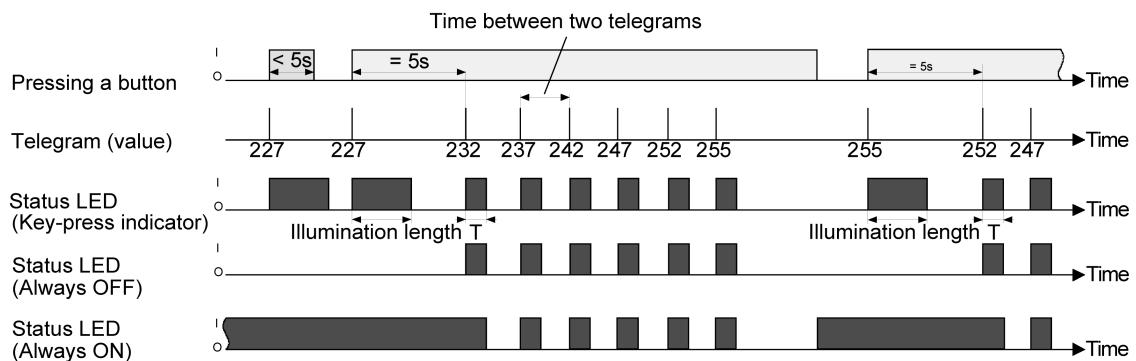


Figure 25: Example of value adjustment without value range overflow

Example 2: Value adjustment with overflow? = Yes

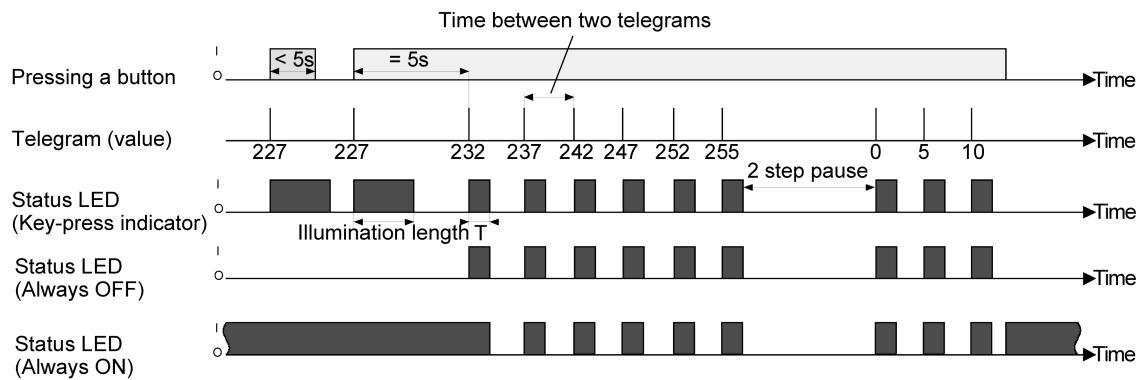


Figure 26: Example of value adjustment with value range overflow

#### 4.2.4.1.6 Scene extension function

For each rocker or button with the function set to "scene extension unit" the ETS indicates the "Function" parameter which distinguishes between the following settings...

- "Scene extension without storage function",
- "Scene extension with storage function",
- "Recall internal scene without storage function"
- "Recall internal scene with storage function".

In the scene extension function, the push button sensor transmits a preset scene number (1...64) via a separate communication object to the bus after a button-press. This feature permits recalling scenes stored in other devices and also storing them, if the storage function is used.

The recall of an internal scene does not result in a telegram being transmitted to the bus. For this reason, the corresponding communication object is missing. This function can rather be used to recall – and with the storage function also to store – the up to 8 scenes stored internally in the device.

In the setting "... without store function", a button-press triggers the simple recall of a scene. If the status LED is configured as button-press display, it will be switched on for the configured ON time. A long button-press has no further or additional effect.

In the setting "... with storage function", the push button sensor monitors the length of the actuation. A button-press of less than a second results in a simple recall of the scene as mentioned above. If the status LED is configured as button-press display, it will be switched on for the configured ON time.

After a button-press of more than five seconds, the push button sensor generates a storage instruction. In the scene extension function, a storage telegram is in this case transmitted to the bus. If configured for the recall of an internal scene, the sensor will store the internal scene. An operation lasting between one and five seconds will be discarded as invalid.

The parameter "Scene number" specifies which of the maximum of 8 internal or 64 external scenes is to be used after a button-press. In case of the rocker function, two different scene numbers can be assigned.

The status LEDs can be configured independently (see chapter 4.2.4.1.14. Status LED).

#### 4.2.4.1.7 2-channel operation function

In some situations it is desirable to control two different functions with a single button-press and to transmit different telegrams, i.e. to operate two function channels at a time. This is possible with the "2-channel operation" function.

For both channels, the parameters "Function channel 1" and "Function channel 2" can be used to determine the communication object types to be used. The following types are available for selection...

- Switching (1 bit)
- Value transmitter 0 ... 255 (1-byte)
- Value transmitter 0 ... 100 % (1-byte)
- Temperature value transmitter (2 bytes)

The object value the push button sensor is to transmit on a button-press can be selected depending on the selected object type. The "Switching (1 bit)" type permits selecting whether an ON or an OFF telegram is to be transmitted or whether the object value is to be switched over (TOGGLE) and transmitted on the press of a button.

The configuration as "Value transmitter 0 ... 255 (1 byte)" or as "Value transmitter 0 ... 100 % (1 byte)" permits entering the object value freely within a range from 0 to 255 or from 0% to 100%. The "Temperature value transmitter (2 bytes)" permits selecting a temperature value between 0°C and 40°C.

In this case, the adjustment of the object value on a long button-press is not possible as the determination of the actuation length is needed for the adjustable operation concepts.

Unlike in the other rocker and button functions, the application software assigns the "Telegram acknowledge" function instead of the "Button-press display" function to the status LED. In this mode, the status LED lights up for approx. 250 ms with each telegram transmitted. As an alternative, the status LEDs can be configured independently (see chapter 4.2.4.1.14. Status LED).

#### Operation concept channel 1 or channel 2

In this operation concept, exactly one telegram will be transmitted on each press of a button.

- On a brief press the push button sensor transmits the telegram for channel 1.
- On a long press the push button sensor transmits the telegram for channel 2.

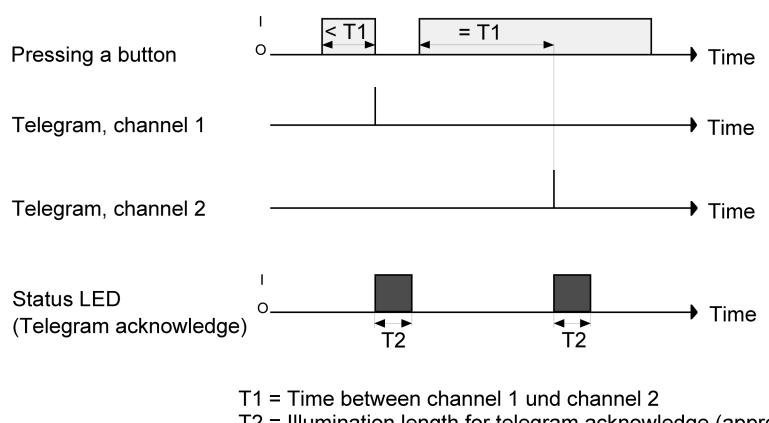


Figure 27: Example of operation concept "Channel 1 or Channel 2"

The time required for distinguishing between a short and a long operation is defined by the parameter "Time between channel 1 and channel 2". If the button is pressed for less than the configured time, only the telegram to channel 1 is transmitted. If the length of the button-press

exceeds the time between channel 1 and channel 2, only the telegram to channel 2 will be transmitted. This concept provides the transmission of only one channel. To indicate that a telegram has been transmitted, the status LED lights up for approx. 250 ms in the "Telegram acknowledge" setting.

In this operation concept, the push button sensor will not transmit a telegram immediately after the rocker has been depressed. This principle also permits the detection of full-surface operation. The settings that are possible with full-surface operation are described below.

#### Operation concept channel 1 and channel 2

With this operation concept, one or alternatively two telegrams can be transmitted on each button-press.

- On a brief press the push button sensor transmits the telegram for channel 1.
- A long press causes the push button sensor to transmit first the telegram for channel 1 and then the telegram for channel 2.

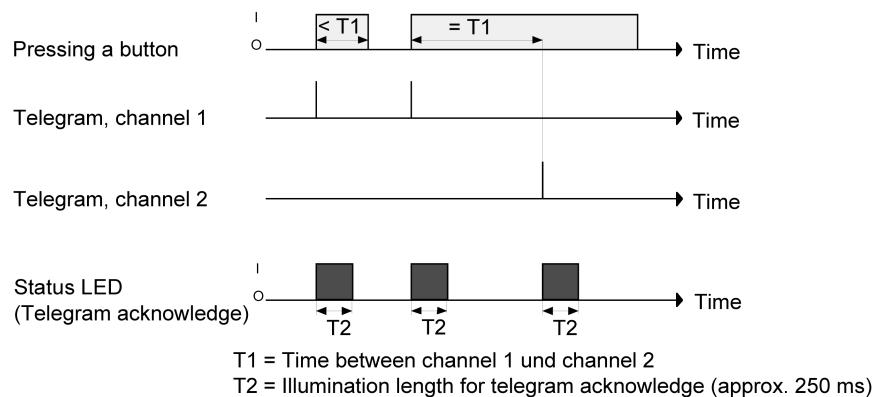


Figure 28: Example for operation concept "Channel 1 and channel 2"

The time required for distinguishing between a short and a long operation is defined by the parameter "Time between channel 1 and channel 2". In this operation concept, a button-press sends this telegram immediately to channel 1. If the button is held depressed for the configured time, the telegram for the second channel is transmitted as well. If the button is released before the time has elapsed, no further telegram will be transmitted. This operation concept, too, offers the configurable possibility of having the transmission of a telegram signalled by the status LED (setting "Telegram acknowledge").

#### Full-surface operation with 2-channel operation

When a rocker is programmed for 2-channel operation and if the operation concept "channel 1 or channel 2" is used, the push button sensor needs some time at the beginning of each operation in order to distinguish between a short and a long operation. When full-surface operation is enabled, the push button sensor can make use of this time span to evaluate the otherwise invalid simultaneous actuation of both actuation points.

The pushbutton sensor detects a full-surface operation of a rocker if a control surface is depressed over a large area so that both buttons of the rocker are actuated.

When the pushbutton sensor has detected a valid full-surface actuation, the operation LED flashes quickly at a frequency of about 8 Hz for the duration of such actuation. The full-surface operation must have been detected before the first telegram has been transmitted by the 2-channel function. If this is not so, even a full-surface operation will be interpreted as a wrong operation and not be executed.

#### 4.2.4.1.8 Controller extension function

The controller extension function can be activated to control a KNX/EIB room temperature controller. The controller extension function is enabled using the "Controller extension" setting of the parameter "Room temperature controller function" in the "Room temperature control" parameter node.

The controller extension is operated using the push button functions of the device. In this way, it is possible to completely control a room temperature controller by changing the operating mode, by predefining the presence situation or by readjusting the setpoint shift. For this purpose, the buttons of the push button sensor selected as extension operation buttons must be configured for the "Controller extension" function.

The operating function of the controller extension is described in detail in the chapter "Room temperature controller extension" (see chapter 4.2.4.1.14. Status LED).

- i** It should be noted that an extension operation is possible with a button configuration. The controller extension function must be enabled in the "Room temperature control" parameter node. In all other cases, the controller extension function is not operational in the "push button sensor" function section.

#### 4.2.4.1.9 "Fan control" function

The room temperature control can be supplemented with a fan controller. This makes it possible to control the fan from heating and cooling systems operated by circulating air, such as fan coil units (FanCoil units), depending on the command value calculated in the controller or using manual operation.

The fan controller distinguishes between Automatic and Manual operation. It is possible to change-over the fan operating mode and the fan operation using a button on the device, which is configured to the "Fan controller" function.

The operating function of the fan controller is described in detail in the chapter "Ambient temperature controller".

- i** It should be noted that fan control is only possible with a button configuration. The fan controller must be enabled in the "Room temperature control -> Controller general" parameter node. Otherwise the fan control in the "Pushbutton sensor" function section has no function.

#### 4.2.4.1.10 Function "Information button"

Information texts can also be shown in the graphic area of the display. This info mode can be used to give the user help texts about how to use the control surfaces when a button is pressed on the display (intelligent nameplate).

An info button can be used to switch the info mode on and off directly on the device. The function of the information mode is described in more detail in the display functions .

#### 4.2.4.1.11 Function "page change"

Up to 4 display pages, each with up to 3 lines for text and value display, can be shown on the LC display of the device. If more than one page is configured in the ETS in the parameter node "Display", the device switches the display over automatically during operation if pages are included in the cyclical change-over.

In addition to the cyclical change, the indication can also be switched by pressing a button on the device. A button for the "Page change" function can be configured for this purpose. This configuration is performed in the parameter block of the respective button.

When a button is pressed - depending on the "On pressing a button" parameter - either the next or the previous page is called up in accordance with the cyclical change. In this setting, all the pages specified according to the configuration in the "Display" parameter node can be switched in sequence, including the pages which are not included in the cyclical change-over.

Alternatively, it is also possible to call up a particular page immediately, independently of the pages of the cyclical change (e.g. push-button function "Call up page 1") or to switch between two pages (e.g. "Toggle between pages 1 and 2"). It is not assumed here that the pages called up in this manner are in fact integrated into the cyclical change. After a page has been called up by pressing a button, the display is retained until the time for the cyclical change has elapsed.

- i** The time for the cyclical page change can be set in the ETS in the parameter node "Display".

#### 4.2.4.1.12 "Controller operating mode" function

The "Controller operating mode" push-button function can be used to control the internal room temperature controller. If this push-button function is used, it is possible to change over the operating mode by pressing the button. In the controller operating mode, a distinction is made between two functions, specified by the "Button function" parameter. On the one hand, the operating mode (Comfort, Standby, Night, Frost/heat protection) can be changed over and influenced ("Operating mode change-over" setting). On the other hand it is possible to activate the Presence function ("Presence button" setting). The Presence function allows activation of Comfort mode or a comfort extension on the internal controller.

The operating mode change-over and the presence function are described in detail in the chapter "Operating mode change-over" (see chapter 4.2.4.2.4. Operating mode switchover).

- i** It should be noted that the "Controller operating mode" function is only possible with a button configuration. The room temperature controller function must be enabled using the parameter of the same name in the "Room temperature control" parameter node. Otherwise the operation of the controller operating mode in the "Pushbutton sensor" function section has no function. In controller extension operation, the "Controller operating mode" push-button function also has no function. Here, the "Controller extension" push-button function can be used, allowing setting of the operating mode.

#### 4.2.4.1.13 "Setpoint shift" function

The "Setpoint shift" push-button function can be used to control the internal room temperature controller. If this push-button function is used, it is possible to shift the setpoint temperature of the controller in a positive or negative direction by pressing the button.

The basic setpoint shift is described in detail in the chapter "Temperature setpoints".

- i** It should be noted that the "Setpoint shift" function is only possible with a button configuration. The room temperature controller function must be enabled using the parameter of the same name in the "Room temperature control" parameter node. Otherwise the operation of the setpoint shift in the "Pushbutton sensor" function section has no function. In controller extension operation, the "Setpoint shift" push-button function also has no function. Here, the "Controller extension" push-button function can be used, allowing a setpoint shift.
- i** When a function button for the setpoint shift is pressed, the current shift is displayed on the display by means of a line graphic. The indication of the basic setpoint shift makes a distinction between the positive "0 - - -" or negative "---- 0" direction. A bar corresponds to shifting by one level value. The value of a level can be parameterised in the ETS. If no shift is active, only "0" is displayed.  
The shifted temperature value is instantly accepted as the new setpoint when a function button is pressed.

#### 4.2.4.1.14 Status LED

Each operating area has two status LEDs. The possible LED functions differ slightly, depending on the configuration of the rockers or buttons.

Each status LED distinguishes the following options...

- Always OFF,
- always ON,
- Control via separate LED object,
- Comparator without sign (1 byte),
- Comparator with sign (1 byte).

These setting options are generally available even if the buttons have no function assigned.

If a function has been assigned to the rocker or button, the ETS displays moreover the option...

- Button-press display.

In the function "2-channel operation", this setting is replaced by...

- Telegram acknowledgment.

If the rocker or the button is used for switching or dimming or to control the fan or setpoint shift, the following functions can additionally be set...

- Status indication,
- inverted status indication.

In addition, the Status LEDs may possess the following option, if a controller extension, a fan controller, a controller operating mode switchover, a setpoint shift, an information button or a page change is not configured ...

- Operating mode display (KNX controller).

If a button is used for the operation of a controller extension and the "Presence button" function is used, then the following option can additionally be set...

- Push-button function active / inactive indication

**i** Besides the functions that can be set separately for each status LED, all status LEDs are also used together with the operation LED for alarm signalling. If this is active, all LEDs of the device flash simultaneously. After deactivation of the alarm signalling, all LEDs will immediately return to the state corresponding to their configuration and communication objects.

##### Status LED function "always OFF" or "always ON"

A status LED used as button-press display is switched on by the device each time the corresponding rocker or button is pressed. The parameter "ON time of status LEDs as actuation displays" on the parameter node "General" specifies for how long the LED is switched on in common for all status LEDs. The status LED lights up when the rocker or button is pressed even if the telegram is transmitted by the sensor only when the button or rocker is released.

With the function "2-channel operation" the option "Button-press display" is replaced by "Telegram acknowledge". In this case the status LED is illuminated when both channels are transmitted for about 250 ms each.

**Function of the status LED "Control via separate LED object", "Status display", and "Inverted status display"**

Each status LED can indicate the status of a separate LED communication object independently of the rocker or pushbutton configuration. Here the LED can be switched on or off statically via the received 1-bit object value, or also activated by flashing. Each status LED can indicate the state of a separate LED communication object independently of the rocker or pushbutton configuration. Here the LED can be switched on or off statically via the 1-bit object value received, or also activated as flashing.

Additionally, the status LEDs can be linked in the rocker or button functions "Switching" or "Dimming" also with the object used for switching and thus signal the current switching state of the actuator group. In this LED setting, an active function can be signalled using the functions "Fan control" or "Setpoint shift". With fan control, the status LED is then controlled either in Automatic or Manual mode according to the push-button function. With a setpoint shift, the LED signals an active shift in a positive or negative direction.

For the status indications, there is also the option of displaying the active status in inverted form.

After a device reset, the value of an LED object is always "OFF".

**Function of status LED as "operating mode display (KNX controller)"**

For switching over between different modes of operation, new room temperature controller can make use of two communication objects of the 20.102 "HVAC-Mode" data type. One of these objects can switch over with normal priority between the "Comfort", "Standby", "Night", "Frost/heat protection" operating modes. The second object has a higher priority. It permits switching over between "Automatic", "Comfort", "Standby", "Night", "Frost/heat protection". Automatic means in this case that the object with the lower priority is active.

If a status LED is to indicate the operating mode, the communication object of the status LED must be linked with the matching object of the room temperature controller. The desired operating mode which the LED is to indicate can then be selected with the parameter "Status LED on with". The LED is then lit up when the corresponding operating mode has been activated at the controller.

After a device reset, the value of the LED object is always "0" (Automatic).

**Function of status LED as "comparator"**

The status LED can indicate whether a configured comparison value is greater than, equal to or less than the 1-byte object value of the status object. This comparator can be used for unsigned (0 ... 255) or for signed integers (-128 ... 127). The data format of the comparison is defined by the function of the status LED.

The status LED lights up only if the comparison is "true".

**i** After a device reset, the value of the LED object is always "0".

#### 4.2.4.1.15 Disabling function

##### Disabling function configuration

With the 1-bit communication object "B.Disable buttons", the control surfaces of the push button sensor can be partly or completely disabled. During a disable, the rockers or buttons can also temporarily execute other functions.

An active disable applies only to the functions of the rockers or buttons. The functions of the status LED, room temperature control, scene function and the alarm message are not affected by the disabling function. During an active button block, the symbol  is lit up in the display.

The disabling function and the pertaining parameters and communication objects are enabled if the parameter "Disabling function ?" in the parameter node "Disable" is set to "Yes".

You can parameterize the polarity of the disabling object. In case of polarity inversion (disabled = 0 / enabled = 1), the disabling function is not activated immediately after a device reset (object value = "0"). There must first be an object update "0" until the disabling function will be activated.

- i** Telegram updates from "0" to "0" or from "1" to "1" on the "button disabling" object remain without effect.

##### Configuring the reaction at the beginning and end of a disable.

If the disabling function is used, the reaction of the pushbutton sensor on activation and deactivation of the disabling function can be preset separately in the parameters of the pushbutton sensor (parameter "Reaction of pushbutton sensor at the beginning / end of disabling"). In this connection it is irrelevant which of the control surfaces is influenced and possibly also locked by disabling. The pushbutton sensor always shows the configured behaviour.

The disabling function must have been enabled in advance.

- Set the parameter "Reaction of pushbutton sensor at the beginning / end of disabling" to "No reaction".  
The pushbutton sensor shows no reaction at the beginning and at the end of disabling. The sensor only adopts the state as provided for by the "Behaviour during active disabling".
- Set the parameter "Reaction of pushbutton sensor at the beginning / end of disabling" to "Internal scene recall scene 1 ...8".  
The pushbutton sensor recalls one of the up to 8 internal scenes. Scene storage is not possible.
- Set the parameter "Reaction of pushbutton sensor at the beginning / end of disabling" to "Reaction as button >> X << / >> Y << when pressed / released".

The pushbutton sensor executes the function assigned to any "target button" in the non-disabled state. Target buttons are operating buttons of the pushbutton sensor which may be configured for rocker or for button operation. The target buttons are configured separately for the beginning (X) or for the end (Y) of disabling. Both buttons of a rocker are treated as two separate buttons.

The action configured for the respective target button is executed. If the target button is configured in such a way that it has no function or does not transmit a telegram on pressing or releasing of the button, then there is also no reaction to disabling or to re-enabling. If the selected target button is part of a configured rocker, the behaviour preset for the respective rocker side (rocker X.1 or X.2) will be used. The telegrams are transmitted to the bus via the required communication object of the target button.

The following table shows all possible telegram reactions of the pushbutton sensor with respect to the target button function.

Function of >>target button<<	Reaction "as >>target button<< on pressing"	Reaction "as >>target button<< on releasing"
Switching / toggling	Switching telegram	Switching telegram
Dimming	Switching telegram	No telegram
Venetian blind	Move telegram	No telegram
Scene extension	Scene recall telegram	No telegram
1-byte value transmitter	Value telegram	No telegram
2-byte value transmitter	Value telegram	No telegram
Temperature value transmitter	Temperature value telegram	No telegram
Brightness value transmitter	Brightness value telegram	No telegram
2-channel operation Channel 1: 1-bit object type	Switching telegram	No telegram
2-channel operation Channel 1: 1-byte object type	Value telegram	No telegram
2-channel operation Channel 1: 2-byte object type	Temperature value telegram	No telegram
Controller extension Operating mode switchover	Operating mode telegram	No telegram
Controller extension Motion detection	Presence telegram	No telegram
Controller extension Setpoint shift	Level value telegram	No telegram
Fan controller	Switch-on or switch-off of the manual fan control / fan level switch-over	No telegram
Info button	Switch-on or switch-off of the information mode	No telegram
Page change	Execution of a page change	No telegram
Controller operating mode	Change-over of the controller operating mode	No telegram
Setpoint shift	Setting the setpoint shift	No telegram
No function	No telegram	No telegram

Table 2: Telegram reactions of the pushbutton sensor with respect to the target push-button function

- Set the parameter "Reaction of pushbutton sensor at the beginning / end of disabling" to "Reaction as disabling function 1 / 2 when pressed / released".

The pushbutton sensor executes the function assigned to either of the two "virtual" disabling functions. The disabling functions are internal button functions with independent communication objects and independent parameters. Except for the status LED, the setting possibilities available for disabling function 1 and disabling function 2 are the same as for the buttons.

The respective configuration of the predefined disabling function will be executed. If no function or no telegram is configuration in the disabling function on pressing or releasing of a button, then there is also no reaction to disabling or to re-enabling.

For this setting, Table 2 shows all possible telegram reactions of the pushbutton sensor depending on the configuration of the disabling function.

The telegrams are transmitted to the bus via the required communication object of the disabling function.

### Configuring the behaviour during a disable.

Irrespective of the behaviour shown by the pushbutton sensor at the beginning or at the end of disabling, the control buttons can be separately influenced during disabling.

The disabling function must have been enabled in advance.

- Set the parameter "Behaviour during active disabling" to "all buttons without function".

In this case, the pushbutton sensor is completely disabled during disabling. Pressing a button has no effect. The status LEDs of the disabled buttons are without function (no button-press display either). Only the "Always ON" or "Always OFF" state remains unaffected by the disabling function.

- Set the parameter "Behaviour during active disabling" to "all buttons behave like". Also set the parameters "All buttons with even / odd numbers behave during disabling like" to the desired button number or disabling function.

All buttons behave as defined in the parameters for the two specified reference buttons of the pushbutton sensor. For all control buttons with an even number (2, 4, 6, ...) and for all buttons with an odd number (1, 3, 5, ...) it is possible to program not only different reference buttons, but also identical reference buttons. The two "virtual" disabling functions of the push button sensor can also be configured as a reference button.

The telegrams are transmitted to the bus via the communication objects of the specified reference buttons. The status LEDs of the reference buttons are controlled according to their function. The status LEDs of the disabled buttons are without function (no button-press display either). Only the "Always ON" or "Always OFF" state remains unaffected by the disabling function.

- Set the parameter "Behaviour during active disabling" to "Individual buttons without function". The buttons that will be disabled are defined on the parameter page "Disable - Button selection" page.

Only the individually specified buttons are locked during disabling. The other control buttons remain unaffected by disabling. The status LEDs of the disabled buttons are without function (no button-press display either). Only the "Always ON" or "Always OFF" state remains unaffected by the disabling function.

- Set the parameter "Behaviour during active disabling" to "Individual buttons behave like". The buttons that will be disabled are defined on the parameter page "Disable - Button selection" page. Also set the parameters "All buttons with even / odd numbers behave during disabling like" to the desired button number or disabling function.

Only the individually specified buttons behave as defined in the parameters of the two specified reference buttons of the pushbutton sensor. For all control buttons with an even number (2, 4, 6, ...) and for all buttons with an odd number (1, 3, 5, ...) it is possible to program not only different reference buttons, but also identical reference buttons. The two "virtual" disabling functions of the push button sensor can also be configured as a reference button. The buttons that will be disabled are defined in the parameters on the "Disable - buttons selection" page.

The telegrams are transmitted to the bus via the communication objects of the specified reference buttons. The status LEDs of the reference buttons are controlled according to their function. The status LEDs of the disabled buttons are without function (no button-press display either). Only the "Always ON" or "Always OFF" state remains unaffected by the disabling function.

- i** If a button evaluation is taking place at the time of activation / deactivation of a disabling function, this function is aborted immediately and with it also the pertaining button function. It is first necessary to release all buttons before a new button function can be executed if so permitted by the state of disabling.

#### 4.2.4.1.16 Transmission delay

After a reset (e.g. after loading of an application program or the physical address or after switch-on of the bus voltage), the device can automatically transmit telegrams for the "Controller extension" function. The controller extension then attempts to retrieve values from the room temperature controller by means of read telegrams in order to update the object states (see page 166). This update takes place for all the transmitting objects with the name "B.Controller extension" and additionally for the objects "D.Input controller ext. status signal addition" and "D.Input controller ext. ventilation visualisation".

After a device reset, the telegrams for room temperature measurements are also automatically transmitted to the bus.

If, in addition to the pushbutton sensor, there are still other devices installed in the bus which transmit telegrams immediately after a reset, it may be useful to activate the transmit delay for automatically transmitting objects of the controller extension and the room temperature measurement in the "General" parameter node in order to reduce the bus load.

When transmit delay is activated, the push button sensor determines the value of its individual delay from the device number of its physical address (phys. address: area.line.device number). This value can be about 30 seconds maximum. Without setting a special time delay, this principle prevents multiple push button sensors from trying to transmit telegrams to the bus at the same time.

- i** The transmit delay is not active for the rocker and button functions of the push button sensor. In addition, the controller objects are not influenced by the transmission delay.

#### 4.2.4.1.17 Alarm signal

The device permits signalling of a alarm which might be, for instance, a burglar or a fire alarm from a KNX/EIB central alarm unit. An alarm is signalled by all status LEDs and of the operation LED of the pushbutton sensor flashing synchronously. This alarm indication can be separately enabled with the parameter "Alarm signalling indication" on parameter page "Alarm signalling" so that it can be used.

When alarm signalss are enabled, the ETS displays the communication object "Alarm message" and further alarm function parameters.

The alarm signalling object is used as an input for activating or deactivating alarm signal displaying. The polarity of the object can be selected. When the object value corresponds to the "Alarm" condition, all status LEDs and the operation LED are always flashing with a frequency of approx. 2 Hz. If there is an alarm, the basic parameterisations of the LED have no significance. The LEDs adopt their originally configured behaviour only after the alarm signalling function has been deactivated. Changes of the state of the LEDs during an alarm - if they are controlled by separate LED objects or if they signal push-button functions - are internally stored and recovered at the end of the alarm.

Apart from the possibility of deactivating an alarm signal via the alarm object, it can also be deactivated locally by a button-press on the push button sensor itself. The parameter "Reset alarm signalling by a button-press?" defines the button response during an alarm...

- If this parameter is set to "Yes", active alarm signal displaying can be deactivated by a button-press on the push button sensor. This button-press does not cause the configured function of the pressed button to be executed. Only after then next button-press will the configuration of the button be evaluated and a telegram be transmitted to the bus, if applicable.
- If "No" has been selected, alarm signalling can only be deactivated via the alarm signalling object. A button-press will always directly execute the configured button function.

If alarm signalling can be deactivated by a button-press, the parameter "Acknowledge alarm signalling by" defines whether an additional alarm acknowledge telegram is to be transmitted to the bus via the separate object "Alarm signalling acknowledge" after triggering by this button-press.

Such an acknowledge telegram can, for instance, be sent via a 'listening' group address to the "Alarm signalling" objects of other push button sensors in order to reset the alarm status there as well. Attention must be paid during resetting of an alarm to the selectable polarity of the acknowledge object.

- i** Notes on the polarity of the alarm object: If the setting is "Alarm when OFF and alarm reset when ON", the alarm object must be actively written by the bus with "0" to activate the alarm after a reset or after programming with the ETS.
- i** An active alarm message is not stored so that the alarm indication is generally deactivated after a reset or after programming with the ETS.

#### 4.2.4.2 Room temperature controller

The device can be used for single-room temperature control. Depending on the operating mode, the current temperature setpoint and on the room temperature, command values for heating or cooling control and fan control can be sent to the KNX/EIB. Usually, these command values are then converted by a suitable KNX/EIB actuator, e.g. heating or switching actuators or directly by bus-compatible actuating drives, evaluated and converted to physical variables for air conditioning control.

The room temperature control is an independent function section of the device. It has its own parameter and object range in the ETS configuration. Therefore, the room temperature controller can be switched on or off, irrespective of the push button sensor function.

The controller function section of the device can either work as a main controller or as a controller extension. As the main controller, the room temperature controller function is fully switched on and the control algorithm activated. Only the main controller transmits control value telegrams. A controller extension itself is not involved in the regulating process. With it, the user can operate the single-room controller, i.e. the main controller from different places in the room. In this way, any number of operating extensions can be set up.

In this chapter, the functions of the room temperature controller are described as a main controller.

##### 4.2.4.2.1 Operating modes and operating mode change-over

###### Introduction

The room temperature controller distinguishes between two different operating modes. The operating modes specify whether you want the controller to use its variable to trigger heating systems ("heating" single operating mode) or cooling systems ("cooling" single operating mode). You can also activate mixed operation, with the controller being capable of changing over between "Heating" and "Cooling" either automatically or, alternatively, controlled by a communication object.

In addition, you can establish two-level control operation to control an additional heating or cooling unit. For two-level feedback control, separate command values will be calculated as a function of the temperature deviation between the setpoint and the actual value and transmitted to the bus for the basic and additional levels. The parameter "Controller operating mode" in the "Room temperature control -> Controller general" parameter branch specifies the operating mode and, if necessary, enables the additional level(s).

###### "Heating" or "cooling" single operating modes

In the single "Heating" or "Cooling" operating modes without any additional level, the controller will always work with one command value and, alternatively, when the additional level is enabled, it will use two command value in the configured operating mode. Depending on the room temperature determined and on the specified setpoint temperatures of the operating modes (see chapter 4.2.4.2.4. Operating mode switchover), the room temperature controller will automatically decide whether heating or cooling energy is required and calculates the command value for the heating or cooling system.

### "Heating and cooling" mixed operating mode

In the "Heating and cooling" mixed operating mode, the controller is capable of triggering heating and cooling systems. In this connection, you can set the change-over behaviour of the operating modes...

- "Change over between heating and cooling" parameter in the "Room temperature control -> Controller general -> Setpoints" parameter branch set to "Automatic".  
In this case, a heating or cooling mode will be automatically activated, depending on the room temperature determined and on the given temperature basic setpoint, or on the deadband, respectively. If the room temperature is within the preset deadband neither heating nor cooling will take place (both command values = "0"). In this connection, the display will read the heating temperature setpoint of the activated operating mode when you actuate the display buttons. If the room temperature is higher than the cooling temperature setpoint cooling will take place. If the room temperature is lower than the cooling temperature setpoint heating will take place.  
When the heating/cooling operating mode is changed over automatically, the information can be actively sent to the bus via the object "Heating/cooling change-over" to indicate whether the controller is working in the heating mode ("1" telegram) or in the cooling mode ("0" telegram). In this connection, the "Automatic heating/cooling change-over transmission" parameter specifies when an operating mode change-over will be transmitted...  
Setting "On changing the operating mode": in this case, a telegram will be transmitted solely on change-over from heating to cooling (object value = "0") or from cooling to heating (object value = "1"), respectively.
- Setting "On changing the output command value": with this setting, the current operating mode will be transmitted whenever there is a modification of the output command value. If the command value = "0" the operating mode which was active last will be transmitted. If the room temperature determined is within the deadband, the operating mode activated last will be retained in the object value until a change-over to the other operating mode takes place, if necessary. In addition, the object value can be output in cycles when automatic switch-over is being made.  
The "Cyclical transmission heating/cooling change-over" parameter enables cyclic transmission (factor > "0" setting) and specifies the cycle time.  
With an automatic operating mode change-over, it should be noted that under certain circumstances there will be continuous change-over between heating and cooling if the deadband is too small. For this reason, you should, if possible, not set the deadband (temperature difference between the setpoint temperatures for the comfort heating and cooling modes) below the default value (2 K).

- "Change-over between heating and cooling" parameter in the "Room temperature control -> Controller general -> Setpoints" parameter branch set to "Via object".  
In this case, the operating mode is controlled via the object "Heating/cooling change-over", irrespective of the deadband. This type of change-over can, for example, become necessary if both heating and cooling should be carried out through a one-pipe system (heating and cooling system). For this, the temperature of the medium in the single-pipe system must be changed via the system control. Afterwards the heating/cooling operating mode is set via the object (often the single-pipe system uses cold water for cooling during the summer, hot water for heating during the winter).  
The "Heating/cooling change-over" object has the following polarities: "1": heating; "0": cooling. After a reset, the object value will be "0", and the "Heating/cooling operating mode change-over after reset" set in the ETS will be activated. You can use the "Heating/cooling operating mode after reset" parameter to set which mode you want to activate after a reset. For the "Heating" or "Cooling" settings, the controller will activate the configured heating/cooling operating mode immediately after the initialisation phase. In case of parameterisation "Operating mode before reset" the operating mode which was selected before the reset will be activated.  
If a change-over is made through the object the operating mode will first be changed into the one specified to be activated after a reset. A change-over to the other operating mode will only take place after the device receives an object update, if necessary.  
Notes on the setting "Operating mode before reset": frequent changing of the operating mode (e. g. several times a day) during running operation can adversely affect the life of the device as the read-only memory (EEPROM) used has been designed for less frequent write access events only.

It is not possible to heat and cool at the same time (command value > "0"). Only with PWM is it possible that a short-time 'command value overlapping' could occur during the transition between heating and cooling, due to the matching of the command value at the end of a time cycle. However, such overlapping will be corrected at the end of a PWM time cycle. Only if heating or cooling energy is required in one of the operating modes and, consequently, the command value is > "0" the "  " or "  " icon will appear on the display.

### Heating/cooling message

Depending on the set operating mode, separate objects can be used to signal whether the controller is currently demanding heating or cooling energy and is thus actively heating  or cooling . As long as the heating command value is > "0", a "1" telegram will be transmitted through the "Heating" signal object. The signal telegram is only reset when the command value is "0" ("0" telegram is transmitted). The same applies to the signal object for cooling.

**i** With 2-point feedback control, it should be noted that the  or  icons will light up on the display or that the message objects for heating and cooling will already become active as soon as the temperature falls short of the temperature setpoint of the active operating mode in case of heating or exceeds the temperature setpoint in case of cooling. In this case, the configured hysteresis is not taken into account.

The signal objects can be enabled by the "Heating message" or "Cooling message" parameters in the "Room temperature control -> Command value and status output" parameter branch. The control algorithm controls the signal objects. Please note that the command value is recalculated every 30 s, followed by an updating of the signal objects.

#### 4.2.4.2.2 Control algorithms and calculation of command values

##### Introduction

To facilitate convenient temperature control in living or business spaces a specific control algorithm which controls the installed heating or cooling systems is required. Taking account of the preset temperature setpoints and the actual room temperature, the controller thus determines command values which trigger the heating or the cooling system. The control system (control circuit) consists of a room temperature controller, an actuator or switching actuator (when ETD electrothermal drives are used), the actual heating or cooling element (e. g. radiator or cooling ceiling) and of the room. This results in a controlled system (figure 29).

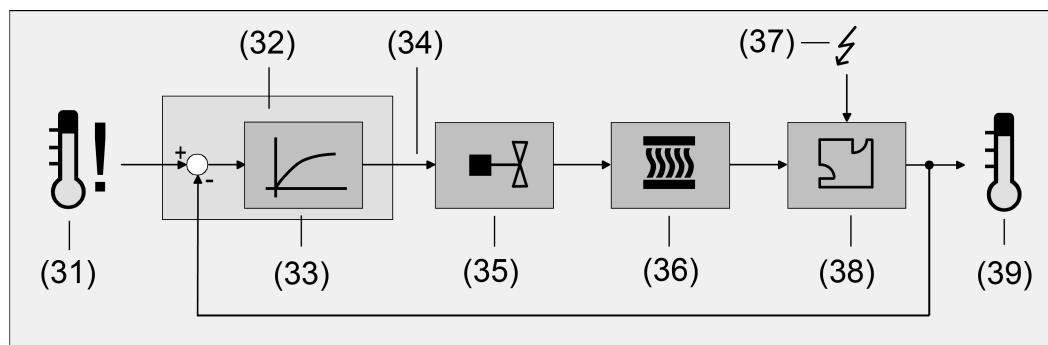


Figure 29: Controlled system of single-room temperature control

- (31) Setpoint temperature specification
- (32) Room temperature controller
- (33) Control algorithm
- (34) Command value
- (35) Valve control (actuating drive, ETD, heating actuator, ...)
- (36) Heat / cold exchanger (radiator, cooling ceiling, FanCoil, ...)
- (37) Fault variable (sunlight penetration, outdoor temperature, illumination systems, ...)
- (38) Room
- (39) Actual temperature (room temperature)

The controller measures the actual temperature (39) and compares it with the given setpoint temperature (31). With the aid of the selected control algorithm (34), the command value (35) is then calculated from the difference between the actual and the setpoint temperature. The command value controls valves or fans for heating or cooling systems (35), meaning that heating or cooling energy in the heat or cold exchangers (36) is passed into the room (38). Regular readjustment of the command value means that the controller is able to compensate for setpoint / actual temperature differences caused by external influences (37) in the control circuit. In addition, the flow temperature of the heating or cooling circuit influences the control system which necessitates adaptations of the variable.

The room temperature controller facilitates either proportional/integral (PI) feedback control as a continuously working or switching option, or, alternatively, switching 2-point feedback control. In some practical cases, it can become necessary to use more than one control algorithm. For example, in bigger systems using floor heating, one control circuit which solely triggers the floor heating can be used to keep the latter at a constant temperature. The radiators on the wall, and possibly even in a side area of the room, will be controlled separately by an additional level with its own control algorithm. In such cases, distinction must be made between the different types of control, as floor heating systems, in most cases, require control parameters which are different to those of radiators on the wall, for example. It is possible to configure up to four independent control algorithms in two-level heating and cooling operation.

The command values calculated by the control algorithm are output via the "Heating command value" or "Cooling command value" communication objects. Depending on the control algorithm

selected for the heating and/or cooling mode, the format of the command value objects is, among other things, also specified. In this way, 1-bit or 1-byte actuating objects can be created. The control algorithm is specified by the parameters "Type of heating control" or "Type of cooling control" in the "Room temperature control -> Controller general" parameter branch and, if necessary, also with a distinction of the basic and additional stages.

### Continuous PI control

PI control is an algorithm which consists of a proportional part and an integral part. Through the combination of these control properties, you can obtain room temperature control as quickly and precisely as possible without or only with low deviations.

When you use this algorithm, the room temperature controller will calculate a new continuous command value in cycles of 30 seconds and send it to the bus via a 1-byte value object if the calculated command value has changed by a specified percentage. You can use the "Automatic transmission on change by..." parameter in the "Room temperature control -> Command value and status output" parameter branch to set the change interval in percent.

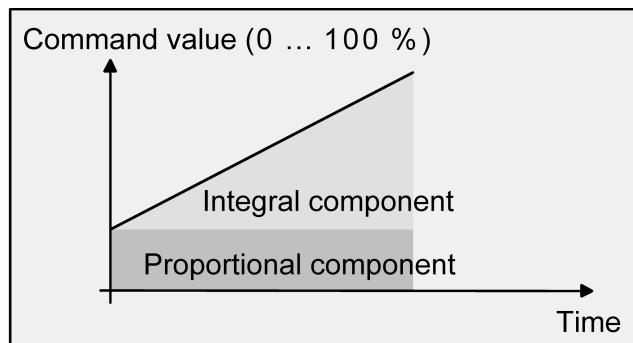


Figure 30: Continuous PI control

An additional heating or cooling level as PI control works in the same way as the PI control of the basic level, with the exception that the setpoint will shift, taking account of the configured level width.

### Switching PI control

With this type of feedback control, the room temperature will also be kept constant by the PI control algorithm. Taking the mean value for a given time, the same behaviour of the control system will result as you would obtain with a continuous controller. The difference compared with continuous feedback control is only the way how the command value is output. The command value calculated by the algorithm in cycles of every 30 seconds is internally converted into a pulse-width-modulated (PWM) command value signal and sent to the bus via a 1-bit switching object after the cycle time has elapsed. The mean value of the command value signal resulting from this modulation is a measure for the averaged position of the control valve, thus being a reference to the room temperature set, taking account of the cycle time which you can set through the "Cycle time of the switching command value..." parameter in the "Room temperature control -> Command value and status output" parameter branch.

A shift of the mean value, and thus a change in the heating capacity, can be obtained by changing the duty factor of the switch-on and switch-off pulses of the command value signal. The duty factor will be adapted by the controller only at the end of a time period, depending on the command value calculated. This applies to any change of the command value, regardless of what the ratio is by which the command value changes (the "Automatic transmission on change by..." and "Cycle time for automatic transmission..." parameters will have no function in this case).

Each command value calculated last during an active time period will be converted. Even after

you have changed the setpoint temperature, for example, by switching over the operating mode, the command value will still be adapted after the end of an active cycle time. The diagram below shows the command value switching signal output according to the internally calculated command value (first of all, a command value of 30 %, then of 50 %, with the command value output not being inverted).

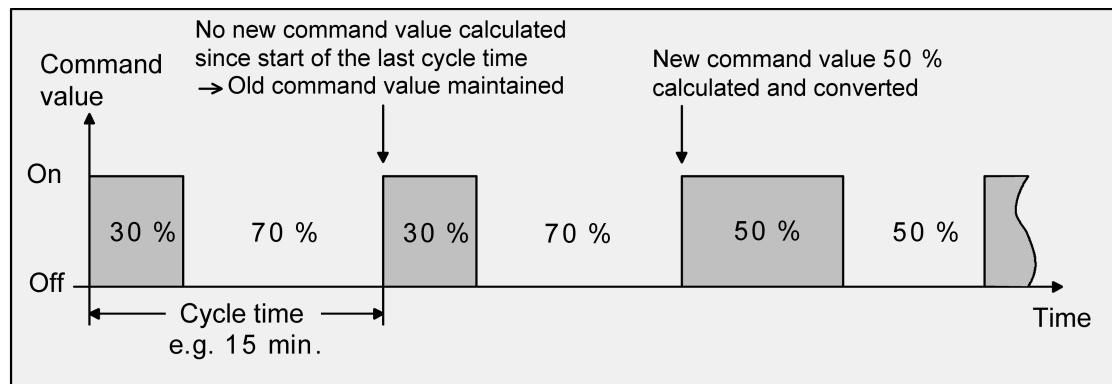


Figure 31: Switching PI control

For a command value of 0 % (permanently off) or of 100 % (permanently on), a command value telegram corresponding to the command value ("0" or "1") will always be sent after a cycle time has elapsed.

For switching PI control, the controller will always use continuous command values for internal calculation. Such continuous values can additionally be sent to the bus via a separate 1-byte value object, for example, as status information for visualisation purposes (if necessary, also separately for the additional levels). The status value objects will be updated at the same time as the command value is output and will only take place after the configured cycle time has elapsed. The parameters "automatic transmission on change by..." and "Cycle time for automatic transmission..." parameters will have no function in this case. An additional heating or cooling level as switching PI control works in the same way as the PI control of the basic stage, with the exception that the setpoint will shift, taking account of the configured level width. All PWM control options will use the same cycle time.

#### Cycle time:

The pulse-width-modulated command values are mainly used for activating electrothermal drives (ETD). In this connection, the room temperature controller sends the switching command values telegrams to a switching actuator equipped with semiconductor switching elements which the drives are connected to (e.g. heating actuator or room actuator). By setting the cycle time of the PWM signal on the controller, you can adapt the feedback control to the drives used. The cycle time sets the switching frequency of the PWM signal and allows adaptation to the adjusting cycle times of the actuators used (the adjusting time it takes the drive to bring the valve from its completely closed to its completely opened position). In addition to the adjusting cycle time, take account of the dead time (the time in which the actuators do not show any response when being switched on or off). If different actuators with different adjusting cycle times are used, take account of the longest of the times. Always note the information given by the manufacturers of the actuators.

During cycle time configuration, a distinction can always be made between two cases...

Case 1: Cycle time > 2 x adjusting cycle time of the electrothermal drives used (ETD)

---

In this case, the switch-on or switch-off times of the PWM signal are long enough for the actuators to have sufficient time to fully open or fully close within a given time period.

**Advantages:**

The desired mean value for the command value and thus for the required room temperature will be set relatively precisely, even for several actuators triggered at the same time.

**Disadvantages:**

It should be noted, that, due to the full valve lift to be continuously 'swept', the life expectancy of the actuators can diminish. For very long cycle times ( $> 15$  minutes) with less sluggishness in the system, the heat emission into the room, for example, in the vicinity of the radiators, can possibly be non-uniform and be found disturbing.

- This setting is recommended for sluggish heating systems (such as underfloor heating).
- Even for a bigger number of triggered actuators, maybe of different types, this setting can be recommended to be able to obtain a better mean value of the adjusting travels of the valves.

**Case 2: Cycle time < adjusting cycle time of the electrothermal drives used (ETD)**

In this case, the switch-on or switch-off times of the PWM signal are too short for the actuators to have enough time to fully open or fully close within a given period.

**Advantages:**

This setting ensures continuous water flow through the radiators, thus facilitating uniform heat emission into the room.

If only one actuator is triggered the controller can continuously adapt the command value to compensate the mean value shift caused by the short cycle time, thus setting the desired room temperature.

**Disadvantages:**

If more than one drive is triggered at the same time the desired mean value will become the command value, which will result in a very poor adjustment of the required room temperature, or in adjustment of the latter with major deviations, respectively.

The continuous flow of water through the valve, and thus the continuous heating of the drives causes changes to the dead times of the drives during the opening and closing phase. The short cycle time and the dead times means that the required variable (mean value) is only set with a possibly large deviation. For the room temperature to be regulated constantly after a set time, the controller must continually adjust the command value to compensate for the mean value shift caused by the short cycle time. Usually, the control algorithm implemented in the controller (PI control) ensures that control deviations are compensated.

- This setting is recommended for quick-reaction heating systems (such as surface radiators).

## **2-point feedback control**

The 2-point control represents a very simple temperature control. For this type of feedback control, two hysteresis temperature values are set. The actuators are triggered by the controller via switch-on and switch-off command value commands (1-bit type). A continuous command value is not calculated for this type of control.

The room temperature is also evaluated by this type of control in cycles every 30 seconds. Thus the command values change, if required, only at these times. The disadvantage of a continuously varying temperature as a result of this feedback control option is in contrast with the advantage of this very simple 2-point room temperature control. For this reason, quick-reaction heating or cooling systems should not be triggered by a 2-point feedback control system, for this can lead to very high overshooting of the temperature, thus resulting in loss of comfort. When presetting the hysteresis limiting values, you should distinguish between the operating modes.

"Heating" or "cooling" single operating modes:

In heating mode, the controller will turn on the heating when the room temperature has fallen below a preset limit. In heating mode, the feedback control will only turn off the heating once a preset temperature limit has been exceeded.

In cooling mode, the controller will turn on the cooling system when the room temperature has exceeded a preset limit. The control system will only turn off the cooling system once the temperature has fallen below a preset limit. In this connection, variable "1" or "0" will be output, depending on the switching status, if the temperature exceeds or falls below the hysteresis limits.

The hysteresis limits of both operating modes can be configured in the ETS.

**i** It has to be pointed out that the "  " or "  " icons will light up on the display or that the message objects for heating and cooling will already become active as soon as the temperature falls short of the temperature setpoint of the active operating mode in case of heating or exceeds the temperature setpoint in case of cooling. In this case the hysteresis is not being considered.

The following two images each show a 2-point feedback control for the individual operating modes "Heating" (figure 32) or "Cooling" (figure 33). The images take two temperature setpoints, one-stage heating or cooling and non-inverted command value output.

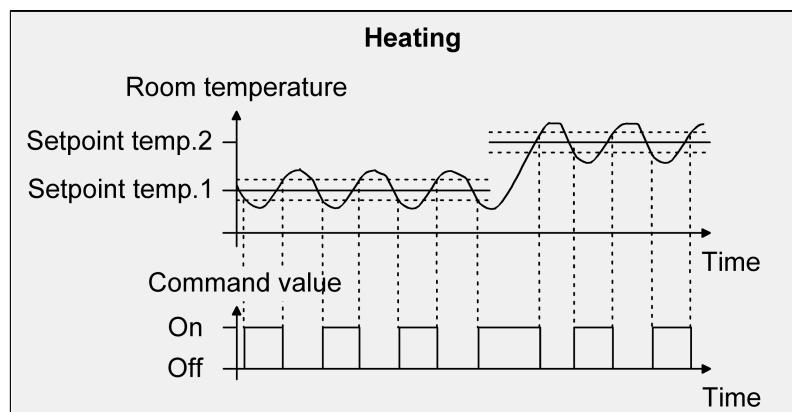


Figure 32: 2-point feedback control for the single "Heating" operating mode

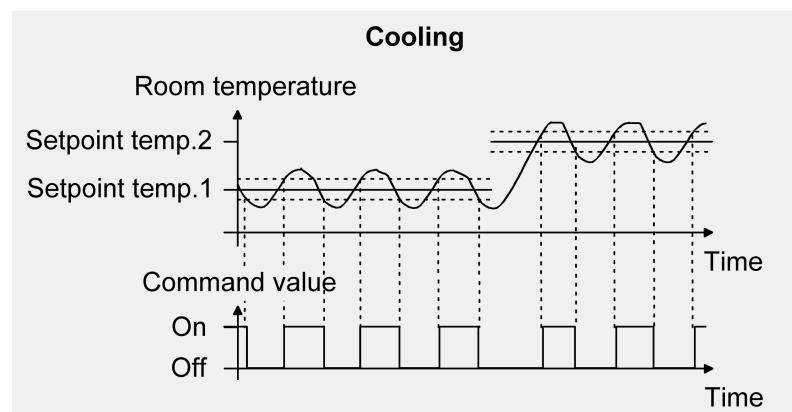


Figure 33: 2-point feedback control for the single "Cooling" operating mode

An additional 2-point feedback control heating or cooling level works exactly the same as the 2-point feedback control of the basic level. The difference is that the setpoint and the hysteresis values will shift by taking into account the configured level offset.

"Heating and cooling" mixed operating mode:

In mixed operation, a distinction is made whether the change-over between heating and cooling is to be effected automatically or in a controlled way through the object...

- With automatic operating mode change-over, in the heating mode the controller will turn on the heating when the room temperature has fallen below a preset hysteresis limit. In this case, as soon as the room temperature exceeds the setpoint of the current operating mode, the feedback control will turn off the heating in the heating mode. Similarly, in cooling mode, the controller will turn on the cooling system when the room temperature has exceeded a preset hysteresis limit. As soon as the room temperature falls below the setpoint of the current operating mode, the feedback control will turn off the cooling system in the cooling mode. Thus, in mixed operation, there is no upper hysteresis limit for heating or no lower one for cooling, respectively, for these values would be in the deadband. Within the deadband, neither heating nor cooling will take place.
- With operating mode change-over via the object, in the heating mode, the controller will turn on the heating when the room temperature has fallen below a preset hysteresis limit. The feedback control will only turn off the heating in the heating mode once the preset upper hysteresis limit has been exceeded. In the same way, in cooling mode, the controller will turn on the cooling system when the room temperature has exceeded a preset hysteresis limit. The feedback control will only turn off the cooling system in the cooling mode once the temperature has fallen below the preset lower hysteresis limit. As with the individual modes of heating or cooling, there are two hysteresis limits per operating mode. Although there is a deadband for the calculation of the temperature setpoints for cooling, it has no influence of the calculation of the two-point control value, as the operating mode is switched over "manually" through the corresponding object. Within the hysteresis spans, it thus will be possible to request heating or cooling energy for temperature values that are located within the deadband.

**i** Also with an automatic operating mode switch, an upper hysteresis limit for heating and a lower hysteresis limit for cooling can be configured in the ETS for 2-point feedback control, although they have no function.

The following two images show 2-point feedback control for the mixed operating mode "Heating and cooling", distinguishing between heating mode (figure 34) and cooling mode (figure 35). The images take two temperature setpoints, a non-inverted command value output and an automatic operating mode change-over. When the operating mode is changed-over via the object, an upper hysteresis for heating and a lower hysteresis for cooling and be configured.

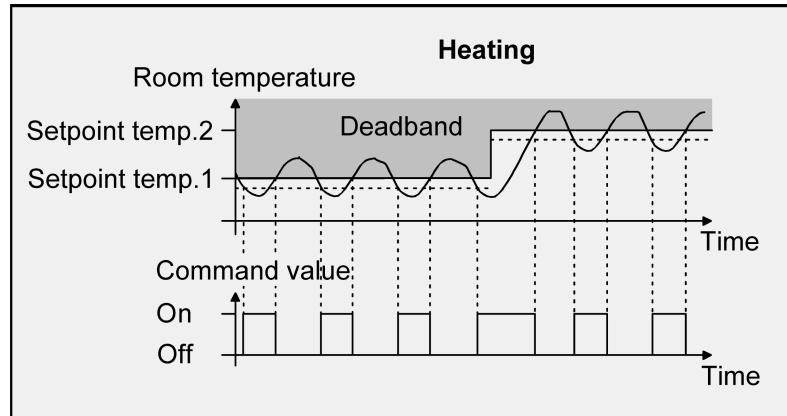


Figure 34: 2-point feedback control for mixed "Heating and cooling" mode with active heating mode.

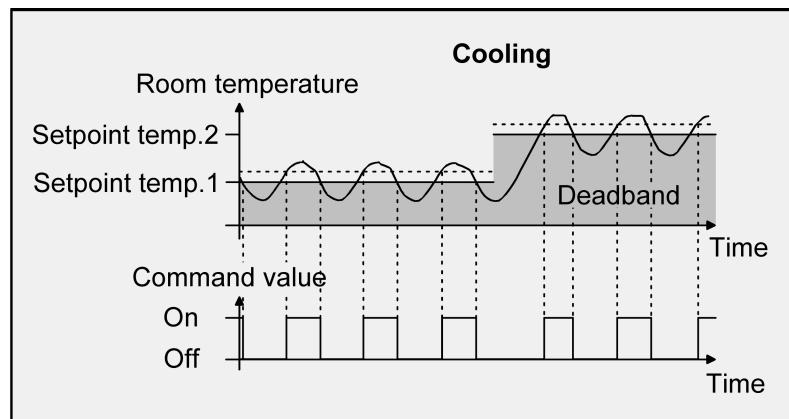


Figure 35: 2-point feedback control for mixed "Heating and cooling" mode with active cooling operation.

Depending on the switching state, the command value "1" or "0" will be output if the values exceed or remain under the hysteresis limits or the setpoints.

- i** It has to be pointed out that the "  " or "  " icons will light up on the display or that the message objects for heating and cooling will already become active as soon as the temperature falls short of the temperature setpoint of the active operating mode in case of heating or exceeds the temperature setpoint in case of cooling. In this case the hysteresis is not being considered.

An additional 2-point feedback control heating or cooling level works exactly the same as the 2-point feedback control of the basic level. The difference is that the setpoint and the hysteresis values will shift by taking into account the configured level offset.

#### 4.2.4.2.3 Adapting the control algorithms

##### Adapting the PI control

There are several systems available, which may heat or cool a room. One option is to uniformly heat or cool the surroundings via heat transfer media (preferably water or oil) in connection with room air convection. Such systems are used, for example, with wall mounted heaters, underfloor heating or cooling ceilings.

Alternatively or additionally forced air systems may heat or cool rooms. In most cases such systems are electrical forced hot air systems, forced cool air systems or refrigerating compressors with fan. Due to the direct heating of the room air such heating and cooling systems work quite swiftly.

The control parameters need to be adjusted so that the PI control algorithm may efficiently control all common heating and cooling systems thus making the room temperature control work as fast as possible and without deviation. Certain factors can be adjusted with a PI control that can influence the control behaviour quite significantly at times. For this reason, the room temperature controller can be set to predefined 'experience values' for the most common heating and cooling systems. In case the selection of a corresponding heating or cooling system does not yield a satisfactory result with the default values, the adaptation can optionally be optimized via control parameters.

Predefined control parameters for the heating or cooling stage and, if applicable, also for the additional stages are adjusted via the "type of heating" or "type of cooling" parameters. These fixed values correspond to the practical values of a properly planned and executed air conditioning system and will result in an ideal behaviour of the temperature control. The heating and cooling types shown in the following tables can be specified for heating and cooling operation.

Type of heating	Proportional range (preset)	Reset time (preset)	Recommended PI control type	Recommended PWM cycle time
Heat water heating	5 Kelvin	150 minutes	Continuous / PWM	15 min.
Underfloor heating	5 Kelvin	240 minutes	PWM	15-20 min.
Electrical heating	4 Kelvin	100 minutes	PWM	10-15 min.
Fan coil unit	4 Kelvin	90 minutes	Continuous	---
Split unit (split climate control unit)	4 Kelvin	90 minutes	PWM	10-15 min.

Table 3: Predefined control parameters and recommend control types for heating systems

Cooling type	Proportional range (preset)	Reset time (preset)	Recommended PI control type	Recommended PWM cycle time
Cooling ceiling	5 Kelvin	240 minutes	PWM	15-20 min.
Fan coil unit	4 Kelvin	90 minutes	Continuous	---
Split unit (split climate control unit)	4 Kelvin	90 minutes	PWM	10-15 min.

Table 4: Predefined control parameters and recommend control types for cooling systems

If the "Type of heating" or "Type of cooling" parameters are set to "Via control parameters" it will be possible to adjust the control parameter manually. The feedback control may be considerably influenced by presetting the proportional range for heating or for cooling (P component) and the reset time for heating or for cooling (I component).

- i** Even small adjustments of the control parameters will lead to noticeable different control behaviour.
- i** The adaptation should start with the control parameter setting for the corresponding heating or cooling system according to the fixed values mentioned in Tables 3 & 4.

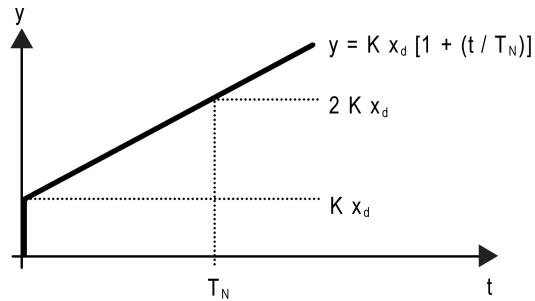


Figure 36: Function of the command value of a PI control

y: Command value

$x_d$ : Control difference ( $x_d = x_{set} - x_{act}$ )

$P = 1/K$  : Configurable proportional band

$K = 1/P$  : Gain factor

$T_N$ : Configurable reset time

PI control algorithm: Command value  $y = K x_d [1 + (t / T_N)]$

Deactivation of the reset time (setting = "0") ->

P control algorithm: Command value  $y = K x_d$

Parameter setting	Effect
P: Small proportional range	Large overshoot in case of setpoint changes (possibly permanently), quick adjustment to the setpoint
P: Large proportional range	no (or small) overshooting but slow adjustment
$T_N$ : Short reset time	Fast compensation of control deviations (ambient conditions), risk of permanent oscillations
$T_N$ : Long reset time	Slow compensation of control deviations

Table 5: Effects of the settings for the control parameters

### Adapting the 2-point feedback control

The 2-point control represents a very simple temperature control. For this type of feedback control, two hysteresis temperature values are set. The upper and lower temperature hysteresis limits can be adjusted via parameters. It has to be considered that...

- A small hysteresis will lead to small temperature variations but to a higher bus load.
- A large hysteresis switches less frequently but will cause uncomfortable temperature variations.

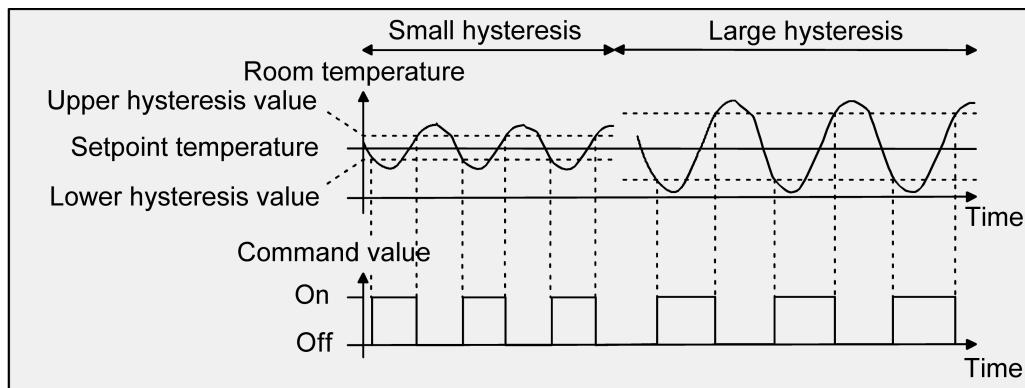


Figure 37: Effects of the hysteresis on the switching behaviour of the command value of 2-point feedback control

#### 4.2.4.2.4 Operating mode switchover

##### Introduction - The operating modes

The room temperature controller has various operating modes. The selection of these modes will, for example, facilitate the activation of different temperature setpoints, depending on the presence of a person, on the state of the heating or cooling system, on the time of the day, or on the day of the week. The following operating modes can be distinguished...

- Comfort mode

Comfort mode is usually activated if persons are in a room, and the room temperature should, for this reason, be adjusted to an adequately convenient value. The change-over to this operating mode can take place either by pressing a button or with presence control, for example, using a PIR motion detector on the wall or a ceiling mounted detector.

The activated Comfort mode will be indicated on the display by the  icon.

- Standby mode

If a room is not used during the day because persons are absent, you can activate the Standby mode. Thereby, you can adjust the room temperature on a standby value, thus to save heating or cooling energy, respectively.

The activated standby mode will be indicated on the display by the  icon.

- Night operation

During the night hours or during the absence of persons for a longer time, it mostly makes sense to adjust the room temperature to lower values for heating systems (e.g. in bedrooms). In this case, cooling system can be set to higher temperature values, if air conditioning is not required (e.g. in offices). For this purpose, you can activate the Night mode.

The activated Night mode will be indicated on the display by the  icon.

- Frost/heat protection mode

Frost protection will be required if, for example, the room temperature must not fall below critical values while the window is open. Heat protection can be required where the temperature rises too much in an environment which is always warm, mainly due to external influences. In such cases, you can activate the Frost/heat protection operating mode and prescribe some temperature setpoint of its own for either option, depending on whether "Heating" or "Cooling" has been selected, to prevent freezing or overheating of the room.

The activated Frost/heat protection mode will be indicated on the display by the  icon.

- Comfort extension (temporary Comfort mode)

You can activate the comfort extension from the night or frost/heat protection mode (not triggered by the "Window status" object) and use it to adjust the room temperature to a comfort value for some time if, for example, the room is also 'used' during the night hours. This mode can exclusively be activated by a presence button or also by the presence object, respectively. The comfort extension option will be automatically deactivated after a definable time has elapsed, or by pressing the presence button once more, or by receiving a presence object value = 0, respectively. You cannot retrigger this extension.

The activated comfort extension option will be indicated on the display by the combination of the  or  icons.

-  You can assign an own temperature setpoint to the "Heating" or "Cooling" operating modes for each operating mode.

## Operating mode switchover

You can activate or switch over the operating modes in various ways. Depending on one another in priority, activation or change-over is possible by...

- Local control on the pushbutton sensor using push-button function (controller operating mode) and configured operating mode change-over,
- local control on the pushbutton sensor in the second operating level (if enabled),
- The KNX/EIB communication objects separately available for each operating mode or alternatively through the KONNEX objects. In the last case, also through a controller extension.

The following section describes the individual options for changing over the operating modes in more detail.

### Change-over of the operating mode in the second display operating level

The second operating level is called up by pressing buttons 1 and 3 on the device simultaneously. At this point, it is possible to activate the "Comfort", "Standby", "Night" or "Frost/heat protection" operating modes from the menu.

In the second operating level, it is not possible to change-over to the comfort extension through presence mode.

**i** The presence message, the window status and the forced object for operating mode change-over (see following sections) have a higher priority than the change-over of the operating mode via the second operating level. Therefore, change-overs by evaluating the appropriate objects have priority.

### Change-over of the operating mode using push button function

As soon as a button of the pushbutton sensor is configured to "Controller operating mode", the "Operating mode change-over" function can be configured in the button parameters. In this case, a further definition is required in the ETS configuration as to which operating mode is activated when a button is pressed. The "Comfort", "Standby", "Night" and "Frost/heat protection" modes are available for this purpose.

To be able to activate the comfort extension, it is possible to use a presence button either optionally or in addition. The presence button, just as with the operating mode change-over, is a push-button function of the pushbutton sensor for the controller operating mode. The presence button means it is possible to change to the comfort extension or to deactivate it prematurely when Night or Frost/heat protection mode (not activated by the "Window status" object) has been activated. Also, it is possible to change over from the Standby to the Comfort mode when the presence button is pressed.

The function of the status LED of a button can be configured irrespective of the push button function. For example, it is possible that the controller status LED is controlled by a separate communication object.

### Change-over of the operating mode using KNX/EIB communication objects

A distinction is made whether the operating modes should be changed over via separate 1-bit objects or, alternatively, by the 1-byte KONNEX objects.

The "Operating mode change-over" parameter in the "Room temperature control -> Controller general" parameter branch specifies the switching method as follows...

- Operating mode change-over "Via switching (4 x 1 bit)"

There is a separate 1-bit change-over object for each operating mode. Each of these objects allows the current operating mode to be switched over or to be set, depending on the priority. Taking account of the priority, a specific hierarchy will result from the operating mode change-over by the objects, a distinction being made between presence detection by the presence button (figure 38) or the motion detector (figure 39). In addition, the status of the window in the room can be evaluated using the "Window status" object, meaning that, when the window is open, the controller can switch to Frost/heat protection mode, irrespective of the set operating mode, in order to save energy (see page 125-126). Table 6 also shows the status of the communication objects and the resulting operating mode.

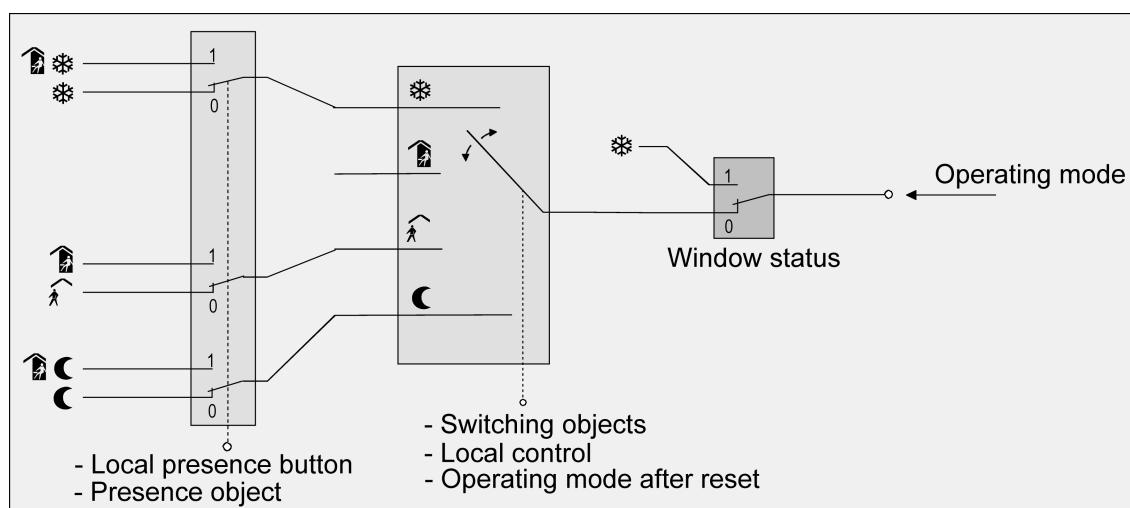


Figure 38: Operating mode change-over through 4 x 1-bit objects with presence button

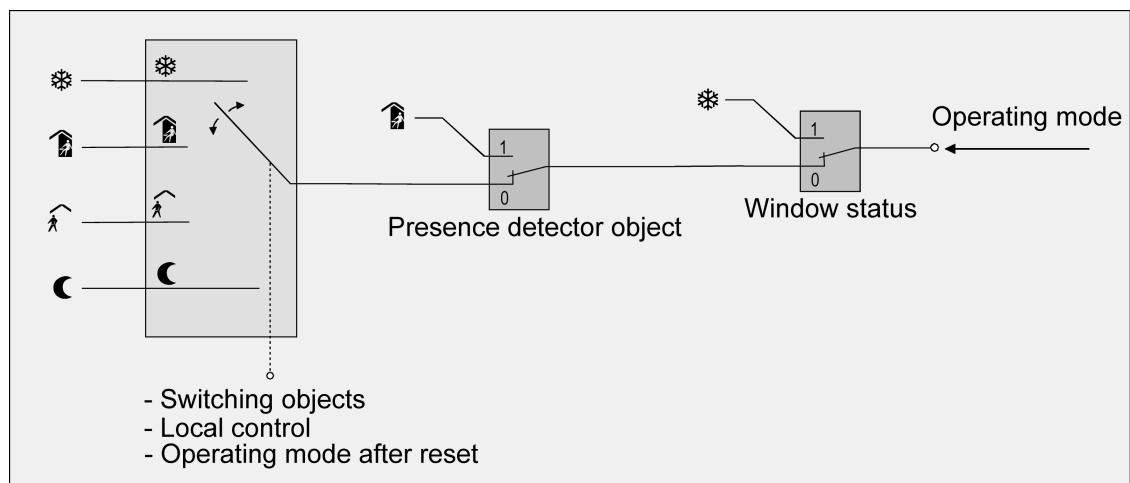


Figure 39: Operating mode change-over through 4 x 1-bit objects with motion detector

Object [1]	Object [2]	Object [3]	Object [4]	Object "Window status"	Motion button	Motion detector	Resulting operating mode
1	X	X	X	0	0	-	Frost/heat protection
0	1	X	X	0	0	-	Comfort mode
0	0	1	X	0	0	-	Standby mode
0	0	0	1	0	0	-	Night operation
0	0	0	0	0	0	-	As parameter *
X	X	X	X	1	X	-	Frost/heat protection
1	X	X	X	0	1	-	Comfort extension
0	1	X	X	0	1	-	Comfort mode
0	0	1	X	0	1	-	Comfort mode
0	0	0	1	0	1	-	Comfort extension
0	0	0	0	0	1	-	Comfort mode/extension **
1	X	X	X	0	-	0	Frost/heat protection
0	1	X	X	0	-	0	Comfort mode
0	0	1	X	0	-	0	Standby mode
0	0	0	1	0	-	0	Night operation
0	0	0	0	0	-	0	As parameter *
X	X	X	X	1	-	X	Frost/heat protection
X	X	X	X	0	-	1	Comfort mode

Table 6: Status of the communication objects and the resulting operating mode

X: Status irrelevant

-: Not possible

\*: Operating mode as parameter "Operating mode, when all bit objects = 0 (preferential position)".

\*\*: Dependent on the last active operating mode.

- i** When changing over the operating mode, the objects "Comfort mode", "Standby mode", "Night mode" and "Frost/heat protection" are updated by the controller and can be read out when the appropriate Read flags are set. If the "Transmit" flag has been set for these objects the current values will, in addition, be automatically transmitted to the bus when they are changed. After bus voltage recovery or after initialisation of the controller, the object which corresponds to the selected operating mode will be updated and its value actively transmitted to the bus if the "Transmit" flag has been set.
- i** A change-over through the objects has the same importance as a local change-over on the pushbutton sensor (second operating level, button as controller operation). An operating mode set by an object can therefore be shifted by an operating mode change-over on the device, if no higher-priority mode (e.g. window contact / motion detector) is activated.

- i** In parameterisation of a presence button: the presence object will be active ("1") for the period of an comfort extension. The presence object will be automatically deleted ("0") if the comfort extension is stopped after the extension time has elapsed, or if the operating mode has been changed by a higher-priority operation through the change-over objects or by local control. The controller therefore automatically resets the status of the presence button when an object is received via the operating mode objects.
- Operating mode change-over through "value" (2 x 1 byte):

There is a common 1-byte change-over object for all operating modes. During the running time, the operating mode can be changed over through this value object immediately after the receipt of only one telegram. In this connection, the value received will set the operating mode. In addition, a second 1-byte object is available which, by forced control and through higher level, can set an operating mode, irrespective of any other change-over options. According to the KONNEX specification, both 1-byte objects have been implemented. Taking account of the priority, a specific hierarchy will result from the operating mode change-over by the objects, a distinction being made between presence detection by the presence button (figure 40) or the motion detector (figure 41). In addition, the status of the window in the room can be evaluated using the "Window status" object, meaning that, when the window is open, the controller can switch to Frost/heat protection mode, irrespective of the set operating mode, in order to save energy (see page 125-126). Table 7 also shows the status of the communication objects and the resulting operating mode.

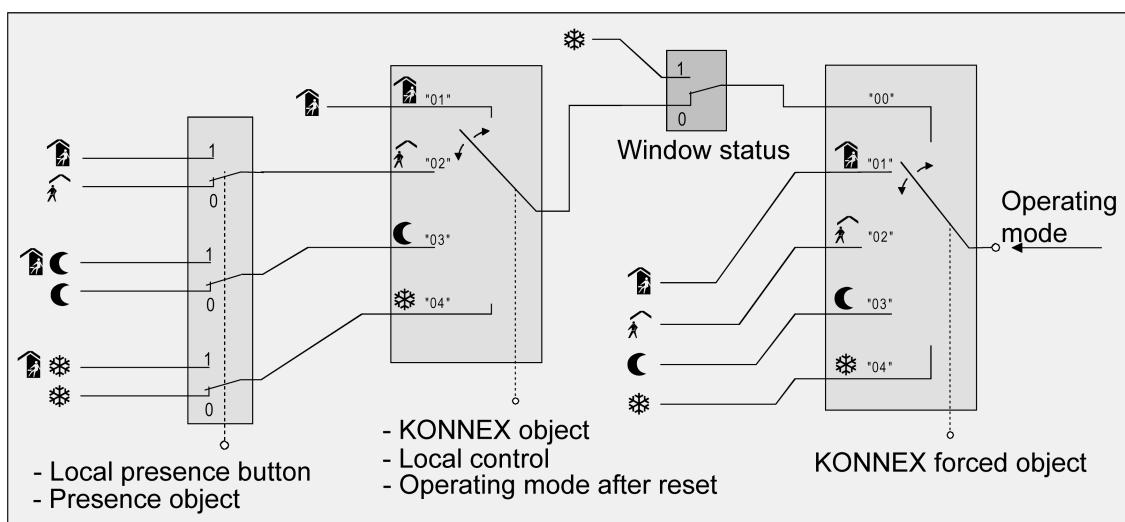


Figure 40: Operating mode change-over through KONNEX object with presence button

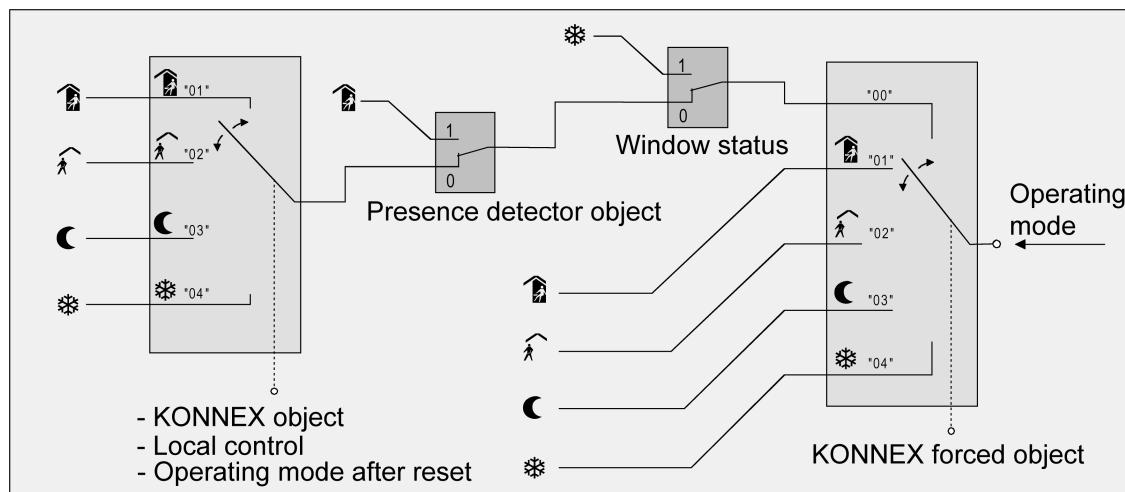


Figure 41: Operating mode change-over through KONNEX object with motion detector

Object value "Operating mode change-over"	Object value "Forced object operating mode"	Object "Window status"	Motion button	Motion detector	Resulting operating mode
00	00	0	X	0	Undefined status, no modification
01	00	0	0	-	Comfort mode
02	00	0	0	-	Standby mode
03	00	0	0	-	Night operation
04	00	0	0	-	Frost/heat protection
01	00	0	1	-	Comfort mode
02	00	0	1	-	Comfort mode
03	00	0	1	-	Comfort ex- tension
04	00	0	1	-	Comfort ex- tension
01	00	0	-	0	Comfort mode
02	00	0	-	0	Standby mode
03	00	0	-	0	Night operation
04	00	0	-	0	Frost/heat protection
X	00	0	-	1	Comfort mode
X	00	1	-	X	Frost/heat protection

X	00	1	X	-	Frost/heat protection
X	01	X	X	X	Comfort mode
X	02	X	X	X	Standby mode
X	03	X	X	X	Night operation
X	04	X	X	X	Frost/heat protection

Table 7: Status of the communication objects and the resulting operating mode

X: Status irrelevant

-: Not possible

- i** When changing over an operating mode, for example through local control, the KONNEX switching object is updated by the controller and can be read out when the "Read" flag is set. If the "Transmit" flag has been set for this object the current value will, in addition, be automatically transmitted to the bus when it is changed. After bus voltage recovery or after initialisation of the controller, the value corresponding to the set operating mode will be actively transmitted to the bus if the "Transmit" flag has been set. The "Transmit" flag must always be set when using controller extensions.
- i** Change-over by the KONNEX object "Operating mode change-over" has the same priority as a local change-over on the pushbutton sensor. An operating mode set by the object (e.g. by a controller extension) can therefore be shifted by an operating mode change-over on the device, if no higher-priority mode (e.g. window contact / motion detector) or the KONNEX forced object is activated. The KONNEX override object will always have the highest priority.
- i** In parameterisation of a presence button: the presence object will be active ("1") for the period of an active comfort extension. The presence object will be automatically deleted ("0") if the comfort extension is stopped after the extension time has elapsed, or if the operating mode has been changed by a higher-priority operation through the change-over objects or by local control or a forced operating mode is deactivated by the KONNEX forced object (forced object -> "00"). The controller therefore automatically resets the status of the presence button when an object value is received via the operating mode objects or the forced object is reset.

### Additional information on the Presence function / Comfort extension

With presence detection, the room temperature controller can quickly change over to a comfort extension upon push button actuation or go into the Comfort mode when movement by a person in the room is detected. In this connection, the "Presence detection" parameter in the "Room temperature control -> Controller functionality" parameter node sets whether presence detection should be movement-controlled by a motion detector or manual through presence button actuation...

- Presence detection by the presence button  
If the presence button is configured for presence detection, you can select the "Presence button" setting in the "Controller operating mode" pushbutton sensor push-button functions. In addition, the "Presence object" is enabled. In this way, you can actuate the presence button or use a presence object value = "1" to change over to comfort extension when the Night or the Frost/heat protection mode is active (not activated by the "window status" object). The extension will be automatically deactivated as soon as the configured "Length of comfort extension" time has elapsed. If you press the presence button once more, or if the presence object receives a value = "0", you can deactivate the comfort extension earlier. You cannot re-trigger such extension time.  
If you have set the length of comfort extension to "0" in the ETS, you cannot activate a comfort extension from the night or frost/heat protection mode. In this case, the operating mode will not be changed, although the presence function has been activated.  
If the standby mode is active you can operate the presence button or use a presence object value = "1" to change over to the comfort mode. This will also be the case if you have configured the length of comfort prolongation to "0". The comfort mode will remain active as long as the presence function remains active, or until another operating mode comes into effect.  
The presence object or the presence function, respectively, will always be deleted whenever a switch-over to a different operating mode takes place, or after a forced mode has been deactivated (associated with KONNEX forced switch-over). A presence function activated before a device reset (programming operation, bus voltage failure) is always deleted, along with the object value, after the reset.
- Presence detection by the motion detector  
If a motion detector is configured for motion detection, then the controller only evaluates the "Presence object". With this object, it is possible to integrate motion detectors into room temperature control. If a movement is detected ("1" telegram) the controller will change over into the Comfort mode. In this connection, it is irrelevant what has been set by the change-over objects or by local control directly on the device. Only a window contact or the KONNEX forced object are of higher priority.  
After the movement delay time has elapsed in the motion detector ("0" telegram), the controller will return to the operating mode which was active before presence detection, or it will compensate the telegrams of the operating mode objects received during presence detection, respectively. During active presence detection, you cannot change-over the operating mode on the room temperature controller.  
A presence function activated before a device reset (programming operation, bus voltage failure) is always deleted, along with the object value, after the reset. In this case, the motion detector must transmit a new "1" telegram to the controller to activate the presence function.

**i** If the motion detector is configured for presence detection, it is always possible to configure the presence button in the "Controller operating mode" pushbutton sensor push-button functions. However, this parameterisation then has no effect.

### Additional information on the window status

The room temperature controller offers various options to change over into the Frost/heat protection mode. In addition to the change-over by the corresponding operating mode change-over object, a window contact can activate frost/heat protection. With these options, the window

contact has higher priority.

A telegram having the value of = "1" (open window) sent to the "Window status" object will activate the frost/heat protection mode. If this is the case, this operating mode cannot be overridden by the operating mode change-over objects (with the exception of the KONNEX override object).

Only a telegram with the value of = "0" (closed window) will reset the window status and deactivate the frost/heat protection mode, if it wasn't set in another way. The operating mode set before the opening of the window or that mode carried by the bus while the window was open is then activated.

#### **Additional information on the operating mode after a reset**

In the ETS, it is possible to use the "Operating mode after reset" parameter in the "Room temperature control -> Controller general" parameter node to set which operating mode should be activated after bus voltage recovery or re-programming by the ETS. The following settings are possible...

- "Comfort operation" -> The comfort mode will be activated after the initialisation phase.
- "Standby mode" -> The standby mode will be activated after the initialisation phase.
- "Night operation" -> The night mode will be activated after the initialisation phase.
- "Frost/heat protection operation" -> The frost/heat protection mode will be activated after the initialisation phase.

The objects associated with the activated operating mode will be updated after a reset.

#### 4.2.4.2.5 Temperature setpoints

##### Setpoint temperature presetting

Temperature setpoints can be preset for each operating mode in the ETS as part of first configuration. It is possible to configure the setpoints for the "Comfort", "Standby" and "Night" modes directly (absolute setpoint presetting) or relatively (derivation from basic setpoint). The setpoint temperatures can later be adapted during regular operation if desired, controlled by the KNX communication objects.

- i** The "Frost/heat protection" operating mode allows the separate configuration of two temperature setpoints for heating (frost protection) and cooling (heat protection) solely in the ETS. These temperature values cannot be changed later during controller operation.

The "Setpoint presetting" parameter on the parameter page "Room temperature control -> Controller general -> Setpoints" defines the way the setpoint temperature is preset...

- "Relative (setpoint temperatures from basic setpoint)" setting:  
When presetting the set-temperatures for comfort, standby and night mode, attention has to be paid to the fact that all setpoints depend on each other as all values are derived from the basic temperature (basic setpoint). The "Basic temperature after reset" parameter in the "Room temperature control -> Controller general -> Setpoints" parameter page determines the basic setpoint, which is loaded when the device is programmed via the ETS. Taking into account the "Reduce / increase the setpoint temperature in standby mode" or "Reduce / increase the setpoint temperature in night mode" parameters the temperature setpoints for the standby and night mode are derived from this value depending on the heating or cooling operating mode. The deadband will be additionally considered for the "Heating and cooling" operating mode.  
The 2-byte object "Basic setpoint" provides the option of changing the basic temperature, and thus all the dependent setpoint temperatures during device operation. A change via the object must always be enabled in the ETS by configuring the parameter "Change the basic temperature setpoint via bus" to "Approve". If the basic setpoint adjustment via the bus is disabled, the "Basic setpoint" object will be hidden. The controller rounds the temperature values received via the object to the configured interval of the basic setpoint shift (0.1 K or 0.5 K).
- "Absolute (independent setpoint temperatures)" setting  
The setpoint temperatures for comfort, standby and night mode are independent of each other. Depending on the operating mode and heating/cooling mode, various temperature values can be specified in the ETS within the range +7.0 °C to +40.0 °C. The ETS plug-in does not validate the temperature values. It is thus possible, for example, to select smaller setpoint temperatures for cooling mode than for heating mode, or to specify lower temperatures for comfort mode than for standby mode.  
After commissioning using the ETS the setpoint temperatures can be changed via the bus by means of temperature telegrams. This can be done using the communication object "Setpoint active operating mode". When the controller receives a telegram via this object, it immediately sets the received temperature as the new setpoint of the active operating mode, and operates from then on with this setpoint. In this manner it is possible to adapt the setpoint temperatures of all operating modes separately for heating and cooling mode. The frost or heat protection temperature programmed in using the ETS cannot be changed in this manner.

**i** With absolute setpoint presetting there is no basic setpoint and also no deadband in the mixed operating mode "Heating and cooling" (if necessary also with additional level). Consequently the room temperature controller cannot control the switch-over of the operating mode automatically, which is why in this configuration the setting for the parameter "Switch-over between heating and cooling" is fixed in the ETS to "Via object". Furthermore, setpoint shifting does not exist for absolute setpoint presetting.

The temperature setpoints programmed in the room temperature controller by the ETS during commissioning can be changed via communication objects. In the ETS the parameter "Overwrite setpoints in device during ETS programming operation?" can be used on the parameter page "Room temperature control -> Controller general -> Setpoints" to define

whether the setpoints present in the device, which may have been changed subsequently, are overwritten during an ETS programming operation and thus replaced again by the values parameterised in the ETS. If this parameter is on "Yes", then the temperature setpoints are deleted in the device during a programming operation and replaced by the values of the ETS. If this parameter is configured to "No", then setpoints present in the device remain unchanged. The setpoint temperatures entered in the ETS then have no significance.

**i** During initial commissioning of the device the parameter "Overwrite setpoints in device during ETS programming operation?" must be set to "Yes" in order to perform valid initialisation of the memory slots in the device. The setting "Yes" is also necessary if essential controller properties (operating mode, setpoint presetting, etc.) are being changed in the ETS using new parameter configurations!

### Setpoint temperatures for relative setpoint presetting

Depending on the operating mode, different cases should be distinguished when specifying the relative setpoint temperature, which then have an impact on the temperature derivation from the basic setpoint.

#### Setpoints for operating mode "Heating"

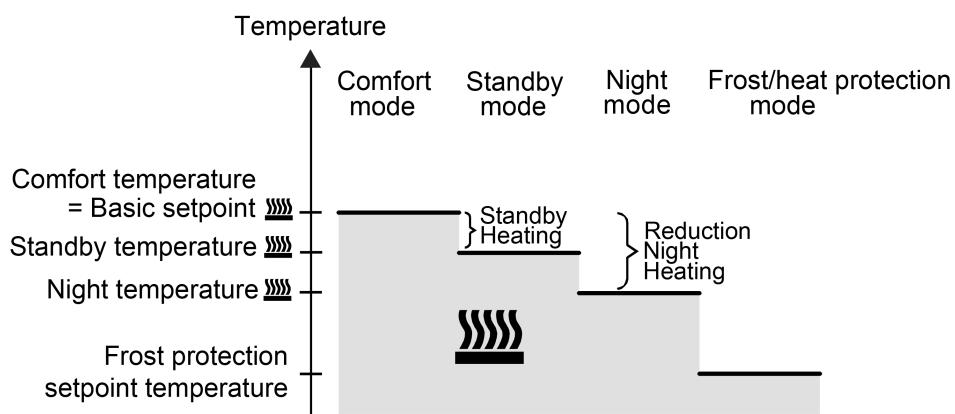


Figure 42: Setpoint temperatures in the operating mode "Heating"

In this operating mode, the setpoint temperatures for Comfort, Standby and Night mode and the frost protection temperature can be preset .

The following applies

$$T_{\text{Standby setpoint heating}} \leq T_{\text{Comfort setpoint heating}}$$

or

$$T_{\text{Night setpoint heating}} \leq T_{\text{Comfort setpoint heating}}$$

The standby and night setpoint temperatures are derived from the reduction temperatures configured in the ETS from the comfort setpoint temperature (basic setpoint). The frost protection is supposed to prevent the heating system from freezing. For this reason the frost protection temperature (default: +7 °C) should be to a set smaller value than the night temperature. In principle, however, it is possible to select frost protection temperature values between +7.0 °C and +40.0 °C. The possible range of values for a setpoint temperature lies between +7.0 °C and +99.9 °C for "heating" and is bounded by the frost protection

temperature in the lower range.

The level offset configured in ETS will be additionally considered in a two-level heating mode .

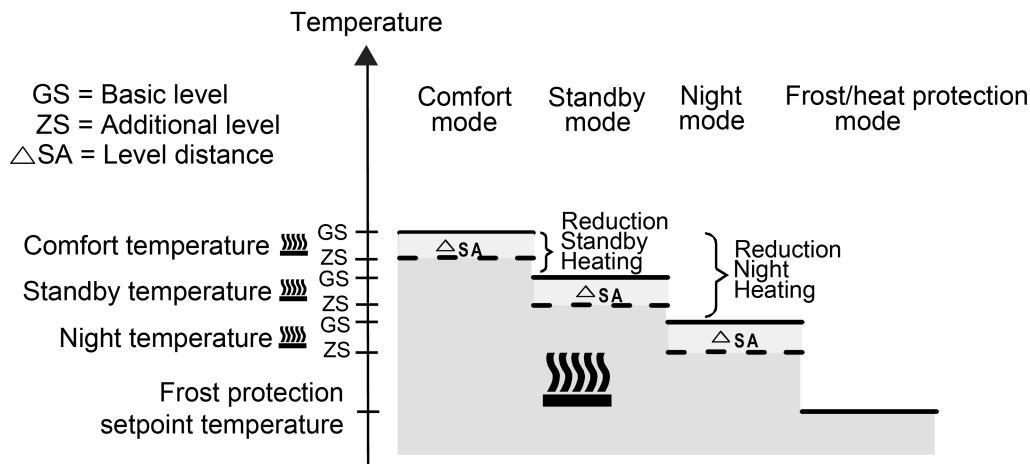


Figure 43: Setpoint temperatures in the operating mode "Basic and additional heating"

$$\begin{aligned} T_{\text{Comfort setpoint additional level heating}} &\leq T_{\text{Comfort setpoint basic level heating}} \\ T_{\text{Standby setpoint additional level heating}} &\leq T_{\text{Standby setpoint basic level heating}} \\ T_{\text{Standby setpoint heating}} &\leq T_{\text{Comfort setpoint heating}} \end{aligned}$$

or

$$\begin{aligned} T_{\text{Comfort setpoint additional level heating}} &\leq T_{\text{Comfort setpoint basic level heating}} \\ T_{\text{Night setpoint additional level heating}} &\leq T_{\text{Night setpoint basic level heating}} \\ T_{\text{Night setpoint heating}} &\leq T_{\text{Comfort setpoint heating}} \end{aligned}$$

#### Setpoints for the "cooling" operating mode

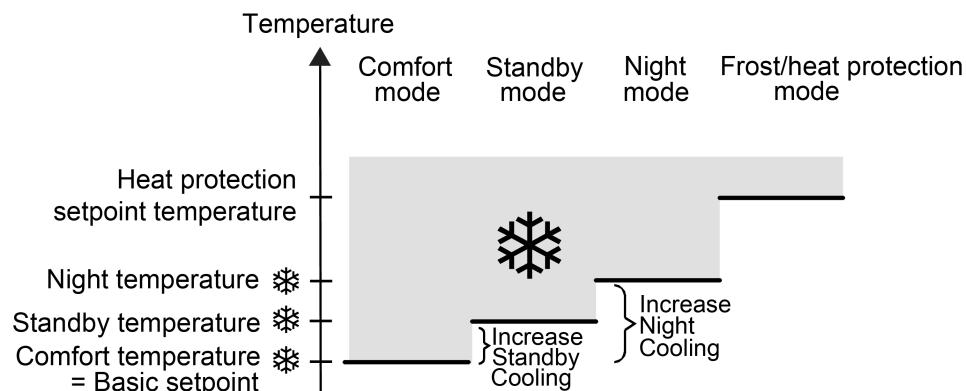


Figure 44: Setpoint temperatures in the operating mode "Cooling"

The setpoint temperatures for Comfort, Standby and Night mode exist in this operating mode and the heat protection temperature can be preset .

The following applies...

$$T_{\text{Comfort setpoint cooling}} \leq T_{\text{Standby setpoint cooling}}$$

or

$$T_{\text{Comfort setpoint cooling}} \leq T_{\text{Night setpoint cooling}}$$

The standby and night set-temperatures are derived after the configured increase temperatures from the comfort set-temperature (basic setpoint). The heat protection is supposed to ensure that the temperature does not exceed the maximum permissible room temperature in order to protect system components. For this reason the heat protection temperature (default: +35 °C) should be set to a larger value than the night temperature. In principle, however, it is possible to select heat protection temperature values between +7.0 °C and +45.0 °C. The possible range of values for a setpoint temperature lies between -99.9 °C and +45.0 °C for "cooling" and is bounded by the heat protection temperature in the upper range.

The level offset configured in ETS will be additionally considered in a two-level cooling mode .

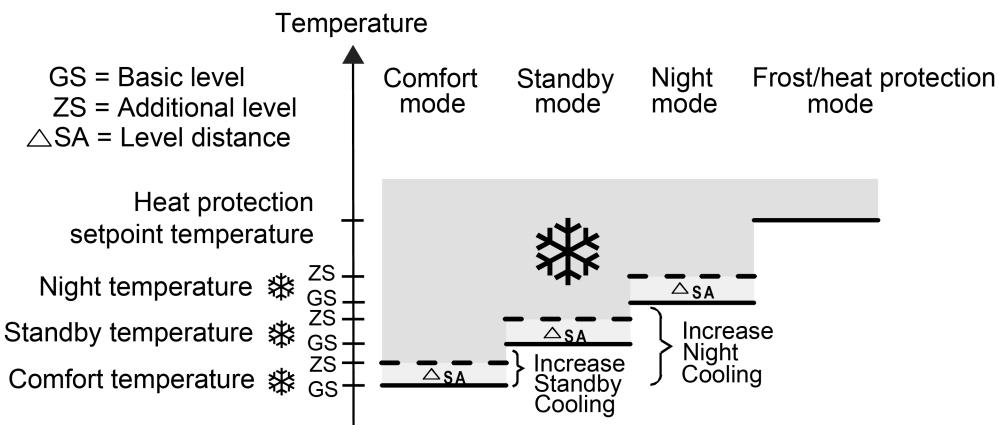


Figure 45: Setpoint temperatures in the operating mode "Basic and additional cooling"

$$\begin{aligned}
 T_{\text{Comfort setpoint basic level heating}} &\leq T_{\text{Comfort setpoint additional level heating}} \\
 T_{\text{Standby setpoint basic level heating}} &\leq T_{\text{Standby setpoint additional level heating}} \\
 T_{\text{Comfort setpoint cooling}} &\leq T_{\text{Standby setpoint cooling}}
 \end{aligned}$$

or

$$\begin{aligned}
 T_{\text{Comfort setpoint basic level heating}} &\leq T_{\text{Comfort setpoint additional level heating}} \\
 T_{\text{Night setpoint basic level heating}} &\leq T_{\text{Night setpoint additional level heating}} \\
 T_{\text{Comfort setpoint cooling}} &\leq T_{\text{Night setpoint cooling}}
 \end{aligned}$$

#### Setpoints for the "heating and cooling" operating mode

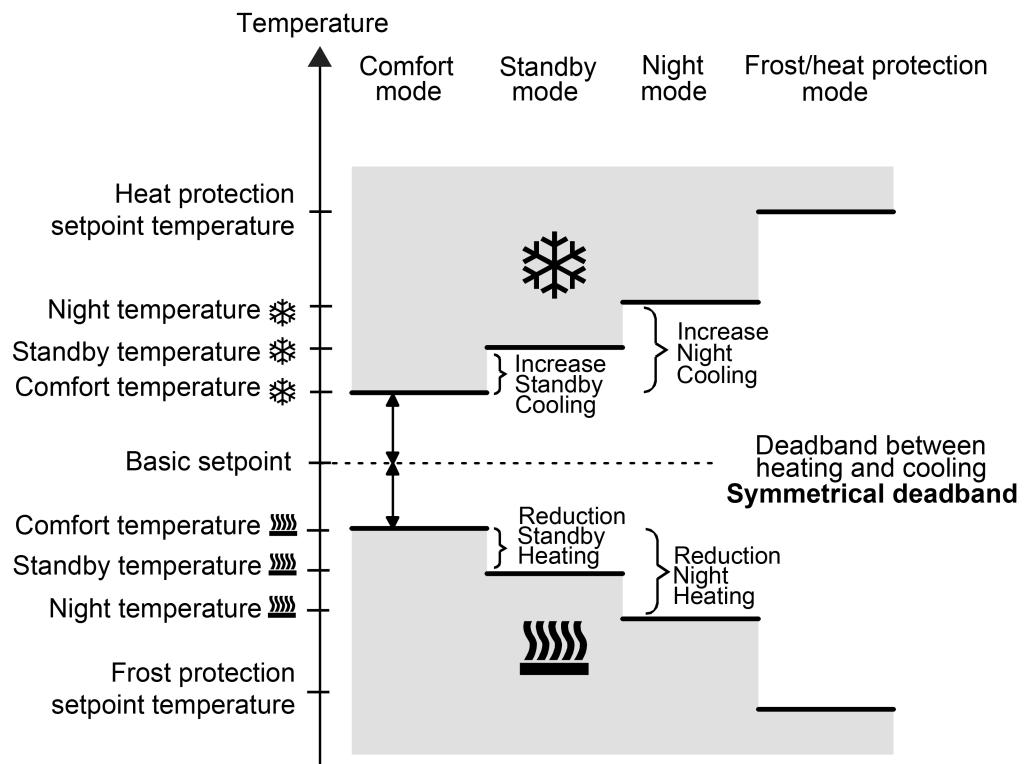


Figure 46: Setpoint temperatures in the operating mode "Heating and cooling" with symmetrical deadband

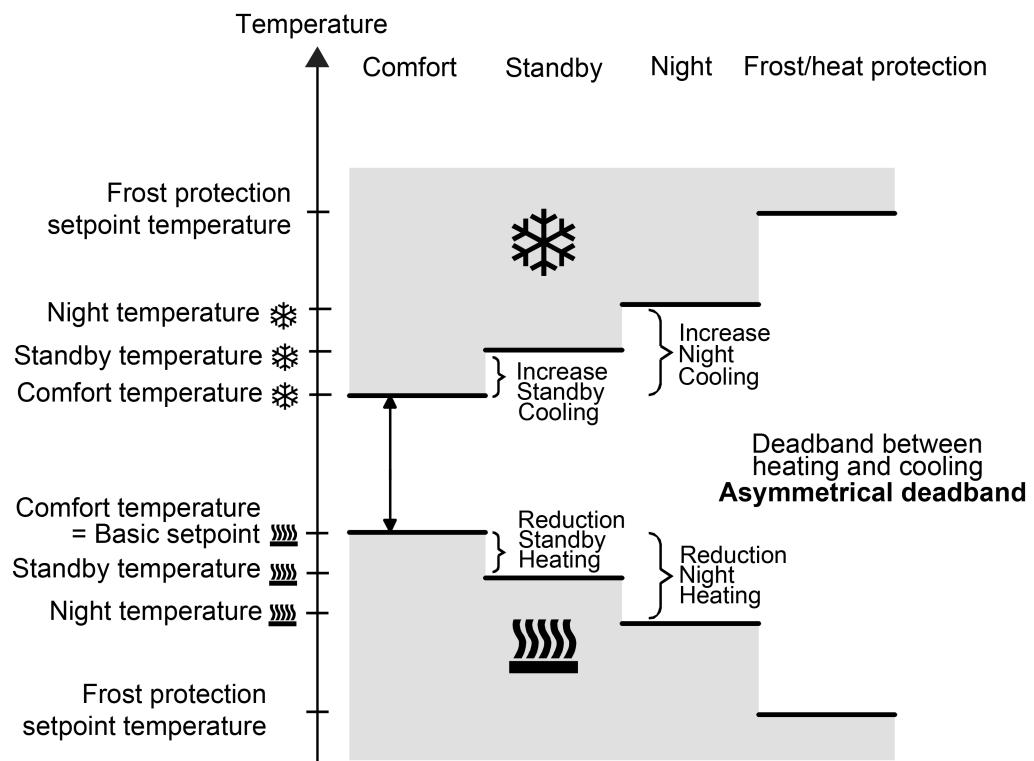


Figure 47: Setpoint temperatures in the operating mode "Heating and cooling" with asymmetrical deadband

For this heating/cooling operating mode, the setpoint temperatures of both heating/cooling modes exist for the Comfort, Standby and Night operating modes as well as the deadband. A

distinction is made in the deadband position with combined heating and cooling. A symmetrical or an asymmetrical deadband position can be configured. In addition, the frost protection and the heat protection temperatures can be preset.

The following applies...

$$T_{\text{Standby setpoint heating}} \leq T_{\text{Comfort setpoint heating}} \leq T_{\text{Comfort setpoint cooling}} \leq T_{\text{Standby setpoint cooling}}$$

or

$$T_{\text{Night setpoint heating}} \leq T_{\text{Comfort setpoint heating}} \leq T_{\text{Comfort setpoint cooling}} \leq T_{\text{Night setpoint cooling}}$$

The set-temperatures for "Standby" and "Night" are derived from the comfort setpoint temperatures for heating or cooling. The temperature increase (for cooling) and the temperature decrease (for heating) of both operating modes can be preset in ETS. The comfort temperatures itself are derived from the deadband and the basic setpoint.

The frost protection is supposed to prevent the heating system from freezing. For this reason the frost protection temperature (default: +7 °C) should be set to a smaller value than the night temperature for heating. In principle, however, it is possible to select frost protection temperature values between +7.0 °C and +40.0 °C. The heat protection is supposed to prevent the temperature from exceeding the maximum permissible room temperature in order to protect system components. For this reason the heat protection temperature (default: +35 °C) should be set to a larger value than the night temperature for cooling. In principle, however, it is possible to select heat protection temperature values between +7.0 °C and +45.0 °C.

The possible range of values for a setpoint temperature ("heating and cooling") lies between +7.0 °C and +45.0 °C and is bounded by the frost protection temperature in the lower range and by the heat protection temperature in the upper range.

The level offset configured in ETS will be additionally considered in a two-level heating or cooling mode.

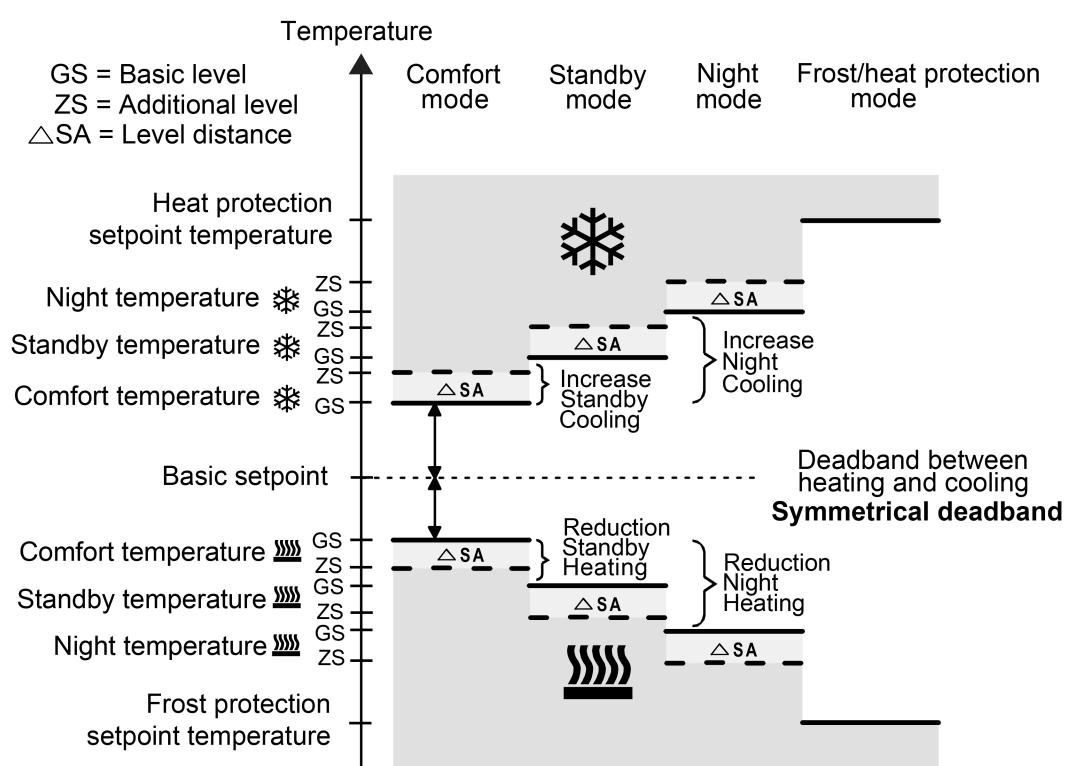


Figure 48: Setpoint temperatures in the operating mode "Basic and additional heating and cooling" with symmetrical deadband

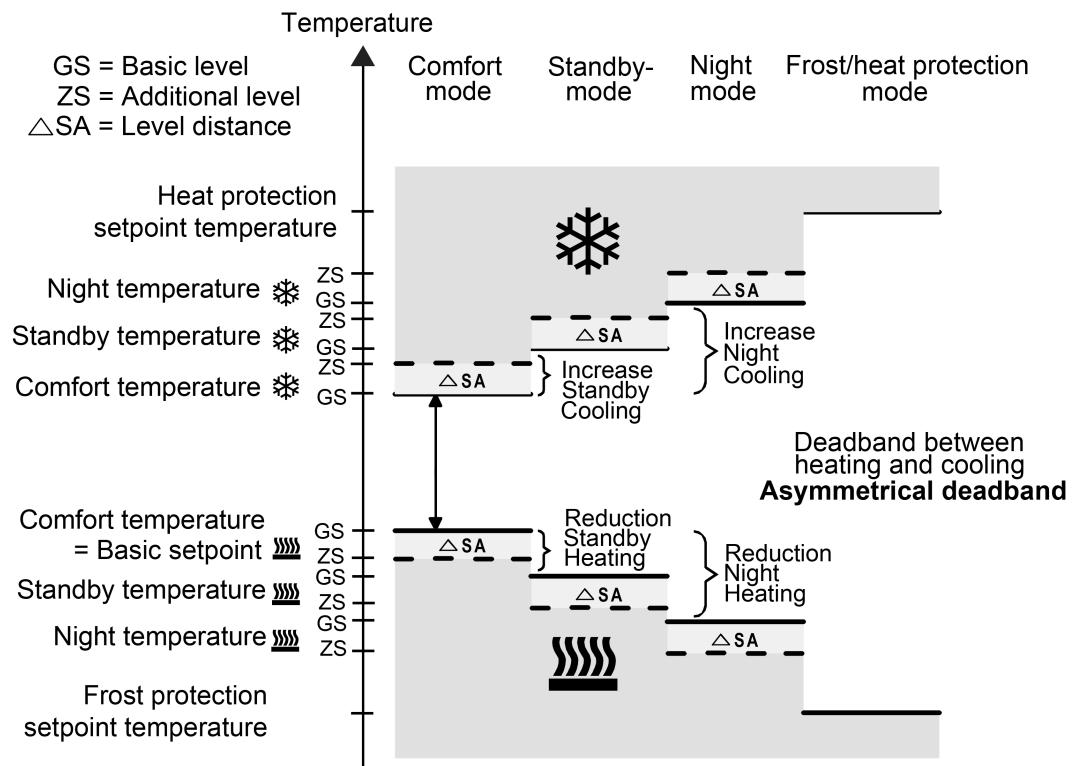


Figure 49: Setpoint temperatures in the operating mode "Basic and additional heating and cooling" with asymmetrical deadband

$$\begin{aligned}
 T_{\text{Comfort setpoint add. level Heating}} &\leq T_{\text{Comfort setpoint basic level Heating}} \leq T_{\text{Comfort setpoint basic level Cooling}} \leq T_{\text{Comfort setpoint add. level Cooling}} \\
 T_{\text{Standby setpoint add. level Heating}} &\leq T_{\text{Standby setpoint basic level Heating}} \leq T_{\text{Standby setpoint basic level Cooling}} \leq T_{\text{Standby setpoint add. level Cooling}} \\
 T_{\text{Standby setpoint heating}} &\leq T_{\text{Comfort setpoint heating}} \leq T_{\text{Comfort setpoint cooling}} \leq T_{\text{Standby setpoint cooling}}
 \end{aligned}$$

or

$$\begin{aligned}
 T_{\text{Comfort setpoint add. level Heating}} &\leq T_{\text{Comfort setpoint basic level Heating}} \leq T_{\text{Comfort setpoint basic level Cooling}} \leq T_{\text{Comfort setpoint add. level Cooling}} \\
 T_{\text{Night setpoint add. level Heating}} &\leq T_{\text{Night setpoint basic level Heating}} \leq T_{\text{Night setpoint basic level Cooling}} \leq T_{\text{Night setpoint add. level Cooling}} \\
 T_{\text{Night setpoint heating}} &\leq T_{\text{Comfort setpoint heating}} \leq T_{\text{Comfort setpoint cooling}} \leq T_{\text{Night setpoint cooling}}
 \end{aligned}$$

### deadband and deadband positions in the combined heating and cooling operating mode

With relative setpoint presetting, the comfort setpoint temperatures for heating and cooling are derived from the basic setpoint in consideration of the adjusted Dead band. The deadband (temperature zone for which there is neither heating nor cooling) is the difference between the comfort setpoint temperatures. This deadband does not exist for absolute setpoint presetting.

The "deadband between heating and cooling", "deadband position" parameters as well as the "Basic temperature after reset" parameter are preset in the ETS configuration. One distinguishes between the following settings...

- deadband = "symmetrical"

The deadband preset in the ETS is divided into two parts at the basic setpoint. The comfort set-temperatures are derived directly from the basic setpoint resulting from the half Dead band.

The following applies...

$$T_{\text{Basic setpoint}} - \frac{1}{2}T_{\text{deadband}} = T_{\text{Comfort heating setpoint}}$$

and

$$T_{\text{Basic setpoint}} + \frac{1}{2}T_{\text{deadband}} = T_{\text{Comfort setpoint cooling}}$$

$$\rightarrow T_{\text{Comfort cooling setpoint}} - T_{\text{Comfort heating setpoint}} = T_{\text{deadband}}$$

$$\rightarrow T_{\text{Comfort cooling setpoint}} \geq T_{\text{Comfort heating setpoint}}$$

- deadband position = "Asymmetrical"

With this setting the comfort setpoint temperature for heating equals the basic setpoint. The deadband preset in the ETS is effective only from the basic setpoint in the direction of comfort temperature for cooling. Thus the comfort set-temperature for cooling is derived directly from the comfort setpoint for heating.

The following applies...

$$T_{\text{Basic setpoint}} = T_{\text{Comfort heating setpoint}}$$

$$\rightarrow T_{\text{Basic setpoint}} + T_{\text{deadband}} = T_{\text{Comfort heating setpoint}}$$

$$\rightarrow T_{\text{Comfort cooling setpoint}} - T_{\text{Comfort heating setpoint}} = T_{\text{deadband}}$$

$$\rightarrow T_{\text{Comfort cooling setpoint}} \geq T_{\text{Comfort heating setpoint}}$$

### Accept setpoints permanently

If the basic setpoint has been modified by the communication objects "Basic setpoint" or "Setpoint of active operating mode", two possible cases can be distinguished, which are set by the parameter "Apply change of the setpoint of the basic temperature" (with relative setpoint presetting) or "Apply change of the setpoint permanently" (with absolute setpoint presetting)...

- Case 1: The setpoint adjustment is permanently accepted ("Yes" setting):  
If, with this setting, the temperature setpoint is adjusted, the controller saves the value permanently to the EEPROM (permanent storage). The newly adjusted value will overwrite the initial value, i.e. the basic temperature originally configured via the ETS after a reset or the absolute setpoint temperature loaded using the ETS. The changed values are also retained after a device reset, after a switch-over of the operating mode or after a switch-over of the heating/cooling mode (with absolute setpoint presetting individually for each operating mode for heating and cooling).  
With this setting, it should be noted that frequent changing of the basic temperature (e.g. several times a day because of cyclical telegrams) can affect the product life of the device as the non-volatile storage is designed for less frequent write access.  
The "Basic setpoint" object (relative setpoint presetting) is not bidirectional, meaning that a shifted basic setpoint is not signalled back to the KNX. The object "Setpoint active operating mode" (absolute setpoint presetting) can be bidirectional if necessary (set "Transmit" flag!). This makes it possible to use this object to feedback to the bus the setpoint temperature resulting from a setpoint shift.
- Case 2: The basic setpoint adjustment is only temporarily accepted ("No" setting):  
The setpoints received via the objects remain active only temporarily. In case of a bus voltage failure or following a switch-over to another operating mode (e.g. Comfort followed by Standby, or also Comfort followed by Comfort), or after a switch-over of the heating/cooling mode (e.g. heating after cooling), the last setpoint changed will be discarded and replaced by the initial value.

- i** If the setpoint is accepted on a non-temporary basis ("Yes" setting), the setpoints restored after a device reset are not effected immediately in the communication objects. Only after the telegrams have been received from the bus via the objects and the room temperature controller accepts the newly received setpoint can the objects be read out, for example for visualisation purposes (Set "Read" flag!).
- i** With relative setpoint presetting: Independent of the "accept modification of the basic temperature setpoint value permanently" parameter, the temperature setpoints for the standby or night mode or "cooling" comfort mode (deadband) will always be stored in the non-volatile EEPROM memory.  
With absolute setpoint presetting: As described, dependent on the "accept modification of the setpoint value permanently" parameter, the temperature setpoints for the standby or night mode for heating or cooling will always be stored in the volatile or non-volatile memory.

### Basic setpoint shift for relative setpoint presetting

In addition to presetting individual temperature setpoints by the ETS or basic setpoint object, the user, when presetting relative setpoints, can shift the basic setpoint in predefined limits within a specific range. When doing so, the basic setpoint is adjusted up or down in levels. The value of a level is 0.5 K.

- i** No basic setpoint shift can be performed if the controller is configured for absolute setpoint presetting.

- i** It has to be considered that a shift of the displayed setpoint temperature (temperature offset of the basic temperature) will directly affect the basic setpoint and as a result shift all other temperature setpoints.  
A positive shift is possible up to the configured heat protection temperature. A negative shift is possible up to the set frost protection temperature.
- i** The "Basic setpoint" object is not bidirectional, meaning that a shifted basic setpoint is not signalled back to the KNX.

Whether a basic setpoint shifting only affects the currently active operating mode or whether it influences all other set-temperatures of the remaining operating modes is determined by the "Accept modification of shift of basic setpoint value permanently" parameter in the "Room temperature control -> Controller general -> Setpoints" parameter page...

- "No" setting:  
The basic setpoint shifting carried out is in effect for only as long as the operating mode or heating/cooling mode has not changed or the basic setpoint is maintained. Otherwise the setpoint shift will be reset to "0".
- "Yes" setting:  
In general, the shifting of the basic setpoint carried out affects all operating modes. The shifting is maintained even after change-over of the operating mode or the heating/cooling mode or readjusting the basic setpoint.

- i** Since the value for the basic setpoint shift is stored exclusively in volatile memory (RAM), the shift will get lost in case of a reset (e.g. bus voltage failure).
- i** A setpoint shift does not affect the temperature setpoints for frost or heat protection!

Communication objects for the basic setpoint shift:

The setpoint shift of the controller can be adjusted externally by the communication object "Setpoint shift specification" with a 1-byte counter value (in compliance with KNX DPT 6.010 – Depiction of positive and negative values in a double complement. By connecting to the "Setpoint shift specification" object the controller extensions are able to directly adjust the current setpoint shift of the controller. As soon as the controller receives a value, it will adjust the setpoint shift correspondingly. Values that lie within the possible value range of the basic setpoint shift can be directly jumped to.

The controller monitors the received value independently. As soon as the external preset value exceeds the limits of the adjustment options for the setpoint shift in positive or negative direction, the controller will correct the received value and adjust the setpoint shift to maximum. Depending on the direction of the shift, the value feedback is set to the maximum value via the communication object "Current setpoint shift".

The current setpoint shift is tracked by the controller in the communication object "Current setpoint shift". This object has the same data point type and value range as the object "Setpoint shift specification" (see above). By connecting to this object the controller extensions are also able to display the current setpoint shift. As soon as there is an adjustment by one temperature increment in positive direction, the controller counts up the value. The counter value will be counted down if there is a negative adjustment of the temperature. A value of "0" means that no setpoint shift has been adjusted.

Example:

Starting situation: current setpoint temperature = 21.0°C / Counter value in "Current setpoint shift" = "0" (no active setpoint shift)

After the setpoint shift:

- > A setpoint shift by one temperature increment in the positive direction will count up the value in the "Current setpoint shift" object by one = "1".
- > Current setpoint temperature = 21.5°C
- > An additional setpoint shift by one temperature increment in the positive direction will again count up the value in the "Current setpoint shift" object by one = "2".
- > Current setpoint temperature = 22.0°C
- > A setpoint shift by one temperature increment in the negative direction will count down the value in the "Current setpoint shift" object by one = "1".
- > Current setpoint temperature = 21.5°C
- > An additional setpoint shift by one temperature increment in the negative direction will again count down the value in the "Current setpoint shift" object by one = "0".
- > Current setpoint temperature = 21.0°C
- > An additional setpoint shift by one temperature increment in the negative direction will again count down the value in the "Current setpoint shift" object by one = "-1".
- > Current setpoint temperature = 20.5°C, etc. ...

**i** To ensure that controller extensions indicate the correct shifts and also control the functions of the controller (as main unit) correctly, it is necessary for the controller extensions to be set to the same shift limits of the setpoint shift as the main unit. Controller extensions must work with the same step width for the setpoint shift as the controller itself (0.5 K).

### Transmitting the setpoint temperature

The setpoint temperature, which is given by the active operating mode can be actively transmitted onto the bus via the 2-byte "Set temperature" object. The "Transmission at setpoint temperature modification by..." parameter in the "Room temperature control -> controller general -> setpoint values" parameter node determines the temperature value by which the setpoint has to change in order to have the setpoint temperature value transmitted automatically via the object. Possible temperature value changes lie within a range of 0.1 K and 25.5 K. The setting "0" at this point will deactivate the automatic transmission of the set temperature.

In addition, the setpoint can be transmitted cyclically. The "Cyclical transmission of setpoint temperature" parameter determines the cycle time (1 to 255 minutes). The value "0" will deactivate the periodical transmission of the setpoint temperature value. It has to be pointed out that with deactivated periodical transmission and deactivated automatic transmission, no setpoint temperature telegrams will be transmitted in case of a change.

Setting the "Read" flag on the "Setpoint temperature" object makes it possible to read out the current setpoint. Following the return of bus voltage or after re-programming via the ETS, the object value will be initialised according to the current setpoint temperature value and actively transmitted to the bus.

#### 4.2.4.2.6 Room temperature measurement

##### Temperature detection and measured value formation

The parameter "Temperature detection" in the parameter node "Temperature measurement" specifies by which sensor the room temperature is determined.

The following settings are possible for temperature detection

- "internal sensor"

The temperature sensor integrated in the room temperature controller is activated. Thus, the actual temperature value is determined only locally on the device.  
In this parameterisation the feedback control will start directly after a device reset.

- "received temperature value"

The actual temperature is determined solely via a temperature value received from the bus. In this case, the sensor must either be a KNX room thermostat coupled via the 2-byte object "Received temperature" or a controller extension with temperature detection. The room temperature controller can request the current temperature value cyclically. For this purpose, the parameter "Request time of the received temperature value" must be set to a value > "0". The request interval can be configured within the limits of 1 minute to 255 minutes.

After a device reset the room temperature controller will first wait for a valid temperature telegram until the feedback control starts and a command value, if applicable, is output.

- "internal sensor + received temperature value"

This setting is used to combine the selected temperature sources. The sensors can either be a KNX room thermostat coupled via the 2-byte object "received temperature" or controller extensions with temperature detection.

With the setting "Received temperature value" the room temperature controller can request the current temperature value cyclically. For this purpose, the parameter "Request time of the received temperature value" must be set to a value > "0". The request interval can be configured within the limits of 1 minute to 255 minutes. After a device reset the room temperature controller will first wait for a valid temperature telegram until the feedback control starts and a command value, if applicable, is output.

When evaluating, the real actual temperature is made up from the two respective measured temperature values. At the same time, the weighting of the temperature values is defined by the parameter "Measured value formation to receive internally". Depending on the different locations of the sensors or a possible non-uniform heat distribution inside the room, it is thus possible to adjust the actual temperature measurement. Often, those temperature sensors that are subject to negative external influences (for example, unfavourable location because of exposure to sun or heater or door / window directly next to it) are weighted less heavily.

Example: a room temperature controller is installed next to the entrance to the room (internal sensor). An additional wired temperature sensor has been mounted on an inner wall in the middle of the room below the ceiling.

Internal sensor: 21.5 °C

External sensor: 22.3 °C

Determination of measured value: 30 % to 70 %

$$\rightarrow T_{\text{Result internal}} = T_{\text{internal}} \cdot 0.3 = 6.45 \text{ °C},$$

$$\rightarrow T_{\text{Result external}} = T_{\text{external}} = 22.3 \text{ °C} \cdot 0.7 = 15.61 \text{ °C}$$

$$\rightarrow T_{\text{Result actual}} = T_{\text{Result internal}} + T_{\text{Result external}} = 22.06 \text{ °C}$$

##### Calibrating the measured values

In some cases during room temperature measurement, it may be necessary to adjust the temperature values of the internal and the external sensor (received temperature value).

Adjustment becomes necessary, for example, if the temperature measured by the sensors stays

permanently below or above the actual temperature in the vicinity of the sensor. To determine the temperature deviation, the actual room temperature should be detected with a reference measurement using a calibrated temperature measuring device. The parameter "Internal sensor adjustment..." and/or "Calibration of received temperature value..." allows configuration of the positive (temperature increase, factors: 1 ... 127) or negative (temperature decrease, factors -128... -1) temperature calibration in levels of 0.1 K. Thus, the calibration is made only once statically and is the same for all operating modes of the controller.

- i** The measured value has to be increased, if the value measured by the sensor lies below the actual room temperature. The measured value has to be decreased, if the value measured by the sensor lies above the actual room temperature.
- i** During room temperature control, the controller always uses the adjusted temperature value to calculate the command values. The adjusted temperature value is transmitted to the bus via the "Actual temperature" object (see "Transmission of the actual temperature"). When determining the measured value using the internal and external sensor, the two adjusted values are used to calculate the actual value. If necessary, the unadjusted room temperature of the internal temperature sensor can additionally be transmitted to the bus as an information value (object "Actual temperature, unadjusted") and, for example, be evaluated in other bus devices or displayed in visualisations.
- i** Temperature adjustment only affects the room temperature measurement.

### Transmission of the actual temperature

The determined actual temperature can be actively transmitted to the bus via the 2-byte "Actual temperature" object. The parameter "Transmission when room temperature change by..." specifies the temperature value by which the actual value has to change in order to have the actual temperature value transmitted automatically via the object. Possible temperature value changes lie within a range of 0.1 K and 25.5 K. The setting to "0" at this point will deactivate the automatic transmission of the actual-temperature.

In addition, the actual value can be transmitted periodically. The "Cyclical transmission of the room temperature" parameter determines the cycle time (1 to 255 minutes). The value "0" will deactivate the periodical transmission of the actual temperature value. Setting the "Read" flag on the "actual temperature" object makes it possible to read out the current actual value at any time over the bus. It has to be pointed out that with deactivated periodical transmission and deactivated automatic transmission, no more actual-temperature telegrams will be transmitted".

Following the return of bus voltage, new programming via the ETS, the object value will be updated according to the actual temperature value and transmitted on the bus. In case a temperature value telegram has not been received from the external sensor via the object "Received temperature value" when evaluating an external temperature sensor, only the value provided by the internal sensor will be transmitted. If only the external sensor is used, then the value "0" is located in the "Actual temperature" object after a reset. For this reason, the external temperature sensor should always transmit the current value after a reset.

During room temperature control, the controller always uses the adjusted temperature value to calculate the command values. The adjusted temperature value is transmitted to the bus via the "Actual temperature" object. If necessary, the unadjusted room temperature can additionally be transmitted to the bus as an information value via the object "Actual temperature, unadjusted" and, for example, be displayed in visualisations. The object for the unadjusted temperature is updated and transmitted at the same times as the "Actual temperature" object.

### Underfloor heating temperature limit

The temperature limit can be activated in the controller in order to protect an underfloor heating system. If the temperature limit is enabled in the ETS, the controller continuously monitors the floor temperature. Should the floor temperature exceed a specific limiting value on heating, the controller immediately switches the command value off, thus switching the heating off and cooling the system. Only when the temperature falls below the limiting value, minus a hysteresis of 1 K, will the controller add the most recently calculated command value.

In the ETS, the temperature limit can be activated by setting the "Underfloor heating temperature limit available" parameter in the "Room temperature control -> Controller functionality" parameter node to "Present".

- i** It should be noted that the temperature limit only affects command values for heating. Thus, the temperature limit requires the controller operating modes "Heating" or "Heating and cooling" (see chapter 4.2.4.2.1. Operating modes and operating mode change-over). The temperature limit cannot be configured in the operating mode "Cooling".

The temperature limit can also be used in a two-level feedback control with basic and additional levels. However, it must then be specified in the ETS to which level the limit shall apply. The limit can then either apply to the basic level or to the additional level for heating using the "Affects" parameter.

The underfloor heating temperature to be monitored can be fed into the controller via the KNX/EIB communication object "Floor temperature". As soon as the temperature limit is enabled in the ETS, the 2-byte object "Floor temperature" becomes visible. This object can be used to inform the controller of the current floor temperature using suitable temperature value telegrams from other bus devices (e.g. analogue input with temperature sensor, etc.).

The maximum limit temperature, which the underfloor heating system may reach, is specified in the ETS using the "Maximum underfloor heating system temperature" parameter. The temperature can be set to a value between 20 and 70 °C. If this temperature is exceeded, the controller switches the underfloor heating system off using the command value. As soon as the floor temperature has fallen 1 K under the limit temperature, the controller switches the command value on again, assuming that this is intended in the control algorithm. The 1 K hysteresis is fixed and cannot be changed.

- i** Depending on the configuration, the temperature may have a strong impact on the controller behaviour. Poor parameterisation of the limit temperature (limit temperature near to the room/setpoint temperature) means that it is possible that the specified setpoint temperature for the room can never be reached!

#### 4.2.4.2.7 Command value and status output

##### Command value objects

The format of the command value objects are determined depending on the control algorithm selected for heating and / or cooling and, if applicable, also for the additional levels. 1 bit or 1 byte command value objects can be created in the ETS. The control algorithm calculates the command values in intervals of 30 seconds and outputs them via the objects. With the pulse width modulated PI control (PWM) the command value is updated, if required, solely at the end of a time cycle.

Possible object data formats for the command values separately for both heating/cooling operating modes, for the basic and the additional level or for both control circuits are...

- Continuous PI control: 1 byte
- Switching PI control: 1 bit + additionally 1 byte (for example for the status indication with visualisations),
- Switching 2-point feedback control: 1 bit.

Depending on the selected heating/cooling operating mode, the controller is able to address heating and / or cooling systems, to determine command values and to output them via separate objects. One distinguishes between two cases for the "Heating and cooling" mixed operating mode...

- Case 1: Heating and cooling system are two separate systems  
In this case the "Transmit heating and cooling command value to one common object" parameter should be set to "No" in the "Room temperature control -> Controller functions" parameter node. Thus, there are separate objects available for each command value, which can be separately addressed via the individual systems.  
This setting allows to define separate types of control for heating and cooling.
- Case 2: Heating and cooling system are a combined system  
In this case the "Transmit heating and cooling command value to one common object" parameter may be set, if required, to "Yes". This will transmit the command values for heating and cooling to the same object. In case of a two-level feedback control, another shared object will be enabled for the additional levels for heating and cooling.  
With this setting it is only possible to define the same type of feedback control for heating and for cooling as the feedback control and the data format must be identical. The ("Type of heating / cooling") control parameter for cooling and heating still has to be defined separately.  
A combined command value object may be required, for example, if heating as well as cooling shall take place via a single-pipe system (combined heating and cooling system). For this, the temperature of the medium in the single-pipe system must be changed via the system control. Afterwards the heating/cooling operating mode is set via the object (often the single-pipe system uses cold water for cooling during the summer, hot water for heating during the winter).

If required, the command value can be inverted before the transmission to the KNX/EIB. With output via a combined object, the parameters "Output of heating command value", "Output of cooling command value" or "Output of command values..." output the command value in inverted fashion according to the object data format. The parameters for inverting the additional level(s) are additionally available in the two-level control.

The following applies...

For continuous command values:

- > Not inverted: Command value 0 % ... 100 %, value 0 ... 255
- > Inverted: Command value 0 % ... 100 %, value 255 ... 0

For switching command values:

- > Not inverted: Command value off / on, value 0 / 1
- > Inverted: Command value off / on, value 1 / 0

## Automatic transmission

On automatic transmission, a distinction is made with regard to the type of control...

- Continuous PI control:

In case of a continuous PI control, the room temperature controller calculates a new command value periodically every 30 seconds and outputs it to the bus via a 1-byte value object. The change interval of the command value can be determined in percent according to which a new command value is to be output on the bus via the "Automatic transmission on change by..." parameter in the "Room temperature control -> Controller general -> Command values and status output" parameter node. The change interval can be configured to "0" so that a change in the command value will not result in an automatic transmission.

In addition to the command value output following a change, the current command value value may be periodically transmitted on the bus. In addition to the times when changes are to be expected, other command value telegrams will be output according to the active value after a configurable cycle time. This ensures that during a periodic access control of the command value in servo drive or in the addressed switching actuator, telegrams are received within the control interval. The time interval predetermined by the "Cycle time for automatic transmission..." parameter should correspond to the control interval in the actuator (cycle time in the controller is preferably to be configured smaller). The "0" setting will deactivate the periodic transmission of the actuating variable.

With continuous PI control it must be noted that if the cyclical and the automatic transmission are both deactivated, no command value telegrams will be transmitted in case of a change!

- Switching PI control (PWM):

In case of a switching PI control (PWM), the room temperature controller calculates a new command value internally every 30 seconds. In this feedback control, however, the update of the command value takes place, if required, solely at the end of a PWM cycle. The parameters "automatic transmission on change by..." and "Cycle time for automatic transmission..." are not enabled with this control algorithm. The parameter "Cycle time of the switching command value..." defines the cycle time of the PWM command value signal.

- 2-point feedback control:

In case of a 2-point feedback control, the room temperature and thus the hysteresis values are evaluated periodically every 30 seconds, so that the command values, if required, will change solely during these times. The "Automatic transmission on change by..." parameter is not enabled as this control algorithm does not calculate continuous command values.

In addition to the command value output following a change, the current command value value may be periodically transmitted on the bus. In addition to the times when changes are to be expected, other command value telegrams will be output according to the active value after a configurable cycle time. This ensures that during a periodic access control of the command value in servo drive or in the addressed switching actuator, telegrams are received within the control interval. The time interval predetermined by the "Cycle time for automatic transmission..." parameter should correspond to the control interval in the actuator (cycle time in the controller is preferably to be configured smaller). The "0" setting will deactivate the periodic transmission of the actuating variable.

## Controller status

The room temperature controller can transmit its current status to the KNX/EIB. A choice of data formats is available for this. The "Controller status" parameter in the "Room temperature control -> Controller general -> Command value and status output" parameter branch will enable the status signal and set the status format...

- "KNX compliant"  
The KNX compliant controller status feedback is harmonised on a manufacturer-specific basis, and consists of 3 communication objects. The 2-byte object "KNX status" (DPT 22.101) indicates elementary functions of the controller (see Table 8). This object is supplemented by the two 1-byte objects "KNX status operating mode" and "KNX status forced operating mode" (DPT 20.102), which report back the operating mode actually set on the controller. The last two objects mentioned above are generally used to enable controller extensions to display the controller operating mode correctly in the KNX compliant status display. Therefore these objects should be connected with controller extensions if the KNX compliant status feedback is not configured.

Bit of the status telegram	Meaning
0	Controller error status ("0" = no error / "1" = error)
1	not used (permanent "0")
2	not used (permanent "0")
3	not used (permanent "0")
4	not used (permanent "0")
5	not used (permanent "0")
6	not used (permanent "0")
7	not used (permanent "0")
8	Operating mode ("0" = Cooling / "1" = Heating)
9	not used (permanent "0")
10	not used (permanent "0")
11	not used (permanent "0")
12	Controller disabled (dew point operation) ("0" = Controller enabled / "1" = Controller disabled)
13	Frost alarm ("0" = Frost protection temperature exceeded / "1" = frost protection temperature undershot)
14	Heat alarm ("0" = heat protection temperature exceeded / "1" = Heat protection temperature exceeded)
15	not used (permanent "0")

Table 8: Bit encoding of the 2 byte KNX compliant status telegram

- "Controller general":  
The general controller status collects essential status information of the controller in two 1-byte communication objects. The "Controller status" object contains fundamental status information (see Table 9). The "Status signal addition" object collects in a bit-orientated manner further information that is not available via the "Controller status" object (see Table 10). For example, controller extensions can evaluate the additional status information, in order to be able to display all the necessary controller status information on the extension display.

Bit of the status telegram	Meaning
0	On "1": Comfort operation activated
1	On "1": Standby mode active
2	On "1": Night mode active
3	On "1": Frost/heat protection mode active
4	On "1": Controller disabled
5	On "1": Heating, on "0": Cooling
6	On "1": Controller inactive (deadband)
7	On "1": Frost alarm ( $T_{Room} \leq +5 \text{ }^{\circ}\text{C}$ )

Table 9: Bit encoding of the 1 byte status telegram

Bit of the status telegram	Meaning on "1"	Meaning on "0"
0	Normal operating mode	Forced operating mode
1	Comfort extension active	No comfort extension
2	Presence (Motion detector)	No presence (Motion detector)
3	Presence (Presence button)	No presence (Presence button)
4	Window opened	No window opened
5	Additional level active	Additional level inactive
6	Heat protection active	Heat protection inactive
7	Controller disabled (dew point operation)	Controller not disabled

Table 10: Bit encoding of the 1 byte additional status telegram

- "Transmit individual state"  
The 1 bit status object "Controller status, ..." contains the status information selected by the "Single status" parameter. Meaning of the status signals:
  - "Comfort mode active" -> Active if operating mode "Comfort" or a comfort extension "" is activated.
  - "Standby mode active" -> active if the "standby" operating mode is activated.
  - "Night-mode active" -> active if the "night" operating mode is activated.
  - "Frost/heat protection active" -> active if the "frost/heat protection" operating mode is activated.
  - "Controller disabled" -> Active if controller disable is activated (dew point mode).
  - "Heating / cooling" -> Active if heating is activated and inactive if cooling is activated. Inactive if controller is disabled.
  - "Controller inactive" -> Active with the "heating and cooling" operating mode when the measured room temperature lies within the dead zone. This status information is always "0" for the individual "Heating" or "Cooling" operating modes. Inactive if controller is disabled.
  - "Frost alarm" -> Is active if the detected room temperature reaches or falls below +5 °C. This status signal will have no special influence on the control behaviour.

**i** Upon a reset, the status objects will be updated after the initialisation phase. After this, updating is performed cyclically every 30 seconds in parallel with the command value calculation of the controller command values. Telegrams are only transmitted to the bus when the status changes.

### Additional controller status

The additional controller status is a 1-byte object, in whose value various information is collected in orientated to bits. In this way, controller statuses, which are not available via the 'normal' 1-bit or 1-byte controller status, can be displayed on other KNX/EIB devices or processed further (see Table 11). For example, controller extensions can evaluate the additional status information, in order to be able to display all the necessary controller status information on the extension display.

The 1-byte object "Status signal addition" is a pure visualisation object, which cannot be written.

**i** The object "Status signal addition" is only visible when the parameter "Status controller" is configured to "Controller general".

Bit of the status telegram	Meaning on "1"	Meaning on "0"
0	Normal operating mode	Forced operating mode
1	Comfort extension active	No comfort extension
2	Presence (Motion detector)	No presence (Motion detector)
3	Presence (Presence button)	No presence (Presence button)
4	Window opened	No window opened
5	Additional level active	Additional level inactive

6	Heat protection active	Heat protection inactive
7	Controller disabled (dew point operation)	Controller not disabled

Table 11: Bit encoding of the 1 byte additional status telegram

**i** Upon a reset, the additional status object will be updated after the initialisation phase. After this, the status will be updated cyclically every 30 seconds in parallel with the command value calculation of the controller command values.

### Command value limit

Optionally a command value limit can be configured in the ETS. The command value limit allows the restriction of calculated command values to the range limits "minimum" and "maximum". The limits are permanently set in the ETS and, if command value limitation is active, can be neither undershot or exceeded during device operation. It is possible, if available, to specify various limiting values for the basic and additional stages and for heating and cooling.

**i** It should be noted that the command value limit has no effect with "2-point feedback control" and with "Transmitting of command values for heating and cooling via a common object"! In that case it is still possible to configure the command value limit in the ETS, but it will have no function.

The "Command value limit" parameter on the parameter page "Room temperature control -> Controller general -> Command values and status output" defines the mode of action of the limiting function. The command value limit can either be activated or deactivated using the 1-bit communication object "Command value limit", or be permanently active. When controlling via the object, it is possible to have the controller activate the command value limit automatically after bus voltage return or an ETS programming operation. Here the "Command value limit after reset" parameter defines the initialisation behaviour. In the "Deactivated" setting, the command value limit is not automatically activated after a device reset. A "1" telegram must first be received via the "Command value limit" object for the limit to be activated. In the "Activated" setting, the controller activates the command value limit automatically after a device reset. To deactivate the limit a "0" telegram must be received via the "Command value limit" object. The limit can be switched on or off at any time using the object.

With a permanently active command value limit, the initialisation behaviour cannot be configured separately after a device reset, as the limit is always active. In this case it is also not possible to configure any object.

As soon as the command value limit is active, calculated command values are limited according to the limiting values from the ETS. The behaviour with regard to the minimum or maximum command value is then as follows...

- Minimum command value:  
The "Minimum command value" parameter specifies the lower command value limiting value. The setting can be made in 5 % increments in the range 5 % ... 50 %. With an active command value limit, the set minimum command value is not undershot by command values. If the controller calculates smaller command values, it sets the configured minimum command value. The controller transmits a 0% command value if no more heating or cooling energy has to be demanded.
- Maximum command value:  
The "Maximum command value" parameter specifies the upper command value limiting value. The setting can be made in 5 % increments in the range 55 % ... 100 %. With an active command value limit, the set maximum command value is not exceeded. If the controller calculates larger command values, it sets the configured maximum command value.

If the limit is removed, the device automatically repositions the most recently calculated command value to the unlimited values when the next calculation interval for the command values (30 seconds) has elapsed.

- i** If the controller executes a valve protection function, the command value limit is temporarily deactivated in order to make use of the full motion range of the valve.
- i** An active command value limit has a negative effect on the control result when the command value range is very restricted. A control deviation must be expected.

**Special case for command value 100% (Clipping mode)**

If with a PI control the calculated command value of the controller exceeds the physical limits of the actuator, in other words if the calculated command value is greater than 100%, then the command value is set to the maximum value (100%) and thus limited. This special, necessary control behaviour is also called "clipping". With PI control the command value can reach the value "100%" if there is a large deviation of the room temperature from the setpoint temperature or the controller requires a long time to adjust to the setpoint with the heating or cooling energy that is being applied. The controller can evaluate this state in a particular manner and react to it in various ways.

The parameter "Behaviour with command value = 100% (clipping mode PI control)" on the parameter page "Room temperature control -> Controller general -> Command values and status output" defines the functions of the PI controller when the command value is 100%...

- "keep 100% until setpoint = actual, then 0%" setting:  
The controller keeps the maximum command value until the room temperature (actual value) reaches the setpoint temperature. After that it reduces the command value down to 0% all at once (controller reset).  
The advantage of this control behaviour is that in this way sustainable heating up of undercooled rooms or effective cooling of overheated rooms will be achieved by overshooting the setpoint. The disadvantage is the in some circumstances the overshooting of the room temperature may be found disturbing.
- Setting "keep 100% as required, then adjust downwards":  
The controller maintains the maximum command value only as long as it is necessary. After that it adjusts the command value downwards according to the PI algorithm. The advantage of this control characteristic is the fact that the room temperature does not exceed the setpoint temperature at all, or only slightly. The disadvantage is that this control principle increases the tendency to oscillate about the setpoint.

Which of the methods of functioning described above is used often depends on what heating or cooling system is used (underfloor heating, radiators, fan coils, cooling ceilings, etc.), and how effective these systems are. We recommend selecting the setting "keep 100% until setpoint = actual, then 0%" (default setting). Only if this control behaviour has an adverse effect on the people's perception of the temperature in a room should the setting "keep 100% as required, then adjust downwards" be used.

- i** Clipping may also occur when a command value limit is active (maximum command value). In this case, if the internally calculated command value reaches 100%, then the controller only transmits to the bus the maximum command value according to the ETS configuration. The clipping (switching off when setpoint = actual or adjusting downwards) is performed, however.
- i** It should be noted that the clipping mode has no effect with "2-point feedback control"! In that case it is still possible to configure the parameter "Behaviour with command value = 100%" in the ETS, but it will have no function.

#### 4.2.4.2.8 Fan controller

##### Operating mode and fan levels

The room temperature control can be supplemented with a fan controller. This makes it possible to control the fan from heating and cooling systems operated by circulating air, such as fan coil units (FanCoil units), depending on the command value calculated in the controller or using manual operation. If necessary, the fan controller can be enabled separately by setting the "Fan controller available" parameter in the "Room temperature control -> Controller general" parameter node to "Yes". When the function is enabled additional parameters will appear in the ETS in the "Room temperature control -> Controller general -> Fan controller" as well as additional communication objects.

If the fan controller is enabled, the icon  becomes visible in the display after the device is commissioned (ETS programming operation).

**i** The fan controller works only in conjunction with PI feedback controls with continuous or switching (PWM) command value output. In 2-point feedback control, the fan controller is inactive, even if the function is enabled in the ETS.

Depending on the operating mode of the room temperature control, as configured in the ETS (see chapter 4.2.4.2.1. Operating modes and operating mode change-over), various controller command values can be used as the basis for fan control. The "Fan operating mode" parameter specifies which command value of the controller controls the fan controller. With one-level room temperature control, it is possible to select whether the fan is activated during heating and/or during cooling. With two-level room temperature control, it is also possible for the fan controller to be set to the basic level or the additional level during heating and cooling. However, under no circumstances is it possible to use the basic and additional levels simultaneously for a fan controller within an operating mode.

Fan coil units are as a rule equipped with filters, and have multi-level blowers whose speed and thus ventilation output can be varied by means of fan level inputs. For this reason, the fan controller of the room temperature controller supports up to 8 fan level outputs, for which the actually used number of levels (1...8) is set using the "Number of fan levels" parameter.

The controller controls the levels of a fan using bus telegrams. Usually, the fan level telegrams are received and evaluated by simple switching actuators. The electrical control of the fan level inputs of a fan coil unit takes place via these actuators. Depending on the data format of the objects of the controlled actuators, the change-over between the fan levels can either take place via up to 8 separate 1-bit objects or, alternatively, via one 1-byte object. The "Fan level change-over via" parameter defines the data format of the controller. With the 1-bit objects, each fan level discreetly receives its own object. With the 1-byte object, the active fan level is expressed by a value.

Fan level	Object value
Fan OFF	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Table 12: Value meaning for 1 byte fan level object

Due to fan motors' inertia, as a rule there is a limit to how short the time intervals for switching the fan levels can be, i.e. there is a limit to how quickly the fan speed can be varied. Often the technical information for a fan coil unit specifies change-over times that the fan controller must

maintain for each fan level change-over. The change-over direction, i.e. whether the level is being increased or decreased, does not play any role here.

With a change-over via the 1-bit objects, when the fan level is changed by the controller, the active fan level is first switched off before the new level is switched on. If the fan controller is working in automatic mode, the settable "Waiting time on level change-over" is maintained on change-over of the levels. For this short time, the fan level objects all receive the status "0 - Fan off". A new level is only then switched on when the waiting time has elapsed. Only one fan level output is ever switched on (changeover principle).

With change-over via the 1-byte object, on changing the fan level, the change-over takes place directly into the new level, without setting the "OFF" status. If the fan controller is working in automatic mode, the settable "Waiting time on level change-over" (dwell time) is always taken into account before change-over of the levels. With rapid level change-over, the change to the new level only takes place once the waiting time has elapsed.

- i** The change from level 1 to OFF always takes place immediately, without a waiting time. An optionally-configured switch-on level is applied directly.
- i** In manual mode, the "Waiting time on level change-over" is only significant for the switch-on level (Start-up via level). Here, the fan levels can be switched over without a delay through manual operation.
- i** When changing from manual operation to automatic operation, the waiting time is taken into account in the case of a connected level change.

The fan level active in the current controller operating state is shown with using the fan icon in the display of the device. In both automatic and manual operation (for a function description, please see the section "Automatic operation / manual operation"), the display takes place via arc segments in the fan icon in the following manner...

-  Fan OFF
-  Fan level 1 active
-  Fan level 2 active
-  Fan level 3 active
-  Fan level 4 active
-  Fan level 5 active
-  Fan level 6 active
-  Fan level 7 active
-  Fan level 8 active

With up to 8 fan levels each individual fan level is identified in the fan icon by an individual arc segment. The arc is closed when all 8 fan levels are switched on.

If the number of fan levels is reduced in the ETS (e.g. "3"), adjacent arc segments are joined into groups, so that when the largest fan level ("3" - ) is activated, all of the arc segments of the fan icon are illuminated. For smaller fan levels, fewer group segments are illuminated in like manner ("2" -  / "1" - ).

- i** The fans of a fan coil unit are - as described above - controlled by the fan level objects of the controller. The electromechanical valves for heating and/or cooling, integrated into the blower devices, can be controlled via suitable switching actuators using the objects "Heating message" or "Cooling message" (see page 107).
- i** The 1-byte object "Ventilation visualisation" can, if necessary, also be evaluated by other bus devices (e.g. visualisation - panel / PC software). It always transmit the current fan level as a 1-byte value, either automatically on a change or passively on reading out (value explanation according to Table 12).
- i** The objects of the fan levels are only updated by the controller. These objects may not be written to by other bus subscribers. Reading out is possible.
- i** After a device reset, the fan level objects and the visualisation object are updated and the status transmitted to the bus.

### Automatic operation / manual operation

The fan controller distinguishes between automatic and manual operation. The change-over between the two operating modes takes place using the 1-bit object "Ventilation, auto/manual", through the operation of a button on the device configured for "Fan control", or in the second operating level locally on the device.

The parameter "Interpretation object fan control automatic/manual" in the fan control parameter group defines with which switching value the automatic or manual operation is set via the communication object. Automatic mode is always active after a device reset.

- i** The "Ventilation, auto/manual" object transmits actively ("Transmit" flag set). When the operating mode is changed over using local control, the valid status is transmitted to the bus.
- i** Updates to the object value "Automatic mode active" -> "Automatic mode active" or "Manual mode active" -> "Manual mode active" do not produce any reaction.

#### Automatic mode:

The command value of the controller is used internally in the device for automatic control of the fan levels. As a transition between the levels, there are threshold values, defined according to the command value of the controller, which can be set using parameters in the ETS. If the command value exceeds the threshold value of a level, the appropriate level is activated. If the command value sinks below a threshold value, minus the configured hysteresis, then the change-over takes place into the next lowest fan level. The hysteresis value applies to all the threshold values.

The threshold values for the individual fan levels can be parameterised freely in the range from 1 ... 99 %. The threshold values are not checked for plausibility in the ETS, meaning that incorrect parameterisation is possible. For this reason, it must be ensured that the threshold values, compared to the level value, are configured in a rising direction (level 1 threshold value > level 2 threshold value > level 3 threshold value > etc.).

When the command value changes, and thus the fan level, it is only possible to switch directly into neighbouring levels (exception: switch-on level). Thus, in Automatic operation, it is only possible, for example, to switch from level 2 down to level 1 or up to level 3. If the command value change exceeds or undershoots the threshold values of multiple fan levels, then, starting with the current fan level, all the fan levels are activated in succession until the fan level specified by the command value is reached.

If the fan is switched off by the automatic system, then it runs on for the time configured as "Fan run-on time, heating" or "Fan run-on time, cooling", providing that these run-on times are configured in the ETS.

- i** In automatic mode, the fan level objects are updated according to the internal command value calculation (cyclically every 30 seconds) plus the waiting time configured for level change-over. Telegram transmission only takes place when the object values of the fan levels are changed. After a device reset, the fan level objects are updated and the status transmitted to the bus.
- i** If a switch-on level is configured in the ETS ("Start-up via level" parameter), then, before the automatic activation of a fan level, it is possible to switch to a level, specified in the ETS and usually higher, for a brief time according to the command value (see section "Switch-on level").
- i** The command value evaluated by the fan controller in Automatic mode can be optionally limited by the top and bottom command value ranges by the parameters "Command value is 0% until internal command value is greater than" and "Command value is 100% as soon as internal command value is greater than". In addition, the command value can also be raised by a constant value by the "Command value offset" parameter (see page 154-155).

#### Manual operation:

With the local control of a button configured to "Function = Fan control" and "Button function = Manual control" on the device, the controller makes a distinction as to whether it was in automatic or manual mode at the time the button was pressed.

If the controller is in automatic mode, then pressing a button switches to manual mode. The parameter "Fan level on change-over to manual" then decides whether the fan level most recently set in automatic mode is maintained, the fan is switched off or a defined fan level is set (see also next section "Switch-on level").

If, at the time the button is pressed, the manual controller is already active, then the controller switches to the next highest fan level without a delay. If the fan is in the highest level, then pressing a button switches it back to the OFF level. From there, every additional press causes the fan level to be raised. The switch-on level is ignored.

If the fan is switched off manually from the highest level, then it runs on for the time configured as "Fan run-on time, heating" or "Fan run-on time, cooling", providing that these run-on times are configured in the ETS. If, during the run-on time, the manual control button is pressed again, the controller will terminate the run-on time. The fan switches off briefly and then switches immediately to level 1.

In fan control in the second operating level, the fan level and automatic mode can be set directly without taking into account the parameter "Fan level on change-over to manual", the switch-on level or fan run-on times.

- i** The 1-bit object "Ventilation, auto/manual" only allows change-over between automatic and manual operation. It is not possible to switch the fan levels on using the object. This function is reserved solely for local control.
- i** Local actuation of a button configured to "Function = Fan control" and "Button function = Automatic" on the device deactivates manual operation and causes the controller to change over to automatic operation.
- i** When changing from manual operation to automatic operation, the waiting time configured in the ETS is taken into account in the case of a connected level change.
- i** The parameter "Fan level on change-over to manual" is not checked for plausibility in the ETS, meaning that an implausible parameterisation is possible. For this reason, care should be taken to ensure that there is no level in the configuration which is higher than the actual fan levels. If a level which does not exist is to be configured for the change-over to manual control, then the fan controller changes over to the maximum possible level when changing over to manual operation.
- i** In manual operation, the switch-on level only functions in certain situations (see next section "Switch-on level").

### Switch-on level

The fan can, if it was switched off before and should now start up, be switched on at a defined switch-on level. This switch-on level can be any of the available fan levels, and is set in the ETS using the "Start-up via level" parameter. The switch-on level is generally one of the higher fan levels of a fan coil unit, so that at the beginning of a heating or cooling process the fan can start up correctly (reliable start-up of the fan motor through transfer of a higher torque, and thus a higher fan speed).

The switch-on level remains active for the "Waiting time on level change-over" configured in the ETS. In automatic operation, the controller only switches to the fan level specified by the command value, when the waiting time has elapsed. There is no change-over if, after the waiting time has elapsed, the fan level specified by the command value equals the switch-on level.

- i** If the controlled fan requires a longer period of time for the start-up, then the waiting time in the ETS should be configured to higher values (possible time range 100 ms ... 25.5 s). It should be noted that the waiting time is also taken into account on each level change-over in automatic operation!

The switch-on level is always taken into account by the fan controller in automatic mode on switching the fan on (if it was previously switched off by the command value evaluation) and, in certain situations, after activation of manual operation. On changing over to manual operation, the behaviour of the fan depends on the settings of the parameter "Fan level on changing over to manual" and "Start-up via level" and the previous fan level in automatic operation as follows...

- If, due to the "Fan level on change-over to manual" parameter, a defined level from level 1 to level 8 is requested, the controller will set this level on activating manual operation. In this case, the parameter "Start-up via level" is not taken into account if the fan was most recently switched off in automatic operation.
- If, due to the "Fan level on change-over to manual" parameter, "Fan level OFF" is requested, the controller will switch the fan off during the change-over to manual operation. On subsequent pressing of the button for manual control, the "Start-up via level" parameter is taken into account and the switch-on level set. Then, the controller waits in this level until further manual operation.
- If, due to the "Fan level on change-over to manual" parameter, no defined level is requested ("No change" setting) and the fan was switched off during automatic operation, then it will remain switched off on changing over to manual operation. On subsequent pressing of the button for manual control, the fan is switched to the first level. The "Start-up via level" parameter is thus not taken into account.

**i** A configured switch-on level is applied directly without a waiting time.

**i** With a fan change-over via the 1-bit objects, when the fan level is changed by the controller, the active fan level is first switched off before the new level is switched on. In this case, the switch-off of a fan level and the subsequent changeover to a new fan level is not evaluated as a fan start-up, also meaning that the switch-on level is not set. In automatic operation, the switch-on level is only taken into account if the fan was switched off previously by the command value evaluation (command value < level 1 threshold value minus hysteresis) and then it is to start up using a new command value.

**i** The start-up via the switch-on level also takes place after a change-over from manual operation to automatic operation, providing that the fan was most recently switched off in manual operation and, in automatic operation, a new command value requires the fan to be switched on.

**i** The parameter "Start-up via level" is not checked for plausibility in the ETS, meaning that an implausible parameterisation is possible. For this reason, care should be taken to ensure that there is no switch-on level in the configuration which is higher than the actual fan levels. The fan controller automatically corrects a faulty parameterisation by activating level 1 for the start-up, meaning that the fan starts up normally without a switch-on level.

### **Fan level limit**

To reduce the fan noise of a fan coil, the fan level limit can be activated. The level limit reduces the sound emissions by limiting the maximum fan level to a fan level value specified in the ETS by the "Level limit" parameter (limit level). The limitation can be switched on and off via a 1-bit "Fan, level limit" object, and thus activated in accordance with requirements, for example via a timer during night-time hours in order to reduce noise in bedrooms, or via "manual" operation of a pushbutton when a "quiet room" is needed (auditorium or the like). The limitation of the fan level is activated by receipt of a "1" telegram via the object "Fan, level limitation". Deactivation is therefore achieved through the receipt of a "0" telegram.

While a limitation is active, the fan controller prevents the fan from being switched to a higher level than the limitation level. If, at the instant that the limit is activated, the fan is running at a level that is greater than the limit level, then the fan level is immediately reduced to the limitation value. In this case the switching sequence of the individual levels and the waiting time configured in the ETS are also taken into account in the level change-over.

The limitation level can be one of the available fan levels.

The level controller distinguishes between Automatic and Manual operation.

- i** The fan level limit overdrives the switch-on level. As a result, when the fan is switched on, if the limit is active, the level has an active limit and the switch-on limit is not started. In this case, the limit level is jumped to without waiting.
- i** The level limit has no effect with an activated fan forced position.
- i** The parameter "Level limit" is not checked for plausibility in the ETS, meaning that an implausible parameterisation is possible. For this reason, care should be taken to ensure that there is no limit level in the configuration which is higher than the actual fan levels. If a higher limit level is configured, then the limit has no effect.

### Forced fan position

The controller provides the option of activating a forced fan position via the bus. With an active forced position, the fan levels can neither be controlled nor switched over in either automatic or manual mode. The fan remains in the forced state until the forced position is removed using the bus. In this manner, it is possible to switch the fan to a locked and controlled state, for example for servicing purposes.

As soon as a "1" telegram is received via the 1-bit object "Ventilation, forced position", the controller immediately sets the fan level configured in the ETS without delay. The fan can also be completely switched off. The only special feature when activating the forced position is the fact that the fan controller is in automatic operation and a waiting time elapses, due to a previous level change-over. In this case, the fan controller only switches to the forced position level without the waiting time elapsing.

The forced position is dominant. For this reason, if connect be overdriven from automatic mode, manual mode, the level limit or fan protection. Only when the forced position is removed does the fan control begin to control the fan levels according to the active operating mode.

The removal takes place when a "0" telegram is received via the object "Ventilation, forced position". The fan always switches itself off first. In automatic operation, the controller then evaluates the active command value and, when the waiting time configured in the ETS has elapsed, switches to the required fan level, taking an optionally-configured switch-on level into account. In manual operation, the fan first remains switched off. The fan level is only raised when the manual control button is pressed again. If a switch-on level is configured, the controller will, when a button is pressed, switch to the switch-on level and remain there until further operation occurs.

- i** The parameter "Behaviour with forced position" is not checked for plausibility in the ETS, meaning that an implausible parameterisation is possible. For this reason, care should be taken to ensure that there is no fan level in the configuration which is higher than the actual fan levels. If a higher level is configured for behaviour in a forced position than the number of fan levels, then the fan controller will start up the maximum possible level when the forced position is activated.
- i** The forced fan position does not influence the control algorithm integrated in the controller. The command values of the PI feedback control continue to be transmitted to the bus, even with a forced fan.

### Command value limiting values and command value offset

In automatic operation, the command value of the controller is used internally in the device to control the fan levels, according to the fan operating mode. As a transition between the levels, there are threshold values, defined according to the command value of the controller, which can be set using parameters in the ETS. The evaluation of the controller command values can be specially influenced for automatic fan control.

The command value to be evaluated for the fan controller can be influenced by the "Command value is 0% until internal command value is greater than" parameter in the lower command value range. The fan controller only evaluates the command value according to the configured

threshold values when the internal command value of the controller exceeds the configured limiting value. With smaller command values, the fan remains at a standstill.

Similarly, the command value to be evaluated for the fan controller can be limited by the "Command value is 100% as soon as internal command value is greater than" parameter in the upper command value range. In this case, the controller evaluates command values which exceed the configured limiting value as 100%. This means that the fan works at full power even with command values not at the maximum.

The "Command value offset" parameter allows configuration of a constant command value offset for the fan. The fan controller always adds the configured offset to the command value to be evaluated. The effect of this is that the fan turns at greater power than required by the command value, according to the threshold values. The result of this is that, even if the command value is switched off, the fan will continue to work when the first command value threshold value is exceeded by the offset.

- i** A configured command value offset cannot affect a command value of greater than 100%. The maximum command value of the fan controllers is therefore defined as 100 %.

### **Fan protection**

The fan protection function allows the fan of a fan coil unit, which has not been active for some time, to be temporarily switched to the maximum level. In this way, the controller fan motors can be protected against stiffness. In addition, the fan blades and the heat exchanger of the fan coil unit are protected against dust against dust.

If the fan protection is to be used, it must be enabled using the parameter of the same name in the ETS. Fan protection can then be activated or deactivated directly using the 1-bit communication object "Ventilation, fan protection", for example using a KNX/EIB time switch.

If the fan protection object has the switching value "1", then the fan protection function is active. The fan then works at the highest possible fan level and overdrives automatic and manual operation. Fan protection can then be switched off again using the "0" switching value in the communication object.

The reaction of the fan to switching fan protection depends on the operating mode of the automatic fan system. In automatic operation, the fan switches back to the level determined by the command value of the room temperature control. In manual operation, the fan switches off and can then be switched on again by additional manual actuation. The "Start-up via level" parameter is taken into account here.

- i** Even if the fan controller is inactive due to the controller operating mode, it is possible to activate the fan using fan protection.
- i** With an active level limit, the maximum fan level of fan protection is specified by the limit level.
- i** For reasons of safety, fan protection is not carried out with an active forced position.
- i** If fan run-on times are configured in the ETS, then the fan is switched off after a delay when fan protection is deactivated.

#### 4.2.4.2.9 Disable functions of the room temperature controller

Certain operation conditions may require the deactivation of the room temperature control. For example, the controller can be switched-off during the dew point mode of a cooling system or during maintenance work on the heating or cooling system. The "Via object" setting in the "Switch off controller (dew point operation)" parameter in the "Room temperature control -> Controller functionality" parameter node enables the 1-bit "Disable controller" object. In addition, the controller disable function can be switched off when set to "No".

In case a "1" telegram is received via the enabled disable object, the room temperature control will be completely deactivated. In this case all command values = "0" and the "Dew point operation"  icon lights up on the device display (wait for 30 sec command value update interval!). The controller, however, can be operated in this case.

The additional level can be separately disabled when in two-level heating or cooling mode. When set to "Yes", the "Additional level disabling object" parameter in the "Room temperature control -> Controller general" parameter node will enable the 1 bit "Disable additional level" object. In addition, the disable function of the additional level can be switched off when set to "No". In case a "1" telegram is received via the enabled disable object, the room temperature control is completely deactivated by the additional level. The command value of the additional level is "0" while the basic level continues to operate.

- i** A disable is always deleted after a reset (return of bus voltage, ETS programming operation).

#### 4.2.4.2.10 Valve protection

Valve protection may be carried out periodically in order to prevent the addressed control valves of the heater or cooling system from becoming calcified or stuck. When set to "Yes", the "Valve protection" parameter in the "Room temperature control -> Controller functionality" parameter node activates valve protection.

This type of protection is generally started not only for non-active command value outputs, i.e. for outputs which have not requested any heating or cooling energy over the past 24 hours. For these outputs, by taking into account the following parameterisation the controller will periodically set the command value to the maximum value once a day for a duration of approx. 5 minutes...

Command value output not inverted:

-> 1-bit command value: "1", 1-byte command value: "255"

Command value output inverted:

-> 1-bit command value: "0", 1-byte command value: "0"

Thus even long closed valves will be opened briefly on a regular basis.

- i** A controller disable has no influence on the valve protection. This means that valve protection is carried out, even when the controller is disabled.
- i** The controller checks the 24 hr time cycle for valve protection using its internal clock. With a time-synchronised clock, valve protection takes place each day at 8.00 in the morning. If the time signal has not be synchronised via the bus for a long time, then the time is hidden in the display. However, the clock continues to run internally with the deviation to be expected. This means that the valve protection time may shift continually with an unsynchronised clock.

#### 4.2.4.3 Room temperature controller extension

The device can be used for single-room temperature control. Depending on the operating mode, the current temperature setpoint and on the room temperature, command values for heating or cooling control and fan control can be sent to the KNX/EIB. Usually, these command values are then converted by a suitable KNX/EIB actuator, e.g. heating or switching actuators or directly by bus-compatible actuating drives, evaluated and converted to physical variables for air conditioning control.

The room temperature control is an independent function section of the device. It has its own parameter and object range in the ETS configuration. Therefore, the room temperature controller can be switched on or off, irrespective of the push button sensor function.

The controller function section of the device can either work as a main controller or as a controller extension. As the main controller, the room temperature controller function is fully switched on and the control algorithm activated. Only the main controller transmits control value telegrams. A controller extension itself is not involved in the regulating process. With it, the user can operate the single-room controller, i.e. the main controller from different places in the room. In this way, any number of operating extensions can be set up.

In this chapter, the functions of the room temperature controller are described as an extension.

##### 4.2.4.3.1 Connection to room temperature controller

###### Function

The controller extension function can be activated to control a KNX/EIB room temperature controller. The controller extension function is enabled using the "Controller extension" setting of the parameter "Room temperature controller function" in the "Room temperature control" parameter node.

Typical KNX/EIB room temperature controllers generally offer different ways of influencing or visualising the room temperature control...

- Switching over between different modes of operation (e.g. "Comfort", "Night" ...) with different setpoint temperatures assigned to each mode by the thermostat.
- Signalling the presence of a person in a room. The signalling may also be combined with a configured switchover in the mode of operation.
- Readjustment of the setpoint temperature in levels which are referred in each case to the configured setpoint temperature of the current operating mode (basic setpoint shift).

The controller extension is operated using the push button functions of the device ("push button sensor" function section). In this way, it is possible to completely control a room temperature controller by changing the operating mode, by predefining the presence situation or by readjusting the setpoint shift. For this purpose, the buttons of the push button sensor selected as extension operation buttons must be configured for the "Controller extension" function (see chapter 4.2.4.1.8. Controller extension function).

**i** It should be noted that an extension operation is possible with a button configuration. The controller extension function must be enabled in the "Room temperature control" parameter node. In all other cases, the controller extension function is not operational in the "push button sensor" function section.

Besides the operating function, the controller extension also possesses a display function. As on the main controller, various items of status information of the temperature controller can be shown on the device display. As the displayed states and information and also some operating functions are strongly dependent on the parameterisation of the main controller, the controller extension must also be configured and thus match the functions of the main controller. These

functions are matched by parameters in the parameter node "Room temperature control" (see chapter 4.2.4.3.3. Display functions).

In addition to the status indication on the device display, the push button sensor can indicate the state of one or more room temperature controllers with the status LEDs of the rockers or buttons. This feature permits the indication of operating modes or the bit-oriented evaluation of different status objects of controllers. In case of the controller extension functions "Setpoint shift" or "Presence function", the status LEDs can also signal the state of the corresponding functions directly (see chapter 4.2.4.1.14. Status LED).

### Communication objects

The controller extension can work properly only if all extension objects are linked with the objects of the same function in the room temperature controller. The controller extension with the objects exists only once in the pushbutton sensor (indication in the object name "B.Controller extension"). All button functions configured for the controller extension act on the objects belonging to the extension.

Objects with the same function can be linked together using identical group addresses, meaning that multiple controller extensions can affect one main controller.

Table 13 shows all the communication objects of the controller extension and explains the function and the necessary connections to the objects of the main controller. With some objects, (e. g. "Controller status") care should be taken to ensure that the data formats (1 Bit, 1 Byte) agree.

Object on the Controller extension	Object on the main controller	Function / Meaning
B.Controller extension Operating mode switch-over	C.Input Operating mode switch-over	Change-over and transmission of the operating mode to the main controller.
B.Controller extension Forced operating mode change over	C.Input Operating mode forced-control	Change-over and transmission of the forced operating mode to the main controller.
B.Controller extension Presence button	C.Input / Output Presence object	Change-over and transmission of the presence status to the main controller. Also for activating the status-LED of a presence button.
B.Controller extension Setpoint shift output	C.Input Setpoint shift specification	For setting a new counter value to adjust the setpoint for the main controller.
B.Controller extension Setpoint shift input	C.Output Acknowledge setpoint shift	Receiving the counter value to adjust the setpoint of the main controller.
B.Controller extension Controller status	C.Output Controller status	To show different icons in the display. Also for controlling the status LED of a function button to change over the operating mode.
D.Input controller extension Command value for heating	C.Output Command value for heating	Display of the heating icon.

D.Input controller extension Command value for cooling	C.Output Command value for cooling	Display of the cooling icon.
D.Input controller extension Cmd. value heating/cooling	C.Output Cmd. value heating/cooling	Display of the heating or cooling icon.
D.Input controller extension Setpoint temperature	C.Output Setpoint temperature	Display of setpoint temperature in the display.
D.Input controller extension Status signal addition	C.Output Status signal addition	Shows a comfort extension in the display.
D.Input controller extension Ventilation visualisation	C.Output Ventilation visualisation	Shows the fan levels in the display, if fan control is activated in the main controller.

Table 13: Communication objects of the controller extension

**i** The actual room temperature can be detected by the communication objects of the room temperature measurement system, which are also available in the controller extension, and then shown in the display.

#### 4.2.4.3.2 Operating functions

##### Operating mode switchover

Change-over of the controller operating mode can be effected in accordance with the standard function block for room temperature controllers defined in the KNX handbook with two 1-byte communication objects. The operating mode can be switched over with the normal and with the forced objects. The "B.Controller extension operating mode change-over" object offers a selection between the following operating modes...

- Comfort mode
- Standby mode
- Night mode
- Frost/heat protection mode

The "B.Controller extension forced operating mode change over" communication object has a higher priority. It permits forced switching between the following modes of operation...

- Auto (normal operating mode switchover)
- Comfort mode
- Standby mode
- Night mode
- Frost/heat protection mode

The operating mode transmitted to the bus on a button press of the controller extension is defined by the parameter "Operating mode on pressing the button". Depending on the configured functionality, it is possible that ...

- Either one of the above-mentioned modes is activated (single selection) on the press of the button,
- Or the device is switched over between two or three modes (multiple selection).

**i** Notes on multiple selection:

In order to ensure that a change-over from one operating mode to another works properly even from different locations, the operating mode objects of the controller and those of all controller extension push button sensors must be interlinked and have their "Write" flag set. In the objects concerned, this flag is set by default

By checking the linked operating mode switchover object, the controller extension knows which of the possible operating modes is active. Based on this information, the device changes over into the next operating mode in sequence when a button is pressed. In the event that none of the possible operating modes is active, the next operating mode in the sequence is set to "Comfort" mode (in case of "Standby ->Night" to "Standby" mode). As far as switching over between the forced operating modes and "Auto" is concerned, the device switches into the "Auto" operating mode when none of the configured operating modes is active.

**i** It is not possible to program a reaction on release of the button. A long button-press is evaluated in the same way as short one and switches into the corresponding operating mode insofar as this is acceptable for the controller.

**i** If a status LED is to indicate the current operating mode, the status LED function must be programmed for "Operating mode indication" and its status object be linked with the corresponding group address for operating mode change-over with normal or high priority.

##### Presence button

All buttons with their function set to "Presence button" are internally linked with the "B.Controller extension presence button" object. The parameter "Presence function on pressing the button" defines the object value transmitted to the bus on pressing a button.

In order to ensure that the object value transmitted in the "Presence TOGGLE" setting is always the correct one, the presence object of the room temperature controller and the "Presence

button" objects of the controller extension push button sensors must be interlinked and have their "Write" flag set. In the extension objects concerned, this flag is set by default.

It is not possible to program a reaction on release of the button. A long button-press is evaluated in the same way as short one and switches into the corresponding presence mode insofar as this is acceptable for the controller.

The status LED of the presence button can indicate both the presence status (setting "Button function indication active / inactive") and also the actuation of the button. In addition, the usual setting possibilities of the status LED are configurable as well.

### **Setpoint shift**

The setpoint shift is another available function of the controller extension. It makes use of two 1-byte communication objects with data point type 6.010 (integer with sign). This extension function allows shifting of the basic setpoint for the temperature on a room temperature controller by pressing a button. Operation of the extension is generally the same as the operation of the main controller.

A button configured as a setpoint shift button reduces or increases the setpoint shift value on each press by one step width as specified by the main controller. The direction of the value adjustment is defined by the parameter "Setpoint shift on pressing the button". Releasing the button and a long press have no other functions.

#### Communication with main controller:

In order to enable the controller extension to effect a setpoint shift in a room temperature controller, the controller must have input and output objects for setpoint shifts. In this case, the output object of the controller must be linked with the input object of the extension unit and the input object of the controller must be linked with the output object of the extension via an independent group address.

All objects are of the same data point type and have the same value range. A setpoint shift is interpreted by count values: a shift in positive direction is expressed by positive values whereas a shift in negative direction is represented by negative object values. An object value of "0" means that no setpoint shift has been activated.

Via the "B.Main controller input setpoint shift", the extensions are enabled to determine the current setpoint shift position. Starting from the value of the communication object, each button-press on an extension will adjust the setpoint in the corresponding direction by one count value level. Each time the setpoint is adjusted, the new shift is transmitted to the room temperature controller via the "B.Setpoint value shift output" object of the controller extension. The controller itself checks the received value for the minimum and maximum temperature limits (see controller documentation) and adjusts the new setpoint shift if the values are valid. When the new count value is accepted as valid, the controller transfers this value to its output object for setpoint shifting and retransmits the value to the extension as positive feedback.

Due to the standard data point type used as the output and input object of the controller extension and the weighting of the individual level by the controller itself, each extension unit is able to determine whether a shift took place, in which direction it took place and by how many levels the setpoint was shifted. This requires that the communication objects are connected on all controller extensions and the controller.

The information for the step value as feedback from the controller enables the extension to continue the adjustment anytime at the right point. The extension units can likewise react to a reset of the setpoint shifting function by the controller.

#### 4.2.4.3.3 Display functions

##### Indication of the controller operating mode

The controller extension can indicate the current operating mode of the controller in the display. Just like on the controller itself the operating mode is indicated by the  (comfort),  (standby),  (night) and  (frost/heat protection) icons. A comfort extension  /  can also be shown in the display. This display information is obtained from the communication objects "B.Controller extension controller status" and "D.Input controller extension status signal addition". These objects should be connected to the main controller objects with the same function!

It is not possible to use the display information to distinguish whether the operating mode has been set via a forced object or via the 'normal' operating mode change-over in case of a KONNEKX change-over. It is possible to change over the operating mode using the control function of the controller extension.

-  It is not possible to change over the controller operating mode in the second operating level on a controller extension in local control.

##### Indication of a setpoint shift

The controller extension can indicate on the display in the form of a line graphic "----0----" whether a basic setpoint shift has been adjusted on the controller. Furthermore, the display shows whether the shift is active in the positive "0----" or negative "----0" direction. A bar corresponds to shifting by one level value. The value of a level can be parameterised in the ETS. If no shift is active, only "0" is displayed.

In order for the display of a basic setpoint shift to function correctly, the "B.Controller extension current setpoint shifting" communication object has to be connected to the object of the same function in the main controller. A basic setpoint shift can also be set using the operating function of the controller extension.

For the controller extension to be able to display the setpoint shift correctly, the extension must also be configured and matched to the functions of the main controller. These functions are matched by the "step width of the 4-level setpoint shift" parameter in the parameter node "Room temperature control". These parameters must agree with the settings of the parameters of the same name in the main controller.

-  It is not possible to perform a basic setpoint shift in the second operating level on a controller extension in local control.

##### Indication of setpoint temperature

The controller extension can not indicate the setpoint temperature of the room temperature controller in the display.

##### Indication of the heating and cooling messages

The main controller can indicate on the display that heating and cooling energy is requested by the heating or cooling systems. This is indicated by the "  " icon for heating or by the "  " icon for cooling.

For the display to function, the communication objects for the controller command values of heating mode and/or cooling mode of the extension and main controller must be connected.

The command value format are strongly dependent on the parameterisation of the main controller. For the controller extension to be able to evaluate the command value telegrams

correctly, the extension must also be configured and thus matched to the functions of the main controller. These functions are matched by the following parameters in the parameter node "Room temperature control"...

"Controller operating mode", "Controller transmits heating and cooling command values to a shared object" (only on "Controller operating mode" = "Heating and cooling"), "Type of feedback control", "Controller outputs command value ... in inverted form".

### **Fan levels display**

As on a main controller, a controller extension can also indicate the current fan level of a fan controller in the display. There is no difference in the control function of the fan symbol , , , , , , , 

 compared with the main controller function.

For the fan level indication to function, the communication object "D.Input controller extension ventilation visualisation" must be connected to the object of the same function of the main controller.

The fan level display must be enabled separately on the controller extension using the "Controller fan control available" parameter. In addition, it is necessary to set with how many fan levels (1...8) the main controller works.

#### 4.2.4.3.4 Room temperature measurement

Room temperature measurement by the device is always active, irrespective of the "Room temperature control" or "Controller extension" functions and can thus be used independently (e.g. for simple measurement and indication of a room temperature without feedback control). With a controller extension, the function of the room temperature measurement by the internal or external sensor is as described in the chapter "Ambient temperature controller".

#### 4.2.4.3.5 Behaviour after a device restart

The different indication and operating functions of the controller extension are controlled via different communication objects as described in the previous chapters. A main controller must transmit the current status to the extensions, i.e. updating the communication objects so that, after a programming operation or after the return of bus voltage, all the status information is available for the initialisation of the extension. This takes place automatically for some objects during the initialisation of the main controller.

To ensure that all the objects are initialised correctly, some communication objects of the controller extension can also initialise automatically after a device restart as an option. For this, the parameter "Value request from controller extension?" the parameter node "Room temperature control" can be set to "Yes". The update takes place after a reset by means of a ValueRead telegram to the room temperature controller. This must answer the request with a ValueResponse telegram. If the extension does not receive all or some of the answers, the affected objects are initialised with "0". In this case, after a reset the objects must first be actively rewritten by the bus by other bus subscribers, e.g. through automatic transmission by the main controller. This is also always the case when the parameter "Value request from controller extension?" is configured to "No".

The automatic update takes place for all the transmitting objects with the name "T.Controller extension".

- i** The automatic update can take place with a delay after a device reset. If there are still other bus devices besides the push button sensor transmitting telegrams immediately after a reset, it may be useful to activate the transmit delay for in order to reduce the bus load (see chapter 4.2.4.1.16. Transmission delay).
- i** During commissioning, all extensions should be put into operation first. Only then should the main controller be connected and programmed. For larger KNX/EIB installations where the extensions are sometimes distributed over several lines, the remaining lines should also be initialized after a reset of one line.

#### 4.2.4.4 Scene function

##### Scene control

The push button sensor can be used in two different ways as part of a scene control system...

- Each rocker or button can work as a scene extension. This feature makes it possible to recall or to store scenes which may be stored in other devices (see chapter 4.2.4.1.6. Scene extension function).
- The push button can independently store up to eight scenes with eight actuator groups. These internal scenes can be recalled or stored by the rockers or buttons (internal scene recall) and also by the communication object "B. scene extension input". In the following subsections the internal scene function will be dealt with in greater detail.

##### Scene definition and scene recall

If the internal scenes are to be used, the parameter "Scene function ?" in the parameter node "Scenes" must be set to "Yes".

The matching data types for the eight scene outputs must then be selected and adapted to the actuator groups used. The types "Switching", "Value (0 ... 255)" or "Value / blind position (0 ... 100 %)" can be selected. As a rule, Venetian blinds are controlled via two scene outputs. One output controls the blind height and the other one adjusts the slat position.

There is a separate parameter node available in the ETS for each scene output. The data types can be selected in this node using the parameters of the same name. The ETS sets the corresponding communication objects and the additional parameters of the scene commands.

The scene parameters can be set in the parameter node of a scene output for each individual scene ("scene 1 ... 8"). The setting options are the same for all 8 scenes.

It is possible that the values for the individual scenes preset by the parameters are modified later on with the storage function (see page 168-169) when the system is in operation. If the application program is then loaded again with the ETS, these locally adapted values will normally be overwritten by the parameters. Due to the fact that it may take considerable efforts to readjust the values for all scenes in the system, the parameter "Overwrite scene values during ETS download ?" offers the possibility of retaining the scene values stored in operation without overwriting them.

These internal scenes can be recalled directly via the rockers or buttons (function "Recall internal scene") and also by another bus device via the "B. scene extension input" communication object. This 1 byte communication object supports the evaluation of up to 64 scene numbers. For this reason it must be specified which of the external scene numbers (1 ... 64) is to recall the internal scene (1 ... 8). This specification is made using the parameters "Recall scene 1...8 via extension object with scene number" in the "Scenes" parameter node. If the same scene number is listed for several internal scenes at this point, it is always only the first of these scenes that will be activated (scene with the lowest scene number).

In some situations there may be the requirement that a group of actuators is not controlled by all, but only by certain scenes. A classroom, for instance, may require open blinds for the "Welcome" and "Break" scenes, closed blinds in the "PC presentation" scene and no change in the "Discussion" scene. In this example, the parameter "Permit transmission ?" in the parameter node of a scene output can be set to "No" for the "Discussion" scene. The scene output is then deactivated during the corresponding scene.

The parameter "Transmit delay" permits an individual waiting time for each scene output. This transmit delay can be used in different situations...

- When the actuators participating in a scene transmit status messages automatically or when several scene buttons are used to increase the number of channels within the scenes, the recall of a scene may result for a short time in high bus loading. The transmit delay helps to reduce the bus load at the time of scene recall.
- Sometimes, it is desirable that an action is started only after another action has ended. This can be for instance the illumination which is to shut off only after the blinds/shutters have been raised.

The transmit delay can be set separately for each scene output in the parameter group of a scene. The transmit delay defines the time delay between the individual telegrams during a scene recall. The setting specifies how much time must pass after the first scene telegram before the second is transmitted. After transmission of the second scene telegram, the configured time must again pass before the third is transmitted and so forth... The transmit delay for the scene telegram of the first output starts immediately after the scene has been recalled.

The transmit delay between telegrams can also be deactivated (setting "0"). The telegrams are then transmitted at the shortest possible time interval. In this case, however, the order of the telegrams transmitted can deviate from the numbering of the scene outputs.

- i** When a new scene recall (also with the same scene number) occurs during a current scene recall - even in consideration of the pertaining transmit delays - the scene processing started first will be aborted and the newly received scene number will be processed. A running scene is also aborted when a scene is being stored!
- i** During a scene recall - even if delayed - the control surfaces of the push button sensor are operational.

### Storing scenes

For each output of a scene, the user can define a corresponding scene value in the ETS which is then transmitted to the bus during a scene recall. During the ongoing operation of the system it may be necessary to adapt these preset values and to save the adapted values in the push button sensor. This can be ensured by the storage function of the scene control.

The value storage function for the corresponding scene number is enabled with the parameter "Permit storing ?" ("Yes") or disabled ("No"). When the storage function is disabled, the object value of the corresponding output is not sampled during storage.

A scene storage process can be initiated in two different ways...

- by a long press on a rocker or button of a control surface configured as "Scene extension",
- by a storage telegram to the extension object.

During a storage process, the push button sensor reads the current object values of the connected actuators. This is carried out by means of eight read telegrams (ValueRead) addressed to the devices in the scene which return their own value (ValueResponse) as a reaction to the request. The returned values are received by the push button sensor and taken over permanently into the scene memory. Per scene output, the push button sensor waits one second for a response. If no answer is received during this time, the value for this scene output remains unchanged and the push button sensor scans the next output.

In order to enable the push button sensor to read the object value of the actuator addressed when a scene is stored, the read flag of the corresponding actuator object must be set. This should be done only for one actuator out of an actuator group so that the value response is

unequivocal.

The stored values overwrite those programmed into the push button sensor with the ETS.

- i** The storage process will always be executed completely by the push button sensor and cannot not be aborted before it has ended.
- i** Recalling scenes in the course of a storage process is not possible, the buttons or rockers of the push button sensor remain nevertheless operational.

#### 4.2.4.5 Display

##### Introduction

On the front side of the device in the upper area, there is an LED display (OLED) with switchable and dimmable backlighting (figure 50). The upper part of the display has a graphics area of 132 x 30 pixels (40). This area is also called a "page". A page can display one, two or three lines of text (time, date, temperatures, formatted and unformatted values, running texts), as well as large graphic symbols (30 x 30 pixels). 30 graphic symbols are predefined in the device memory to show weather situations, the indoor or outdoor temperature, timer, shade or multimedia system, for example. The large symbols can be configured as necessary in the ETS and can also be switched via the bus using communication objects.

In addition, information texts can also be shown in the graphic area of the display. This info mode can be used to give the user help texts about how to use the control surfaces when a button is pressed on the display (intelligent nameplate).

In the bottom part of the display, there are permanently defined, small symbols (43) in the segment area, which display the various operating modes of the ambient temperature controller or the controller extension, as well as the status of external timer channels and the information text mode.



Figure 50: Device display with backlighting (example image)

(40) Graphic area / page (132 x 30 pixels)

(41) Text display (here: 2-line)

(42) Large graphic symbol

(43) Segment area with small symbols

##### 4.2.4.5.1 Page structure and display functions

###### Page structure

During ETS project planning, up to four display pages, each with one, two or three lines of text, can be defined. Two proportional character sets with a character height of 10 pixels and 20 pixels are available for this. The use of these character sets is defined as follows...

- The largest character set is always used for one-line displays.
- For the two-line display, the large character set is used in the first line and the small character set is used in the second line.  
Alternatively, the first line can contain the display of a value using the large character set and the display of the unit text for the value in the small character set.
- For the three-line display, only the small character set is used.

**i** Optionally, the text can be shown on a display page with additional large graphic symbols (see page 173-174).



Figure 51: Example of a one-line text display with graphic symbol



Figure 52: Example of a one-line text display without graphic symbol

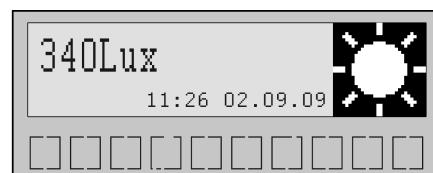


Figure 53: Example of a two-line text display with large unit with graphic symbol

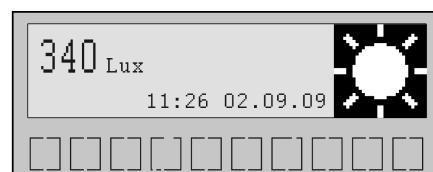


Figure 54: Example of a two-line text display with small unit with graphic symbol

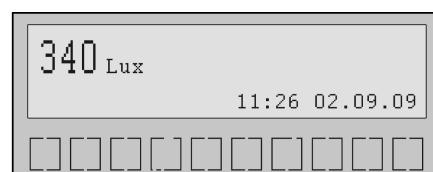


Figure 55: Example of a two-line text display with small unit without graphic symbol

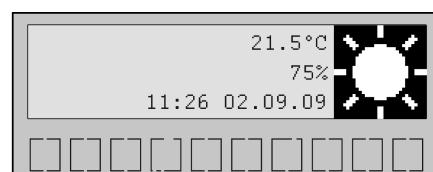


Figure 56: Example of a three-line text display with graphic symbol

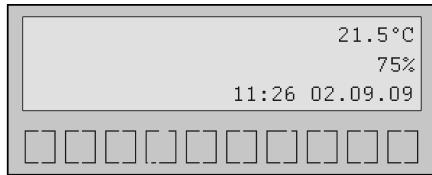


Figure 57: Example of a three-line text display without graphic symbol

**i** For reasons of simplification, all the examples are shown without static line text.

### Display functions

The display functions of a text line are derived from the use of the character sets, i.e. from the setting of how many lines a page has.

The following display functions are available in the one-line display (the formatting of the values is predefined; the display is left-aligned in the display)...

- Time
- Time and day
- Date
- Day and date
- Setpoint temperature
- Actual temperature
- External temperature
- Date + time
- Time + date
- Date, date and time
- Time + actual temperature
- Time + setpoint temperature
- Time + external temperature

In a two-line display, the first line primarily corresponds to the scope of functions of the one-line display. In addition, the following display functions can be selected (the display is left-aligned)...

- Value display, fixed DPT 5.xxx (EIS6)
- Value display DPT 9.xxx (EIS 5)
- Value display DPT 14.xxx (EIS 9)

In a two-line display, the second line offers the following settings. These display functions can also be configured for all the lines in a three-line text display (the display is then right-aligned, and the display functions marked with an "\*" can be supplemented with a static line text)...

- Time \*
- Day and time \*
- Date \*
- Setpoint temperature \*
- Actual temperature \*
- Time + date \*
- Day and date
- Date, date and time
- Switching \*
- Dimming \*
- Blind \*
- Light scene \*
- Value display, fixed DPT 5.xxx (EIS6) \*
- Value display DPT 5.xxx (EIS 6) \*
- Value display DPT 6.xxx (EIS 14 signed) \*

- Value display DPT 7.xxx (EIS 10 unsigned) \*
- Value display DPT 8.xxx (EIS 10 signed) \*
- Value display DPT 9.xxx (EIS 5) \*
- Value display DPT 12.xxx (EIS 11 unsigned) \*
- Value display DPT 13.xxx (EIS 11 signed) \*
- Value display DPT 14.xxx (EIS 9) \*
- Value display DPT 16.xxx (EIS 15) \*
- Static text
- Running text from ASCII object \*

**i** In a two or three-line text display, some display functions for lines 2 and 3 can be supplemented with a static line text (e.g. display function "Actual temperature" with static line text "Dining room"). The line text is configured in the ETS and is output left-aligned on one side in the display. Then, the value of the display function is displayed in right-aligned format. Depending on the character length of the selected display values, the line text might be overwritten at the end. In this case, a shorter line text must be chosen in the ETS.

### Graphic symbols

In addition to the text display, a graphic symbol of 30 x 30 pixels can be displayed on the right-hand edge of the display page. When a graphic symbol is displayed, the values displayed in right-aligned format are pushed to the left by existing text display functions. In such cases, it may be necessary to take into account that display values with a preceding static line text will be overwritten when graphic symbols are shown on a display page.

30 graphic symbols are stored as defaults in the device memory. The appropriate symbol is selected and configured in the ETS using the symbol number (figure 58). The symbol value "0" means that no symbol is displayed on the page.

Optionally, in continuous operation of the room controller module, the graphic symbols can be switched-over separately for each page using a communication object, allowing for situation-dependent adjustments. This switch-over can either take place using a 1-bit object or, alternatively, using a 1-byte object. When the 1-bit object is used, the switching value of the telegram specifies which symbol is to be displayed. A symbol number can be configured in the ETS for both switching values. When the 1-byte object is used, the object value received immediately defines which symbol is to be displayed. The 1-byte object possesses the data point type "ShowElementNo". This is an unsigned integer. Possible object values are "0 = Hide symbol", "1 = Show symbol no. 1", "2 = Show symbol no. 2" ... "255 = Show symbol no. 255". If the object receives a value for which no symbol exists, the received value is ignored.

**i** With a one-line text display, some display functions (e.g. "Weekday" and "Time") mean that it is not possible to show a graphic symbol, as there is no space in the display.

Weather					
1		Cloudy	2		Rain
3		Wind	4		Storm
5		Night	6		Sun (Day)
7		Sun North	8		Sun East
9		Sun South	10		Sun West
Temperature					
11		Indoor Temperature 1	12		Indoor Temperature 2
13		Outdoor Temperature	14		Setpoint Temperature
15		Actual Temperature			
Timer					
			16		Presence
17		Party	18		Holiday
Blind / Roller Shutter / Awning					
19		Blind / Roller Shutter UP	20		Blind / Roller Shutter Down
21		Blind / Roller Shutter Moving	22		Awning Extended
Fill Level					
23		Tank Empty	24		Tank Full
Multimedia					
25		Request Pages	26		Multimedia
27		Music Title Playing	28		New Music Title
29		OK	30		Adjust

Figure 58: Predefined graphic symbols with symbol number

### Running texts

The device display can show compiled running texts in up to three lines. The texts are fed into the device using two 14-byte communication objects, according to DPT 16000 (ASCII). The separated texts are then combined into a running text for display purposes. This display function means, for example, that longer status or information texts of KNX Facility or Multimedia systems can be displayed.

The running text is comprised of the text content of the object "ASCII text, 14-byte" and the content object "ASCII text supplement, 14-byte" (max. 14 characters of text each). This means

that the running text can be up to 28 ASCII characters long. The use of the supplementary object is optional.

- i** A running text can be supplemented with a static line text (left-aligned display). This means that running texts can be clearly labelled for the user of the device (e.g. "MP3: <running text>").

The parameter "Window width for running text" defines the width of the display area in pixels for the running text. Should the display of a text received via the bus require more pixels than specified by this parameter, the text will run, character by character, from right to left. Should the text display require fewer pixels than specified, the text will remain static. The display has a total width of 132 pixels. The running text is aligned on the right edge of the display and runs leftwards into the display area. If a graphic symbol is shown on the display page, the device will align the running text on the left edge of the symbol. In consequence, the running text will move further to the left. If a static line text is configured (left-aligned display), care should be taken when defining the window width of the running text that the line text is not overwritten by the running text.

The parameter "Time for running text start display" defines the waiting time at the end of a complete text display run. This allows the separation of display runs, meaning that the viewer can identify the beginning and the end of the running text. The text remains in the display during the waiting time. In the "1" setting, the text runs through uninterrupted.

- i** The text run always restarts when a new text is received via the objects. For this reason, an update of the text objects may not take place at short intervals (e.g. cyclical transmission every second), as this would produce a static text display.

## Notes on the display functions

### Indication of temperature values

The indication of the room temperature has a resolution of 0.1 °C and covers a range from -99.9 °C to +99.9 °C. The indication will refresh as soon as the determined room temperature changes within the resolution interval. Should the room temperature reach or fall below +5 °C, the symbol also flashes in the display as a temperature alarm.

The indication of the outdoor temperature has a resolution of 0.1 °C and also covers a range from -99.9 °C to +99.9 °C. The temperature display will refresh as soon as a temperature value telegram is received via the "Outdoor temperature" object. After a device reset, the display shows "---" until a telegram is received. If configured, the outdoor temperature will only be read on the display and cannot be used for any further temperature or variable calculation in the controller.

The setpoint temperature is indicated as an absolute temperature value. The currently adjusted setpoint temperature of the active operating mode is displayed. The device always rounds the indication to half degrees and shows the rounded-off temperature in the display. Its possible temperature range depends on the configured operating mode and is given by the fixed values for the frost and/or heat protection temperature. The indication will refresh once a new setpoint temperature for the controller results (e. g. from a change of the operating mode or of the basic setpoint, etc.).

### Display of the time and date information

The device possesses an internal clock, set using a communication object. The internal calculation of the current time is primarily influenced by the scope of the internally planned functions and the resulting data traffic. This may cause particularly large time deviations. For this reason, the internal clock should be synchronised on a regular basis. We recommend using, for example, an external KNX/EIB clock with DCF 77 receiver, to set the clock once an hour via the bus and thus keep the deviations as small as possible.

If, after a device reset, no time or date signal has been received, "--:--" or "----.----" appears in the display. The same indication for the time will appear unless the internal clock has been updated via the bus at least once a day (updating check at 4:00 a.m.). In both cases, the time is invalid until the first or a new time telegram is received.

If the time and date are invalid, an optional automatic enquiry can take place. To enable this, the "Request date/time" parameter in the "General" parameter node of the ETS can be set to

"Yes". In this case, if the time or date information is invalid, the device will request the current time and date once only by sending a read telegram on the bus. The read request should then be confirmed by another bus subscriber using a response telegram to the "Time" and "Date" objects.

The time can be displayed in the 24h or 12h time format. The date display can also be defined. These properties are defined in the ETS in the "General" parameter node. In the 12h time format, the display does not allow any distinction between a.m. and p.m.

The day of the week is provided by the telegram of the time. For this reason, it is also necessary to describe the "Time" object with valid time information if the time is not to be shown immediately on the device display. In order to make the parameterisation of the display functions and the object configuration independent, we recommend always planning the two objects "Time" and "Date" with separate group addresses, and also linking them to a KNX system clock.

#### Special display information

The display shows "Download active" during an ETS programming operation. In the un-programmed delivery state of the device, the text "N E W" is shown in the display. In the case of an application removed by the ETS, the display signals the text "No function". In such cases, the device type and the device firmware version also appear. In addition, the display backlighting is then dimmed to 70 % brightness.

#### Display priorities

The elements of a page possess various display priorities. Elements with a higher priority completely cover elements with a lower priority, i.e. unset pixels of the element with the higher priority delete pixels set of a lower-priority element behind it. The priority sequence of the display elements is shown in Table 14.

Display element	Priority
Value display (object values)	2 (high)
Large graphic symbol (30 x 30 pixels)	1 (medium)
Configured text	0 (low)

Table 14: Priorities of display elements

#### 4.2.4.5.2 Symbols in the segment area

Table 15 explains the meaning of all the symbols in the lower segment area of the device display. The icons signal various states of the integrated room temperature controller or the controller extension and the display operation.

Icon	Meaning
	"Comfort" operating mode active.
	"Standby" operating mode active.
	"Night" operating mode active.
	"Frost/heat protection" operating mode active. Flashes on frost alarm ( $T_{Room} \leq +5^\circ\text{C}$ ).
	The controller is in dew point operation. The controller is thus disabled.
	A "Night comfort extension" is active.
	A "Frost/heat protection comfort extension" is active.
	Indication of the basic setpoint in the positive "0 - - -" or negative "---- 0" direction. A bar corresponds to shifting by one level value. The value of a level can be parameterised in the ETS. If no shift is active, only "0" is displayed.
	General button-press display for switching on, dimming brighter, moving the Venetian blind up, increasing the value.
	General button-press display for switching off, dimming darker, moving the Venetian blind down, decreasing the value.
	Display of a fan controller configured in the ETS (impeller) with display of the active fan level  ,  ,  ,  ,  ,  ,  ,  . If no icon is displayed, either the fan control is completely deactivated in the ETS or the fan function is activated in the ETS but is switched off.
	Display of an active information mode.
	This symbol lights up when a button block is active.
	The controller uses this icon to signal that heating energy is being fed to the room. In continuous feedback control, the command value is indicated by the number of streaks that are visible  (0 %),  (1...20 %),  (21...40 %),  (41...60 %),  (61...80 %),  (81...100 %). In 2-point feedback control,  indicates a command value that is switched on and  one that is switched off.
	The controller uses this icon to signal that cooling energy is being fed to the room. In continuous feedback control, the command value is indicated by the number of streaks that are visible  (0 %),  (1...20 %),  (21...40 %),  (41...60 %),  (61...80 %),  (81...100 %). In 2-point feedback control,  indicates a command value that is switched on and  one that is switched off.
	This symbol indicates a power request of the ambient temperature controller. If it is lit, the controller is demanding heating or cooling energy.
	This symbol shows the status of a maximum of 4 external timer channels. Each corner segment of this symbol can be controlled by the bus using separate 1-bit communication objects, and each symbolises a timer channel. The segments light up when the appropriate timer channel is switched on (e. g.  ,  ,  ,  ,  ,  ,  ,  ).

Table 15: Meaning of the small symbols in the lower segment area of the device display

**i** The symbols at the bottom edge of the display can be surrounded by square pictogram frames, thus providing a graphical delimitation. The pictograms serve as placeholders for non-illuminated icons.  
The setting for whether the pictogram frames are visible or not is made using the parameter "Indicate pictogram frames" in the parameter node "Display". If the pictogram frames are not displayed ("No" setting), then only the active icons are visible in the display. If the pictogram frames are displayed ("Yes" setting), then the frames are always visible and the active icons are illuminated inside the corresponding frames.

#### 4.2.4.5.3 Info mode

When a button is pressed, the display can show texts to describe the function connected with the button and of the value to be transmitted (intelligent nameplate). In so doing, a distinction is made between one-touch operation and double-touch operation. In one-touch operation, the information text is displayed when a button is pressed and the normal push-button function is executed more or less in parallel. In double-touch operation, the information text is only displayed on the first press. Only on the second actuation is the normal push-button function also executed. The display length of the information text is set using the parameters of the same name in the ETS on the parameter page "Display".

Irrespective of the operation concept, an active information mode in the display of the device is displayed by the symbol .

The display in the information mode is made up of three lines and temporarily overwrites the normal display...

- No text is ever displayed in the first line.
- In the second line, a text of maximum 18 characters appears, which can be configured freely in the ETS for each button.
- In the third line, either a text of maximum 18 characters, which can be configured freely in the ETS, or an automatically-generated text can appear, depending on the configured push-button function.

The information mode can be switched on or off in four ways...

- By pressing a button on the device, which is configured as an information button. The parameterisation of the button for this function permits a distinction between the activation of one-touch operation or double-touch operation. When the information mode is switched off using the push-button function, any displayed information text is shown for the duration of the display.
- Through the menu of the second operating level of the room controller. With this option, one-touch or double-touch operation can be selected directly on site via the display, or the information mode can be switched off.
- Through a telegram to the 1-bit communication object "Information mode". This object is only visible if the parameter "Information display after initialisation" in the ETS is not configured to "Off".

The targeted selection of one-touch operation or double-touch operation is not possible via the object. An object value "0" always switches the information mode off. An object value of "1" always switches the information mode configured in the ETS on (one-touch operation or double-touch operation). If the transmission flag of the object is set, then the device can transmit the current status (switched on, switched off).

- Automatically after ETS programming or after a bus reset. The parameter "Information display after initialisation" must be set to either "One-touch operation" or to "Double-touch operation". During device operation, the configured status can be changed at any time in the second operating level, using an information button or using the "Information mode" communication object.

#### 4.2.4.5.4 Display control

##### Brightness of the LED display

The device possesses an LED display (OLED). Each pixel of the display possesses a miniature LED. If this LED lights up, the pixel can be seen in the display. If the pixel LED does not light up, the display remains dark at this point. Text characters and symbols are made up of multiple pixels. This produces the required display information.

The LED display is always switched on, so the display information can always be read. If necessary, the LED display can be switched or dimmed, allowing the brightness of the LED display to be influenced. In the "OFF" state, the display is permanently set to 5 % brightness.

The brightness of the LED display in the "ON" state is defined by the "Maximum display brightness" parameter. The maximum brightness can be set in 3 levels (Level 1: 60%, Level 2: 80 %, Level 3: 100 %).

The function of the LED display is specified in the parameter of the same name in the "Display" parameter node in the ETS. The LED display can be permanently switched off (5 %) or on ("Maximum brightness" parameter). In addition, event-controlled activation is possible by...

- operation of any control surface, activation of the operating mode "Night" on the internal ambient temperature controller,
- the normal or inverted value of a switching telegram via the 1-bit communication object "Display On / Off",
- The value of a value telegram via the 1-byte communication object "Display brightness". The lighting can be controlled in up to four stages using the value.

If the lighting is switched on by pressing a control surface (rocker or button), the device switches the lighting back to the minimum brightness automatically when the switch-off time configured in the ETS elapses. The switch-off time is retriggered each time a control surface is actuated. If the lighting is to be switched on in the "Night" operating mode, the lighting remains switched on continuously when night mode is active.

When the display lighting is switched using the 1-bit communication object "Display on/off", the lighting is switched permanently on or off according to the switching value (not inverted: "0" = OFF / "1" = ON; inverted: "0" = ON" / "1" = OFF).

Alternatively, the LED display can be controlled using the 1-byte value object "Display brightness". For this, it is possible to toggle the brightness to one of the three brightness levels of the maximum brightness. The received value directly defines the level ("1" = Level 1 / 60 %, "2" = Level 2 / 80 %, "3" = Level 3 / 100 %). The value "0" switches the LED display to the minimum brightness (5 %). The values "4" to "255" do not produce a reaction.

Lighting activation by operating a control surface can be combined with control through the communication objects. The lighting is switched on automatically by pressing a control surface and is only switched off again when the switch-off time configured in the ETS elapses, if the lighting is to be switched back to the minimum brightness via the corresponding communication object (object value "OFF" or "0"). In addition, the lighting can also be switched or dimmed by the communication objects, independently of operation on the device. In this case, the lighting is not switched off automatically when the time has elapsed. The switch-off can then only take place using a switch-off telegram in accordance with the normal or inverted telegram polarity or via a value = "0"

- i** The maximum brightness of the LED display (switched-on state) can be set directly on the device in the second operating level and then adjusted by the user. The brightness value set in the second operating level is saved in the device in non-volatile memory, and overwrites the value last configured in the ETS.
- i** Switching on or stepped change of the display brightness (to brighter) takes place in steps. Switching off or stepped change (to darker) is performed gradually (soft OFF with fixed dimming time implemented).

**i** The display shows "Download active" during an ETS programming operation. In the un-programmed delivery state of the device, the text "N E W" is shown in the display. In the case of an application discharged by the ETS, the display signals the text "No function". In such cases, the device type and the device firmware version also appear.

### Page change

Up to four screen pages, each with up to 3 text lines, and optionally a large graphic symbol, can be shown on the display.

A page change (toggling of display pages) is possible as follows...

- Toggling in cyclical change-over (lowest priority):  
If more than one page is configured in the ETS in the parameter node "Display", the display can be automatically switched over during operation. It is possible to separately configure each page to be included in the cyclical change-over through the parameter "Page x in cyclical change-over". The first page is always included in the cyclical change-over. The ETS parameter "Cyclical page change" specifies the display time of a page. The next page is displayed when this time has elapsed. When the last page of the cyclical change-over has been reached, there is a change-over to the first page.
- Switch-over by communication object (medium priority):  
The "Call up display pages" parameter can be used either to enable the 1-bit object "Fixed page recall" or the 1-byte object "Variable page recall". If the "Fixed page recall" object is used, the system jumps automatically to the page configured in the ETS as soon as the switching value "1" is received during operation. If the "Variable page recall" object is used, each defined page can be called up with a value between "1" ... "4". If the opened page is not planned or a value greater than "4" is received, the device will ignore the telegram. If a page is called up via the object, the device interrupts the cyclical page change-over and keeps the display on the page. A called-up page remains active until the object receives the value "0" or a new page is called up through the press of a button (see below). The value "0" in the object always switches to the first page, re-enabling the cyclical page change-over.
- Change-over through the press of a button (highest priority):  
In addition or alternatively to the cyclical change, the display can also be switched by pressing a button on the device. A button for the "Page change" function can be configured for this purpose. This configuration is performed in the parameter block of the respective button (see page 94). When a button is pressed - depending on the "On pressing a button" parameter - either the next or the previous page is called up in accordance with the cyclical change. In this setting, all the pages specified according to the configuration in the "Display" parameter node can be switched in sequence, including the pages which are not included in the cyclical change-over. Alternatively, it is also possible to call up a particular page immediately, independently of the pages of the cyclical change (e.g. push-button function "Call up page 1"), or to switch between two pages (e.g. "Toggle between pages 1 and 2"). It is not assumed here that the pages called up in this manner are in fact integrated into the cyclical change. After a page has been called up by pressing a button, the display is retained until the time for the cyclical change has elapsed (exception: change-over through communication object is active - see above). The system then continues with the cyclical change-over.

**i** The most recently opened page is overridden and overwritten in the display if the device is operated locally in the second operating level.

#### 4.2.4.6 Delivery state

##### Delivery state and non run-capable application

For as long as the device has not yet been programmed with application data by means of the ETS, the operation LED flashes at a slow rate (approx. 0.75 Hz). When any of the buttons or rockers is pressed, the appropriate status LED lights up briefly (button-press display). This condition persists until the application is programmed into the device.

By slow flashing of its operation LED (approx. 0.75 Hz), the device can also indicate that a wrong application has been programmed into its memory. Applications are non run-capable if they are not intended for use with the device in the ETS product database. In this case the pushbutton sensor and the integrated room temperature controller are not operational.

Unloading of the application program by the ETS completely deactivates the device function. In this case, the device is not reset to the delivery state described above. The buttons and the status LED do not have a function. Only the operation LED flashes slowly.

In the un-programmed delivery state of the device, the text "N E W" is shown in the display. In the case of an application removed by the ETS, the display signals the text "No function". In both cases, the device type and the device firmware version also appear.

## 4.2.5 Parameters

### 4.2.5.1 General parameters

Description	Values	Comment
□↳ General		
Transmit delay after reset or bus voltage return	Yes No	<p>After a device reset, the device can automatically transmit telegrams for the "Controller extension" function. The controller extension then attempts to retrieve values from the room temperature controller by means of read telegrams in order to update the object states. If there are still other devices installed in the bus which transmit telegrams immediately after a reset, it may be useful here to activate the transmit delay for automatically transmitting objects of the controller extension and the room temperature measurement in order to reduce the bus load.</p> <p>When transmit delay is activated (setting: "Yes"), the device computes the delay time from its device ID in the physical address. There is a maximum delay of 30 seconds before the telegrams are transmitted.</p>
Light period of status LED for button-press indicator	1 sec 2 sec <b>3 sec</b> 4 sec 5 sec	This parameter defines the switch-on time the status LED is lit up to indicate actuation. The setting concerns all status LEDs whose function is set to "Button-press display".
Function of operation LED	 <b>always OFF</b> always ON  Control via object  flashing	<p>This parameter defines the function of the operation LED.</p> <p>The operation LED is always off.</p> <p>The operation LED is always on, for instance, as orientation lighting.</p> <p>The operation LED is controlled by a separate communication object.</p> <p>The operation LED flashes permanently with a frequency of about 0.75 Hz.</p> <p>Besides the function set here, the operation LED can display different states by means of other flashing rates. These comprise Programming mode, the confirmation of full-surface actuation or the message that an application has not been loaded.</p>

Control of the operation LED via the object value	<b>1 = LED static ON / 0 = LED static OFF</b>  <b>1 = LED static OFF / 0 = LED static ON</b>  <b>1 = LED flashes / 0 = LED static OFF</b>  <b>1 = LED static OFF / 0 = LED flashes</b>	If the "Function of the operation LED" is set to "Control via object", then the telegram polarity of the 1-bit object "B. Operation LED" can be specified at this point. The LED can be switched on or off statically. In addition, the received switching telegram can be evaluated in such a way that the LED flashes.
Date display	<b>DD.MM.YY</b> MM.DD.YY YY.DD.MM YY.MM.DD	This parameter defines the sequence of the information Day, Month and Year in the text display of the date. The year is displayed with two or four digits, depending on the data points to be displayed and the font being used.
Time display	<b>24 hours</b> 12 hours	The time can be displayed in the 24h or 12h time format. In the 12h time format, the display does not allow any distinction between a.m. and p.m.
Request date / time	<b>No</b> Yes	The device possesses an internal clock, set using communication objects. The device will consider the internal time and date invalid as long as no time and date telegram has been received after a device reset. In this case, an optional automatic time poll can take place. For this, the automatic time poll can be activated using the "Yes" setting here. If the time or date information is invalid, the device will request the current time and date one time only by sending a read telegram to the bus. The read request should then be confirmed by another bus subscriber using a response telegram to the "Time" and "Date" objects.
Request date / time with	<b>1 telegram</b> 0 telegram	In order to request the date and time, the telegram polarity of the request telegram can be configured here.
Language selection	<b>German (DE)</b> English (EN) Spanish (ES) Dutch (NL) French (FR) Norwegian (NO) Italian Russian User-defined language	This parameter defines the device language. It determines the language in which predefined texts are shown on the display (e.g. in the second level or in information mode). The "User-defined language" setting is intended for future expansions.

Second operating level	Disabled <b>enabled</b>	The second operating level makes it possible to make various basic settings on the unit locally without using the ETS. In order to avoid the unintentional disruption of essential functions, access to the entire second operating level can be prevented by setting this parameter to "disabled". The setting "enabled" allows access to the second display operating level. Additional parameters then become visible in the ETS.
<input checked="" type="checkbox"/> Second operating level (Only visible if parameter "Second operating level" under "General" is set to "enabled"!)		
Change alarm control centre in second operating level	<b>Hidden</b> Visible	This parameter specifies whether message texts of an external KNX alarm control centre can be displayed and, if necessary, acknowledged, in the second display operating level ("Visible" setting). In the "Invisible" setting, no alarm control centre texts can be displayed in the second operating level.
Change information mode in second operating level	Hidden <b>Visible</b>	This parameter specifies whether the information mode can be set in the second display operating level ("Visible" setting). In the "Invisible" setting, it is not possible to control the information mode in the second operating level. The information mode can then only be controlled by an information button (if available) or as an option, limited by the object.
Change continuous controller in second operating level	Hidden <b>Visible</b>	This parameter specifies whether the settings of the continuous controller are displayed in the second display operating level ("Visible" setting). The settings of the continuous controller are the basic setpoint (comfort temperature) and the setpoint temperatures for Standby and Night mode for heating and cooling. Whether these temperature values are not just displayed but can also be changed is specified by additional parameters in the parameter node: "Room temperature control -> Second operating level". With the setting "Hidden" the setpoint temperatures of continuous controller are not shown in the second operating level, and thus cannot be changed, either. This parameter has no effect in a controller extension.

Change presence in second operating level	Hidden <b>Visible</b>	This parameter specifies whether the presence mode of the continuous controller can be set in the second display operating level ("Visible" setting). With the setting "Hidden", it is not possible to set the presence mode in the second operating level. This parameter has no effect in a controller extension.
Change setpoint shift in second operating level	Hidden <b>Visible</b>	This parameter specifies whether the setpoint shift of the continuous controller can be set in the second display operating level ("Visible" setting). With the setting "Hidden", it is not possible to set the setpoint shift in the second operating level. This parameter has no effect in a controller extension.
Change operating mode in second operating level	<b>Hidden</b> Visible	This parameter specifies whether the operating mode of the continuous controller can be set in the second display operating level ("Visible" setting). With the setting "Hidden", it is not possible to set the operating mode in the second operating level. This parameter has no effect in a controller extension.
Change fan levels in second operating level	<b>Hidden</b> Visible	This parameter specifies whether fan control is possible in the second display operating level ("Visible" setting). The menu item "Fans" is actually only visible in the operating level if the fan control has been configured as present under "Room temperature control -> Controller general". With the setting "Hidden", fan control is not possible in the second operating level. This parameter has no effect in a controller extension.
First menu item in the second operating level	<b>Central alarm syst.</b> Info mode Continuous controller Presence Setpoint shift Operating mode Fan levels	The menu entry that is shown as the first entry when the second operating level is called up can be selected using this parameter. The sequence of the subsequent entries is fixed as shown in the parameter structure.
Automatic exiting of the second operating level?	<b>Yes</b> No	This parameter can be used to configure the automatic exiting of the second operating level. In the "Yes" setting the device leaves the second

		operating level when no additional operation takes place after the last push-button operation within the "Time until automatic exit" configured in the ETS. With "No", the second operating level remains active until it is exited manually with the button combination or using the menu items "Save" or "Cancel".
Time until automatic exit	10 sec 20 sec <b>30 sec</b> 1 mins. 2 mins.	This parameter specifies the time until automatic exiting of the second operating level after no more buttons are pressed. This parameter is only visible if the parameter "Automatic exiting of the second operating level?" is set to "Yes".
Save changes?	<b>Yes</b> No	For automatic exiting of the second operating level, this parameter can be used to define whether the settings are saved or not.
Save changes after manual exiting?	<b>Yes</b> No	This parameter defines whether the settings are saved or not when the second operating level is exited using the button combination.

#### 4.2.5.2 Parameter for temperature measurement

Description	Values	Comment
□ Temperature measurement		
Temperature detection	<b>internal sensor</b> received temperature value internal sensor + received temperature value	This parameter specifies which sensor is used for room temperature measurement. With the setting "Internal sensor" only the temperature sensor integrated in the device detects the room temperature. With the setting "Received temperature value", only a KNX/EIB temperature sensor (e.g. controller extension) coupled via the "Received temperature value" object detects the room temperature. With the setting "Internal sensor + received temperature value", the KNX/EIB temperature sensor (e.g. controller extension) integrated into the device and coupled via the "Received temperature value" object detects the room temperature.
Measured value formation, temperature value to be received internally	10% to 90% 20% to 80% 30% to 70% 40% to 60% <b>50% to 50%</b> 60% to 40% 70% to 30% 80% to 20% 90% to 10%	The weighting of the measured temperature value for the internal and external sensors is specified here. That results in an overall value, which will be used for the further interpretation of the room temperature.
Internal sensor calibration (-128...127) * 0.1 K	-128... <b>10</b> ...127	Determines the value by which the internal sensor's room temperature value is calibrated. This parameter is only visible when the temperature detection system requires an internal sensor.
Calibration of received temperature value (-128...127) * 0.1 K	-128... <b>0</b> ...127	Determines the value by which the external sensor's room temperature value is calibrated. This parameter is only visible when the temperature detection system requires an external temperature value.
Request time for received temperature value (0...255) * 1 min; 0 = inactive	<b>0</b> ... 255	The polling time for the external sensor's temperature value is specified here. In the "0" setting, the external sensor is not automatically polled by the controller. In this case, the sensor must transmit its temperature value itself.

Transmission when room temperature change by  
(0..255) \* 0.1 K; 0 = No automatic transmission

0 ... 255, **3**

Determines the size of the value change of the room temperature after which the current values are automatically transmitted on the bus via the "Actual temperature" object.

Cyclical transmission of room temperature  
(0...255) \* 1 min; 0 = inactive

0 ... 255, **15**

This parameter specifies whether and when the determined room temperature is to be periodically output via the "Actual temperature" object.

#### 4.2.5.3 Parameters on the push button sensor function section

##### 4.2.5.3.1 Button/rocker function

Description	Values	Comment
□ Pushbutton -> Button configuration		
Room controller module...		Only display of the button pairs present on the room controller module.
Push-button extension module...		
Type of extension module	<b>no TSEM</b> 1-gang 2-gang 3-gang 4-gang	If an extension module is connected to the room controller module, the type of extension module must be configured here.
□ Pushbutton sensor -> Button configuration -> Operation concept, basic module		
Operation concept of buttons 1 and 2	<b>Rocker function (rocker 1)</b>	For each control surface, the user can specify independently whether it is to be used as a rocker with a common basic function or as two different buttons with completely independent functions. Depending on this setting, the ETS displays different communication objects and parameter pages.
(The same parameters are available for the other control surfaces / button pairs of the room controller module.)	Button function	
Button evaluation		
(The same parameters are available for the other control surfaces / button pairs of the room controller module.)	<b>Single area operation (only as button 1)</b> <b>Double-area operation (as buttons 1 + 2)</b>	If the operation concept of a control surface is configured as "push button function", this parameter can be used to specify whether single-surface or double-surface operation should be implemented. In single-surface operation, the entire control surface is evaluated only as a single "large" button. The surface can be depressed at any desired point in order to execute the underlying push button function. In this setting, the button with the even button number of the button pair (e.g. button 2) is inactive and physically not present. In double-surface operation, the control surface is divided into two mutually independent buttons.
Button arrangement	Left / right	
(The same parameters are available for the other control surfaces / button pairs of the room controller module.)	<b>top / bottom</b>	In the rocker function and in the pushbutton function with double-surface principle, for each control surface the user can independently specify whether it is to be divided horizontally or vertically. This defines the actuation points of the control surface.

□ Push-button sensor -> Button configuration -> Operation concept of extension module

Operation concept of buttons 5 and 6

(The same parameters are available for the other control surfaces / button pairs of the extension module.)

**Rocker function (Rocker 3)**

Button function

For each control surface of the extension module, the user can specify independently whether it is to be used as a rocker with a common basic function or as two different buttons with completely independent functions. Depending on this setting, the ETS displays different communication objects and parameter pages.

Button evaluation

(The same parameters are available for the other control surfaces / button pairs of the extension module.)

Single area operation (only as button 5)

**Double-area operation (as buttons 5 + 6)**

If the operation concept of a control surface is configured as "push button function", this parameter can be used to specify whether single-surface or double-surface operation should be implemented.

In single-surface operation, the entire control surface is evaluated only as a single "large" button. The surface can be depressed at any desired point in order to execute the underlying push button function. In this setting, the button with the even button number of the button pair (e.g. button 10) is inactive and physically not present.

In double-surface operation, the control surface is divided into two mutually independent buttons.

Button arrangement

(The same parameters are available for the other control surfaces / button pairs of the extension module.)

Left / right

**top / bottom**

In the rocker function and in the pushbutton function with double-surface principle, for each control surface the user can independently specify whether it is to be divided horizontally or vertically. This defines the actuation points of the control surface.

□ Pushbutton sensor -> Button configuration -> Operation concept, basic module -> Rocker 1 (buttons 1/2)

(Only for "Operation concept of buttons 1 and 2 = Rocker function (Rocker 1)"!)

Function

**Switching**

Dimming  
Venetian blind  
Value transmitter 1-byte  
2-byte value transmitter  
Scene extension  
2-channel operation

This parameter is used to define the basic function of the rocker.

Depending on this choice, the ETS displays different communication objects and parameters for this rocker.

The following parameters are only valid for the rocker function "Switching"...

Command on pressing rocker 1.1	No reaction <b>ON</b> OFF TOGGLE	Depending on the "button arrangement" parameter, these parameters define the reaction that takes place when the top (or left-hand) rocker is pressed or released.
Command on releasing rocker 1.1	<b>No reaction</b> ON OFF TOGGLE	
Command on pressing rocker 1.2	No reaction ON <b>OFF</b> TOGGLE	Depending on the "button arrangement" parameter, these parameters define the reaction that takes place when the bottom (or right-hand) rocker is pressed or released.
Command on releasing rocker 1.2	<b>No reaction</b> ON OFF TOGGLE	

The following parameters are only valid for the rocker function "Dimming"...

Command on pressing rocker 1.1	No reaction <b>Brighter (ON)</b> Darker (OFF) Brighter / darker (TOGGLE) Brighter (TOGGLE) Darker (TOGGLE)	Depending on the "Button arrangement" parameter, this parameter defines the reaction that takes place when the top (or left-hand) rocker is pressed. If the push button sensor is to toggle on a brief press, the corresponding switching objects of other sensors with the same function must be linked with one another. In the "Brighter/darker (TOGGLE)" setting, the dimming objects must be interlinked as well so that the push button sensor can send the correct telegram on the next button-press.
Command on pressing rocker 1.2	No reaction Brighter (ON) <b>Darker (OFF)</b> Brighter / darker (TOGGLE) Brighter (TOGGLE) Darker (TOGGLE)	Depending on the "Button arrangement" parameter, this parameter defines the reaction that takes place when the bottom (or right-hand) rocker is pressed. If the push button sensor is to toggle on a brief press, the corresponding switching objects of other sensors with the same function must be linked with one another. In the "Brighter/darker (TOGGLE)" setting, the dimming objects must be interlinked as well so that the push button sensor can send the correct telegram on the next button-press.

Time between switching and dimming, rocker 1.1  
(100 ... 50000 x 1 ms)

This parameter defines how long the top (or left-hand) rocker must be pressed for the pushbutton sensor to send a

dimming telegram.		
Time between switching and dimming, rocker 1.2 (100 ... 50000 x 1 ms)	100 ... <b>400</b> ... 50000	This parameter defines how long the bottom (or right-hand) rocker must be pressed for the pushbutton sensor to send a dimming telegram.
Advanced parameters	Activated <b>Deactivated</b>	When the advanced parameters are activated, the ETS shows the following parameters.
Advanced parameters activated...		
Increase brightness by	1.5 % 3 % 6 % 12.5 % 25 % 50 % <b>100 %</b>	This parameter sets the relative dimming level when the brightness is increased. On each button-press, the brightness is changed at maximum by the configured step width. Especially with smaller dimming levels it is advisable for the push button sensor to repeat the dimming telegrams automatically (see "telegram repetition").
Reduce brightness by	1.5 % 3 % 6 % 12.5 % 25 % 50 % <b>100 %</b>	This parameter sets the relative dimming level when the brightness is reduced. On each button-press, the brightness is changed at maximum by the configured step width. Especially with smaller dimming levels it is advisable for the push button sensor to repeat the dimming telegrams automatically (see "telegram repetition").
Transmit stop telegram?	<b>Yes</b> No	On "Yes" the push button sensor transmits a telegram for stopping the dimming process when the rocker is released. When the push button sensor transmits telegrams for dimming in smaller levels, the stop telegram is generally not needed.
Telegram repeat?	Yes <b>No</b>	This parameter can be used to activate telegram repetition for dimming. With the button held down, the push button sensor will then transmit the relative dimming telegrams (in the programmed step width) until the button is released.
Time between two telegrams	<b>200 ms</b> 300 ms 400 ms 500 ms	This parameter defines the interval at which the dimming telegrams are automatically repeated in the telegram repetition mode. Visible only if

	750 ms 1 sec 2 sec	"Telegram repetition = Yes"!
Full-surface operation	enabled <b>Disabled</b>	When the full-surface operation is enabled, the ETS shows the following parameters.
Function for full-surface operation	<b>Switching</b> Scene recall without store function Scene recall with storage function	In case of full-surface operation, this parameter defines the function that is to be used. The ETS shows the corresponding communication object and the other parameters. If the push button sensor is to recall a scene with storage function by full-surface actuation, it will make a distinction between a brief press (less than 1 s), a sustained press (longer than 5 s) and an invalid button-press (between 1 s and 5 s). A brief press recalls the scene, a sustained press stores a scene and an invalid full-surface operation is ignored. Visible only if "Full-surface operation = enabled"!
Command for full-surface operation	ON OFF <b>TOGGLE</b>	This parameter defines the value of the transmitted telegram when a full-surface operation has been sensed. "TOGGLE" changes over the current object value. Visible only if "Full-surface operation = enabled"!
Scene number (1 ... 64)	<b>1, 2, ..., 64</b>	This parameter defines the scene number which is to be transmitted to the bus after a scene recall or during storage of a scene. Visible only if "Full-surface operation = enabled"!

The following parameters are only valid for the rocker function "Venetian blind"...

Command on pressing rocker	<b>Rocker X.1:UP / Rocker X.2: DOWN</b>  Rocker X.1:DOWN / Rocker X.2: UP  Rocker X.1:TOGGLE / Rocker X.2:TOGGLE	This parameter defines the running direction of a drive after a button-press. If the setting is "TOGGLE", the direction is changed after each long time command. If several push buttons are to control the same drive, the long time objects of the push buttons must be interlinked for a correct change of the running direction.
----------------------------	--	--

Operation concept

	<b>short – long – short</b>	For Venetian blind control, four different operation concepts can be selected. For these concepts, the ETS shows further parameters.
	long – short	
	short – long	
	long – short or short	
Time between short-time and long-time command Rocker 1.1 (1 ... 3000 x 100 ms)	1 ... 4 ... 3000	This parameter sets the time after which the long time operation will be evaluated on pressing the top (or left-hand) button of the rocker. This parameter is not visible with "Operation concept = long – short"!
Time between short-time and long-time command Rocker 1.2 (1 ... 3000 x 100 ms)	1 ... 4 ... 3000	This parameter sets the time after which the long time operation will be evaluated on pressing the bottom (or right-hand) button of the rocker. This parameter is not visible with "Operation concept = long – short"!
Slat adjusting time rocker 1.1 (0 ... 3000 x 100 ms)	0 ... 5 ... 3000	Time during which a transmitted long time telegram can be terminated by releasing the top (or left-hand) button of the rocker (short time). This function serves to adjust the slats of a blind. This parameter is not visible with "Operation concept = long – short"!
Slat adjusting time, rocker 1.2 (0 ... 3000 x 100 ms)	0 ... 5 ... 3000	Time during which a transmitted long time telegram can be terminated by releasing the bottom (or right-hand) button of the rocker (short time). This function serves to adjust the slats of a blind. This parameter is not visible with "Operation concept = long – short"!
Full-surface operation	<b>enabled</b>  <b>Disabled</b>	When the full-surface operation is enabled, the ETS shows the following parameters. Full-surface operation can only be programmed if "Operation concept = long – short or short"!
Function for full-surface operation	<b>Switching</b>  Scene recall without store function  Scene recall with storage function	In case of full-surface operation, this parameter defines the function that is to be used. The ETS shows the corresponding communication object and the other parameters. If the push button sensor is to recall a scene with storage function by full-surface actuation, it will make a distinction between a brief press (less than 1 s), a sustained press (longer than

Command for full-surface operation	ON OFF <b>TOGGLE</b>	5 s) and an invalid button-press (between 1 s and 5 s). A brief press recalls the scene, a sustained press stores a scene and an invalid full-surface operation is ignored. Visible only if "Full-surface operation = enabled"!
Scene number (1 ... 64)	<b>1, 2, ..., 64</b>	This parameter defines the value of the transmitted telegram when a full-surface operation has been sensed. "TOGGLE" changes over the current object value. Visible only if "Full-surface operation = enabled"!
<b>The following parameters are only valid for the rocker function "Value transmitter 1-byte"...</b>		
Function	Rocker X.1 / X.2 no function  <b>Rocker X.1: 0 ... 255 /</b> <b>Rocker X.2: 0 ... 255</b>  Rocker X.1: 0 ... 100 % / Rocker X.2: 0 ... 100 %  Rocker X.1: 0 ... 255 / Rocker X.2: no function  Rocker X.1: 0 ... 100 % / Rocker X.2: no function  Rocker X.1: no function / Rocker X.2: 0 ... 255  Rocker X.1: no function / Rocker X.2: 0 ... 100 %	A rocker configured as "Value transmitter 1 byte" permits selecting whether the values to be transmitted are interpreted as integers from 0 to 255 or as a percentage from 0 % to 100 %. The following parameters and their settings depend on this distinction.
Value, rocker 1.1 (0 ... 255)	<b>0...255</b>	Depending on the "Button arrangement" parameter, this parameter defines the object value when the top (or left-hand) rocker is pressed. Visible only if "Function = ... 0...255"!
Value, rocker 1.2 (0 ... 255)	<b>0...255</b>	Depending on the "Button arrangement" parameter, this parameter defines the object value when the bottom (or right-hand) rocker is pressed. Visible only if

"Function = ... 0...255"!

Value, rocker 1.1 (0 ... 100 %)	<b>0...100</b>	Depending on the "Button arrangement" parameter, this parameter defines the object value when the top (or left-hand) rocker is pressed. Visible only if "Function = ... 0...100 %"!
Value, rocker 1.2 (0 ... 100 %)	<b>0...100</b>	Depending on the "Button arrangement" parameter, this parameter defines the object value when the bottom (or right-hand) rocker is pressed. Visible only if "Function = ... 0...100 %"!
Value adjustment by long button-press	<b>enabled</b>  <b>Disabled</b>	If value adjustment by long button-press is enabled, the ETS shows further parameters. Value adjustment begins, when the button is held down for more than 5 s. In this case, the respective status LED flashes as a sign that a new telegram has been transmitted.
Starting value in case of value adjustment	Same as configured value  Same as value after last adjustment  <b>Same as value from communication object</b>	Value adjustment can begin with different starting values. In the setting "Same as parameterised value", after each long press the pushbutton sensor always starts with the value programmed in the ETS. In the setting "Same as value after last adjustment", after a long press the pushbutton sensor starts with the value transmitted by itself or by another device with this group address as the last value. In the setting "Same as value from communication object", after a long press the pushbutton sensor starts with the value transmitted by itself or by another device with this group address as the last value. This parameter is only visible if "Value adjustment by long button-press = enabled"!
Direction of value adjustment	Upwards  Downwards  <b>Toggling (alternating)</b>	With a long press, the push button sensor can either vary the values always in the same direction or it stores the direction of the last adjustment and reverses it on the next button-press. This parameter is only visible if "Value adjustment by long button-press = enabled"!

Step width (1 ... 15)	1...15	In a value adjustment, the pushbutton sensor determines the new telegram value from the previous value and the preset step width. If the value falls below the lower limit of the adjustment range (0 or 0 %) or if it exceeds the upper limit (255 or 100%), the sensor adapts the step width of the last step automatically. This parameter is only visible if "Value adjustment by long button-press = enabled"!
Time between two telegrams	<b>0.5 sec</b> 1 sec 2 sec 3 sec	In a value adjustment, the pushbutton sensor determines the new telegram value from the previous value and the preset step width. If the value falls below the lower limit of the adjustment range (0 or 0 %) or if it exceeds the upper limit (255 or 100%), the sensor adapts the step width of the last step automatically. This parameter is only visible if "Value adjustment by long button-press = enabled"!
Value adjustment with overflow	Yes <b>No</b>	If value adjustment is to be effected without overflow (setting "No") and if the pushbutton sensor reaches the lower limit of the adjustment range (0 or 0 %) or the upper limit (255 or 100 %) during value adjustment, the adjustment will be stopped automatically by the sensor. If the value adjustment with overflow is programmed (setting "Yes") and if the push button sensor reaches the lower or the upper limit, it will transmit the value of this range limit and then add a pause the duration of which corresponds to two levels. Thereafter, the push button sensor transmits a telegram with the value of the other range limit and continues the value adjustment in the same direction.

The following parameters are only valid for the rocker function "Value transmitter 2-byte"...

Function	<b>Temperature value transmitter</b> Brightness value transmitter Value transmitter (0 ... 65535)	A rocker configured as "Value transmitter 2 byte" permits selecting whether the values to be transmitted are to be interpreted as temperature values (0 °C to 40 °C), as brightness values (0 lux to 1500 lux) or as integers (0 to 65535). The following parameters and their settings depend on this selection.
	0... <b>20</b> ...40	Depending on the "Button arrangement" parameter, this parameter defines the

Temperature value (0 ... 40 °C) Rocker 1.1		object value when the top (or left-hand) rocker is pressed. Visible only if "Function = Temperature value transmitter"!
Temperature value (0 ... 40 °C) Rocker 1.2	0... <b>20</b> ...40	Depending on the "Button arrangement" parameter, this parameter defines the object value when the bottom (or right-hand) rocker is pressed. Visible only if "Function = Temperature value transmitter"!
Brightness value Rocker 1.1	0, 50, ... <b>300</b> ... 1450, 1500 lux	Depending on the "Button arrangement" parameter, this parameter defines the object value when the top (or left-hand) rocker is pressed. Visible only if "Function = Temperature value transmitter"!
Brightness value Rocker 1.2	0, 50, ... <b>300</b> ... 1450, 1500 lux	Depending on the "Button arrangement" parameter, this parameter defines the object value when the bottom (or right-hand) rocker is pressed. Visible only if "Function = Brightness value transmitter"!
Value (0 ... 65535) Rocker 1.1	<b>0</b> ... 65535	Depending on the "Button arrangement" parameter, this parameter defines the object value when the top (or left-hand) rocker is pressed. Visible only with "Function = Value transmitter (0 ... 65535)"!
Value (0 ... 65535) Rocker 1.2	<b>0</b> ... 65535	Depending on the "Button arrangement" parameter, this parameter defines the object value when the bottom (or right-hand) rocker is pressed. Visible only with "Function = Value transmitter (0 ... 65535)"!
Value adjustment by long button-press	enabled <b>Disabled</b>	If value adjustment by long button-press is enabled, the ETS shows further parameters. Value adjustment begins, when the button is held down for more than 5 s. In this case, the respective status LED flashes as a sign that a new telegram has been transmitted.
Starting value in case of value adjustment	<b>Same as configured value</b> Same as value after last	Value adjustment can begin with different starting values. This parameter is only visible if "Value adjustment by

	adjustment	long button-press = enabled"! In the setting "Same as parameterised value", after each long press the pushbutton sensor always starts with the value programmed in the ETS. In the setting "Same as value after last adjustment", after a long press the pushbutton sensor starts with the value transmitted by itself or by another device with this group address as the last value. In the setting "Same as value from communication object", after a long press the pushbutton sensor starts with the value transmitted by itself or by another device with this group address as the last value. This setting selectable only if "Functionality = Value transmitter (0...65535)!"
Direction of value adjustment	Upwards Downwards <b>Toggling (alternating)</b>	With a long press, the push button sensor can either vary the values always in the same direction or it stores the direction of the last adjustment and reverses it on the next button-press. Visible only if "Value adjustment by long button-press = enabled"!
Step width	<b>1 °C</b>	For temperature values, the step width of the adjustment is fixed to 1°C. Visible only if "Function = Temperature value transmitter" and "Value adjustment by long button-press = enabled"!
Step width	<b>50 lux</b>	For brightness values, the step width of the adjustment is fixed to 50 lux. Visible only if "Function = Brightness value transmitter" and "Value adjustment by long button-press = enabled"!
Step width	1 2 5 10 20 50 75 100 200 500 750 <b>1000</b>	This parameter sets the step width of the value adjustment for the 2-byte value transmitter. Only visible if "Function = Value transmitter (0 ... 65535)" and "Value adjustment by long button-press = enabled"!
Time between two telegrams	0.5 sec <b>1 sec</b>	This parameter defines the interval at which the push button sensor transmits new telegrams during a value

	2 sec 3 sec	adjustment. Visible only if "Value adjustment by long button-press = enabled"!
Value adjustment with overflow	Yes <b>No</b>	If value adjustment is to be effected without overflow (setting "No") and if the pushbutton sensor reaches the lower limit of the adjustment range (0°C, 0 lux, 0) or the upper limit (40°C, 1500 lux, 65535) during value adjustment, the adjustment will be stopped automatically by the sensor. If the value adjustment with overflow is programmed (setting "Yes") and if the push-button sensor reaches the lower or the upper limit, it will transmit the value of this range limit and then add a pause the duration of which corresponds to two levels. Thereafter, the push button sensor transmits a telegram with the value of the other range limits and continues the value adjustment in the same direction.

The following parameters are only valid for the rocker function "Scene extension"...

Function	<b>Scene extension without storage function</b>  Scene extension with storage function  Recall of internal scene extension without storage function  Recall of internal scene with storage function	This parameter defines the functionality of the extension. If the push button sensor is used as a scene extension, the scenes can either be stored in one or in several other KNX/EIB devices (e.g. light scene push button sensor). During a scene recall or in a storage function, the push button sensor transmits a telegram with the respective scene number via the extension object of the rocker. During the recall of an internal scene, a scene stored internally in the universal pushbutton sensor TSM is recalled or stored again. In this case, the sensor transmits no telegram to the bus via a scene extension object. For this setting, the internal scene function must be enabled.
Scene number (1 ... 64) Rocker 1.1	1...64	In accordance with the KNX standard, objects with data type 18.001 "Scene Control" can recall or store up to 64 scenes by their numbers. The parameter defines the scene number to be transmitted when the top (or left) of the button is pressed.
	1...64	In accordance with the KNX standard, objects with data type 18.001 "Scene

Scene number  
(1 ... 64)  
Rocker 1.2

Control" can recall or store up to 64 scenes by their numbers. The parameter defines the scene number to be transmitted when the bottom (or right) of the button is pressed.

Scene number  
(1 ... 8)  
Rocker 1.1

1...8

This parameter defines the number of the internal scene which is recalled or stored when the top (or left) of the button is pressed.

Scene number  
(1 ... 8)  
Rocker 1.2

1...8

This parameter defines the number of the internal scene which is recalled or stored when the bottom (or right) of the button is pressed.

The following parameters are only valid for the rocker function "2-channel operation"...

Operation concept

**Channel 1 or channel 2**

Channel 1 and channel 2

This parameter defines the 2-channel operation concept. If the setting "Channel 1 or channel 2" is selected, the push button sensor decides dependent on the button-press duration which of the channels will be used. If the setting "Channel 1 and channel 2" is selected, the push button sensor transmits only the telegram of channel 1 on a short button-press and both telegrams on a sustained button-press.

Function channel 1 (2)

No function

**Switching (1 bit)**

Value transmitter 0 ... 255 (1-byte)

Value transmitter 0 ... 100 % (1-byte)

Temperature value transmitter (2 bytes)

This parameter defines the channel function and specifies which other parameters and which communication object are to be displayed for channel 1 (2).

Command of button for channel 1 (2)  
Rocker 1.1

**ON**  
OFF  
TOGGLE

This parameter defines the object value transmitted to the bus when the top (or left-hand) rocker is pressed. Only visible if "Function channel 1 (2) = Switching (1 bit)"!

Command of button for channel 1 (2)  
Rocker 1.2

**ON**  
OFF  
TOGGLE

This parameter defines the object value transmitted to the bus when the bottom (or right-hand) rocker is pressed. Only visible if "Function channel 1 (2) =

## Switching (1 bit)"!

Value of the button for  
Channel 1 (2)  
Rocker 1.1 (0...255)

This parameter defines the object value transmitted to the bus when the top (or left-hand) rocker is pressed. Visible only if "Function channel 1 (2) = value transmitter 0...255 (1 byte)"!

Value of the button for  
Channel 1 (2)  
Rocker 1.2 (0...255)

This parameter defines the object value transmitted to the bus when the bottom (or right-hand) rocker is pressed. Visible only if "Function channel 1 (2) = value transmitter 0...255 (1 byte)"!

Value of the button for  
Channel 1 (2)  
Rocker 1.1 (0 ... 100 %)

This parameter defines the object value transmitted to the bus when the top (or left-hand) rocker is pressed. Visible only if "Function channel 1 (2) = value transmitter 0...100 % (1 byte)"!

Value of the button for  
Channel 1 (2)  
Rocker 1.2 (0 ... 100 %)

This parameter defines the object value transmitted to the bus when the bottom (or right-hand) rocker is pressed. Visible only if "Function channel 1 (2) = value transmitter 0...100 % (1 byte)"!

Temperature value of  
the button for channel 1  
(2)  
Rocker 1.1 (0 ... 40 °C)

This parameter defines the temperature value transmitted to the bus when the top (or left-hand) rocker is pressed. Visible only if "Function channel 1 (2) = Temperature value transmitter (2 bytes)"!

Temperature value of  
the button for channel 1  
(2)  
Rocker 1.2 (0 ... 40 °C)

This parameter defines the temperature value transmitted to the bus when the bottom (or right-hand) rocker is pressed. Visible only if "Function channel 1 (2) = Temperature value transmitter (2 bytes)"!

Time between channel  
1 and channel 2  
Rocker 1.1  
(1 ... 255 x 100 ms)

Depending on the selected operation concept, this parameter defines the interval at which the push-button transmits the telegram for channel 1 and the telegram for channel 2 when the top (or left side) of the rocker is pressed.

Time between channel  
1 and channel 2

Depending on the selected operation concept, this parameter defines the interval at which the push-button

Rocker 1.2 (1 ... 255 x 100 ms)		transmits the telegram for channel 1 and the telegram for channel 2 when the bottom (or right side) of the rocker is pressed.
Full-surface operation	enabled  <b>Disabled</b>	When the full-surface operation is enabled, the ETS shows the following parameters. Full-surface operation can only be programmed if "Operation concept = Channel 1 or channel 2"!
Function for full-surface operation	<b>Switching</b>  Scene recall without store function  Scene recall with storage function	In case of full-surface operation, this parameter defines the function that is to be used. The ETS shows the corresponding communication object and the other parameters. If the push button sensor is to recall a scene with storage function by full-surface actuation, it will make a distinction between a brief press (less than 1 s), a sustained press (longer than 5 s) and an invalid button-press (between 1 s and 5 s). A brief press recalls the scene, a sustained press stores a scene and an invalid full-surface operation is ignored. Visible only if "Full-surface operation = enabled"!
Command for full-surface operation	ON OFF <b>TOGGLE</b>	This parameter defines the value of the transmitted telegram when a full-surface operation has been sensed. "TOGGLE" changes over the current object value. Visible only if "Full-surface operation = enabled"!
Scene number (1 ... 64)	<b>1, 2, ..., 64</b>	This parameter defines the scene number which is to be transmitted to the bus after a scene recall or during storage of a scene. Visible only if "Full-surface operation = enabled"!
<p>□ Pushbutton sensor -&gt; Button configuration -&gt; Operation concept, basic module -&gt; Rocker 2 ... n, see Rocker 1!</p> <p>□ Pushbutton sensor -&gt; Button configuration -&gt; Operation concept, basic module -&gt; Button 1 (Only for "Operation concept of buttons 1 and 2 = Button function"!)</p>		
Function	No function <b>Switching</b> Dimming Venetian blind Value transmitter 1-byte 2-byte value transmitter Scene extension	This parameter defines the basic function of the button. Depending on this setting, the ETS displays different communication objects and parameters for this button.

2-channel operation  
Controller extension  
Fan controller  
Info button  
Page change  
Controller operating mode  
Setpoint shift

The following parameters are only valid for the push button function "Switching"...

Command on pressing the button	No reaction <b>ON</b> OFF TOGGLE	Depending on the "button arrangement" parameter, these parameters define the reaction that takes place when the button is pressed or released.
--------------------------------	---	--

Command on releasing the button	<b>No reaction</b> ON OFF TOGGLE
---------------------------------	---

The following parameters are only valid for the push button function "Dimming"...

Command on pressing the button	No reaction <b>Brighter (ON)</b> Darker (OFF) Brighter / darker (TOGGLE) Brighter (TOGGLE) Darker (TOGGLE)	This parameter defines the reaction when the button is pressed. If the push button sensor is to toggle on a brief press, the corresponding switching objects of other sensors with the same function must be linked with one another. In the "Brighter/darker (TOGGLE)" setting, the dimming objects must be interlinked as well so that the push button sensor can send the correct telegram on the next button-press.
--------------------------------	---	--

Time between switching and dimming (100 ... 50000 x 1 ms)

This parameter defines how long the button must be pressed for the push button sensor to transmit a dimming telegram.

Advanced parameters  
**Activated**  
**Deactivated**

When the advanced parameters are activated, the ETS shows the following parameters.

Advanced parameters activated...

Increase brightness by  
1.5 %  
3 %  
6 %  
12.5 %  
25 %

This parameter sets the relative dimming level when the brightness is increased. On each button-press, the brightness is changed at maximum by the configured step width. Especially with smaller dimming levels it

	50 % <b>100 %</b>	is advisable for the push button sensor to repeat the dimming telegrams automatically (see "telegram repetition").
Reduce brightness by	1.5 % 3 % 6 % 12.5 % 25 % 50 % <b>100 %</b>	This parameter sets the relative dimming level when the brightness is reduced. On each button-press, the brightness is changed at maximum by the configured step width. Especially with smaller dimming levels it is advisable for the push button sensor to repeat the dimming telegrams automatically (see "telegram repetition").
Transmit stop telegram?	<b>Yes</b> No	On "Yes" the push button sensor transmits a telegram for stopping the dimming process when the rocker is released. When the push button sensor transmits telegrams for dimming in smaller levels, the stop telegram is generally not needed.
Telegram repeat?	Yes <b>No</b>	This parameter can be used to activate telegram repetition for dimming. With the button held down, the push button sensor will then transmit the relative dimming telegrams (in the programmed step width) until the button is released.
Time between two telegrams	<b>200 ms</b> 300 ms 400 ms 500 ms 750 ms 1 sec 2 sec	This parameter defines the interval at which the dimming telegrams are automatically repeated in the telegram repetition mode. Visible only if "Telegram repetition = Yes"!

The following parameters are only valid for the push button function "Venetian blind"...

Command on pressing the button	DOWN UP <b>TOGGLE</b>	This parameter defines the running direction of a drive after a button-press. If the setting is "TOGGLE", the direction is changed after each long time command. If several push buttons are to control the same drive, the long time objects of the push buttons must be interlinked for a correct change of the running direction.
--------------------------------	-----------------------------	--

Operation concept	<b>short – long – short</b> long – short	For Venetian blind control, four different operation concepts can be selected. For these concepts, the ETS shows further
-------------------	---	--

		parameters.
	short – long	
	long – short or short	
Time between short-time and long-time command (1 ... 3000 x 100 ms)	1 ... 4 ... 3000	This parameter sets the time after which the long time operation will be evaluated on pressing the top (or left-hand) button of the rocker. This parameter is not visible with "Operation concept = long – short"!
Slat adjusting time (0 ... 3000 x 100 ms)	0 ... 5 ... 3000	Time during which a transmitted long time telegram can be terminated by releasing the top (or left-hand) button of the rocker (short time). This function serves to adjust the slats of a blind. This parameter is not visible with "Operation concept = long – short"!
 The following parameters are only valid for the push button function "value transmitter 1 byte"...		
Function	<b>Value transmitter 0 ... 255</b> Value transmitter 0 ... 100 %	A button configured as "Value transmitter 1 byte" permits selecting whether the values to be transmitted are interpreted as integers from 0 to 255 or as a percentage from 0 % to 100 %. The following parameters and their settings depend on this distinction.
Value (0 ... 255)	<b>0...255</b>	This parameter defines the object value when the button is pressed. Visible only if "Function = ... 0...255"!
Value (0 ... 100 %)	<b>0...100</b>	This parameter defines the object value when the button is pressed. Visible only if "Function = ... 0...100 %"!
Value adjustment by long button-press	enabled <b>Disabled</b>	If value adjustment by long button-press is enabled, the ETS shows further parameters. Value adjustment begins, when the button is held down for more than 5 s. In this case, the respective status LED flashes as a sign that a new telegram has been transmitted.
Starting value in case of value adjustment	Same as configured value Same as value after last adjustment	Value adjustment can begin with different starting values. In the setting "Same as parameterised value", after each long press the pushbutton sensor always starts with the value

	<b>Same as value from communication object</b>	programmed in the ETS. In the setting "Same as value after last adjustment", after a long press the pushbutton sensor starts with the value transmitted by itself or by another device with this group address as the last value. In the setting "Same as value from communication object", after a long press the pushbutton sensor starts with the value transmitted by itself or by another device with this group address as the last value. This parameter is only visible if "Value adjustment by long button-press = enabled"!
Direction of value adjustment	Upwards Downwards <b>Toggling (alternating)</b>	With a long press, the push button sensor can either vary the values always in the same direction or it stores the direction of the last adjustment and reverses it on the next button-press. Visible only if "Value adjustment by long button-press = enabled"!
Step width (1 ... 15)	<b>1...15</b>	In a value adjustment, the pushbutton sensor determines the new telegram value from the previous value and the preset step width. If the value falls below the lower limit of the adjustment range (0 or 0 %) or if it exceeds the upper limit (255 or 100%), the sensor adapts the step width of the last step automatically. Visible only if "Value adjustment by long button-press = enabled"!
Time between two telegrams	<b>0.5 sec</b> 1 sec 2 sec 3 sec	In a value adjustment, the pushbutton sensor determines the new telegram value from the previous value and the preset step width. If the value falls below the lower limit of the adjustment range (0 or 0 %) or if it exceeds the upper limit (255 or 100%), the sensor adapts the step width of the last step automatically. Visible only if "Value adjustment by long button-press = enabled"!
Value adjustment with overflow	Yes <b>No</b>	If value adjustment is to be effected without overflow (setting "No") and if the pushbutton sensor reaches the lower limit of the adjustment range (0 or 0 %) or the upper limit (255 or 100 %) during value adjustment, the adjustment will be stopped automatically by the sensor. If the value adjustment with overflow is programmed (setting "Yes") and if the push button sensor reaches the lower or the upper limit, it will transmit the value

of this range limit and then add a pause the duration of which corresponds to two levels. Thereafter, the push button sensor transmits a telegram with the value of the other range limit and continues the value adjustment in the same direction.

The following parameters are only valid for the push button function "value transmitter 2 byte"...

Function	<b>Temperature value transmitter</b>	A button configured as "Value transmitter 2 byte" permits selecting whether the values to be transmitted are to be interpreted as temperature values (0 °C to 40 °C), as brightness values (0 lux to 1500 lux) or as integers (0 to 65535). The following parameters and their settings depend on this selection.
Temperature value (0 ... 40 °C)	0... <b>20</b> ...40	This parameter defines the object value when the button is pressed. Visible only if "Function = Temperature value transmitter"!
Brightness value	0, 50, ... <b>300</b> ... 1450, 1500 lux	This parameter defines the object value when the button is pressed. Visible only if "Function = Brightness value transmitter"!
Value (0 ... 65535)	<b>0</b> ... 65535	This parameter defines the object value when the button is pressed. Visible only with "Function = Value transmitter (0 ... 65535)"!
Value adjustment by long button-press	<b>enabled</b> <b>Disabled</b>	If value adjustment by long button-press is enabled, the ETS shows further parameters. Value adjustment begins, when the button is held down for more than 5 s. In this case, the respective status LED flashes as a sign that a new telegram has been transmitted.
Starting value in case of value adjustment	<b>Same as configured value</b> Same as value after last adjustment <b>Same as value from communication object</b>	Value adjustment can begin with different starting values. This parameter is only visible if "Value adjustment by long button-press = enabled"! In the setting "Same as parameterised value", after each long press the pushbutton sensor always starts with the value programmed in the ETS. In the setting "Same as value after last

Direction of value adjustment	Upwards Downwards <b>Toggling (alternating)</b>	adjustment", after a long press the pushbutton sensor starts with the value transmitted by itself or by another device with this group address as the last value. In the setting "Same as value from communication object", after a long press the pushbutton sensor starts with the value transmitted by itself or by another device with this group address as the last value. This setting selectable only if "Functionality = Value transmitter (0...65535)!"
Step width	<b>1 °C</b>	For temperature values, the step width of the adjustment is fixed to 1°C. Visible only if "Function = Temperature value transmitter" and "Value adjustment by long button-press = enabled"!
Step width	<b>50 lux</b>	For brightness values, the step width of the adjustment is fixed to 50 lux. Visible only if "Function = Brightness value transmitter" and "Value adjustment by long button-press = enabled"!
Step width	1 2 5 10 20 50 75 100 200 500 750 <b>1000</b>	This parameter sets the step width of the value adjustment for the 2-byte value transmitter. Only visible if "Function = Value transmitter (0 ... 65535)" and "Value adjustment by long button-press = enabled"!
Time between two telegrams	0.5 sec <b>1 sec</b> 2 sec 3 sec	This parameter defines the interval at which the push button sensor transmits new telegrams during a value adjustment. Visible only if "Value adjustment by long button-press = enabled"!

Value adjustment with overflow	<b>Yes</b>	If value adjustment is to be effected without overflow (setting "No") and if the pushbutton sensor reaches the lower limit of the adjustment range (0°C, 0 lux, 0) or the upper limit (40°C, 1500 lux, 65535) during value adjustment, the adjustment will be stopped automatically by the sensor.
	<b>No</b>	If the value adjustment with overflow is programmed (setting "Yes") and if the push-button sensor reaches the lower or the upper limit, it will transmit the value of this range limit and then add a pause the duration of which corresponds to two levels. Thereafter, the push button sensor transmits a telegram with the value of the other range limits and continues the value adjustment in the same direction.

The following parameters are only valid for the push button function "scene extension"...

Function	<b>Scene extension without storage function</b>	This parameter defines the functionality of the extension. If the push button sensor is used as a scene extension, the scenes can either be stored in one or in several other KNX/EIB devices (e.g. light scene push button sensor). During a scene recall or in a storage function, the push button sensor transmits a telegram with the respective scene number via the extension object of the button. During the recall of an internal scene, a scene stored internally in the universal pushbutton sensor TSM is recalled or stored again. In this case, the sensor transmits no telegram to the bus via a scene extension object. For this setting, the internal scene function must be enabled.
Scene number (1 ... 64)	<b>1...64</b>	In accordance with the KNX standard, objects with data type 18.001 "Scene Control" can recall or store up to 64 scenes by their numbers. The parameter defines the scene number to be transmitted when the button is pressed.
Scene number (1 ... 8)	<b>1...8</b>	This parameter defines the number of the internal scene which is recalled or stored when a button is pressed.

The following parameters are only valid for the push button function "2-channel operation"...

Operation concept	<b>Channel 1 or channel 2</b>	This parameter defines the 2-channel operation concept. If the setting "Channel 1 or channel 2" is selected, the push button sensor decides dependent on the button-press duration which of the channels will be used. If the setting "Channel 1 and channel 2" is selected, the push button sensor transmits only the telegram of channel 1 on a short button-press and both telegrams on a sustained button-press.
Function channel 1 (2)	No function <b>Switching (1 bit)</b> Value transmitter 0 ... 255 (1-byte) Value transmitter 0 ... 100 % (1-byte) Temperature value transmitter (2 bytes)	This parameter defines the channel function and specifies which other parameters and which communication object are to be displayed for channel 1 (2).
Command of button for channel 1 (2)	<b>ON</b> OFF TOGGLE	This parameter defines the object value transmitted to the bus when the button is pressed. Only visible if "Function channel 1 (2) = Switching (1 bit)"!
Value of the button for Channel 1 (2) (0 ... 255)	<b>0...255</b>	This parameter defines the object value transmitted to the bus when the button is pressed. Visible only if "Function channel 1 (2) = value transmitter 0...255 (1 byte)"!
Value of the button for Channel 1 (2) (0 ... 100 %)	<b>0...100</b>	This parameter defines the object value transmitted to the bus when the button is pressed. Visible only if "Function channel 1 (2) = value transmitter 0...100 % (1 byte)"!
Temperature value of the button for channel 1 (2) (0 ... 40 °C)	<b>0...40</b>	This parameter defines the temperature value transmitted to the bus when the button is pressed. Visible only if "Function channel 1 (2) = Temperature value transmitter (2 bytes)"!
Time between channel 1 and channel 2 (1 ... 255 x 100 ms)	<b>0...30...255</b>	Depending on the selected operation concept, this parameter defines the interval at which the push button transmits the telegram for channel 1 and the telegram for channel 2 when the button is pressed.

The following parameters are only valid for the push button function "Controller extension"...

Function	<b>Operating mode switchover</b>	A controller extension can optionally switch over the operating mode with normal or high priority, change the presence state or change the current room temperature value. With regard to the setting of this parameter, the ETS shows further parameters.
	Forced oper. mode switchover	
	Presence button setpoint shift	
Operating mode when the following button is pressed	<b>Comfort mode</b>	If the controller extension is to change over the operating mode of the room temperature controller with normal priority, the extension can – when operated – either switch on a defined operating mode or change over between different operating modes.
	Standby mode	
	Night mode	
	Frost/heat protection mode	
	Comfort mode -> Standby mode ->	In order for this change to work properly, the controller extension should request the current state of the extension objects after a reset or after re-programming (set parameter under "General" to "Value request from controller extension = Yes"). Only visible if "Function = operating mode change-over"!
	Comfort mode -> Night mode ->	
	Standby mode -> Night mode ->	
	Comfort mode -> Standby mode -> Night mode ->	
Forced operating mode when the following button is pressed	Auto (Normal operating mode change-over)	If the controller extension is to change over the operating mode of the room temperature controller with high priority, the extension can – when actuated – either enable the change-over with normal priority (auto), switch on a defined operating mode with a high priority or change over between different operating modes.
	<b>Comfort mode</b>	
	Standby mode	
	Night mode	
	Frost/heat protection mode	
	Comfort mode -> Standby mode ->	In order for this change to work properly, the controller extension should request the current state of the extension objects after a reset or after re-programming (set parameter under "General" to "Value request from controller extension = Yes"). Only visible if "Function = Forced operating mode change-over"!
	Comfort mode -> Night mode ->	
	Standby mode -> Night mode ->	
	Comfort mode -> Standby mode -> Night mode ->	
	Auto -> Comfort mode ->	

Auto ->  
Standby mode ->

Presence function when the following button is pressed	Presence OFF <b>Presence ON</b> Presence TOGGLE	On pressing a key, the controller extension can switch the presence state of the room temperature controller either on or off in a defined way or change over between both states ("Presence TOGGLE"). In order for this change-over to work properly, the controller extension should request the current state of the extension objects after a reset or after re-programming (set parameter "Value request from controller extension?" under "Room temperature control" to "Yes").
<b>With the "Setpoint shift" function...</b>		
Setpoint shift on pressing the button	Reduce setpoint value (level size) <b>Increase setpoint (level size)</b>	This parameter defines the direction of the setpoint shift on the extension. For a setpoint value shift, the controller extension makes use of the two communication objects "Setpoint shift output" and "Setpoint shift input". The "Setpoint shift input" communication object informs the extension about the current state of the room temperature controller. Based on this value and the respective parameter, the controller extension determines the new level size which it transmits via the "Setpoint shift output" communication object to the room temperature controller.

The following parameters are only valid for the pushbutton function "Fan control"...

Button function	No function Automatic mode <b>Manual control</b>	The fan controller distinguishes between automatic and manual operation. The change-over between the two operating modes takes place using the 1-bit object "Ventilation, auto/manual" or through the operation of a button on the device configured for "Fan control". In the "No function" setting, the button is deactivated. It is not possible to influence the fan operating mode by pressing a button. In the "Automatic" setting, the controller deactivates the manual mode and toggles the automatic fan control. Should automatic mode already be active when the button is pressed, then the device will not show any new reaction to the actuation. In the "Manual control" setting, the controller determines whether it is in
-----------------	--	---

automatic or manual mode at the time the button is pressed. If the controller is in automatic mode, then pressing a button switches to manual mode. If, at the time the button is pressed, the manual controller is already active, then the controller switches to the next highest fan level without a delay. If the fan is in the highest level, then pressing a button switches it back to the OFF level. From there, every additional button-press causes the fan level to be raised.

The following parameters are only valid for the push-button function "Information button"...

On pressing a button	No function	Information texts can also be shown in the graphic area of the display. This info mode can be used to give the user help texts about how to use the control surfaces when a button is pressed on the display (intelligent nameplate). An info button can be used to switch the info mode on and off directly on the device.
	Info operating mode off	
	<b>Info operating mode on in one-touch operation</b>	
	Info operating mode toggle in one-touch operation	
	Info operating mode on in double-touch operation	
	Info operating mode toggle in double-touch operation	

The following parameters are only valid for the push button function "Page change"...

On pressing a button	No function	The display on the LCD of the device can be switched over using the buttons. When a button is pressed, depending on this parameter, either the next page or the previous page is called up in accordance with the cyclical change. In this way, all the pages specified according to the configuration in the "Display" parameter node can be switched in sequence, including the pages which are not included in the cyclical change-over. Alternatively, it is also possible to call up a particular page immediately, independently of the pages of the cyclical change (e.g. push-button function "Call up page 1"), or to switch between two pages (e.g. "Toggle between pages 1 and 2"). It is not assumed here that the pages called up in this manner are in fact integrated into
	<b>Scroll to next page</b>	
	Scroll to previous page	
	Open Page 1	
	Open Page 2	
	Open Page 3	
	Open Page 4	
	Switch between Pages 1 and 2	
	Switch between Pages 1 and 3	

Switch between Pages 1 and 4

the cyclical change. After a page has been called up by pressing a button, the display is retained until the time for the cyclical change has elapsed.

The following parameters are only valid for the pushbutton function "Controller operating mode"...

Button function

No function

**Operating mode switch-over**

Presence button

The "Controller operating mode" pushbutton function can be used to control the internal room temperature controller. If this push-button function is used, it is possible to change over the operating mode by pressing the button. In the controller operating mode, a distinction is made between two functions, specified by this parameter. On the one hand, the operating mode (Comfort, Standby, Night, Frost/heat protection) can be changed over and influenced ("Operating mode change-over" setting). On the other hand it is possible to activate the Presence function ("Presence button" setting). The Presence function allows activation of Comfort mode or a comfort extension on the internal controller.

Operating mode button actuation

**Comfort mode**

Standby mode

Night operation

Frost/heat protection mode

Comfort mode ->  
Standby mode

Comfort mode ->  
Night operation

Standby mode ->  
Night operation

Comfort mode ->  
Standby mode ->  
Night operation

Here, there is a specification of which operating mode is activated when a button is pressed. It is possible to change over between various operating modes.

Only visible if "Button function = Operating mode change-over".

Presence button actuation

Presence OFF

**Presence ON**

Presence TOGGLE

Pressing the button can either switch the presence status of the room temperature controller on or off or toggle it.

Only visible if "button function = presence button"

The following parameters are only valid for the pushbutton function "Setpoint shift"...

Button Actuation	No function	The "Setpoint shift" push-button function can be used to control the internal room temperature controller. If this push-button function is used, it is possible to shift the basic setpoint temperature of the controller in a positive direction ("Increase setpoint" setting) or in a negative direction ("Reduce setpoint" setting) by pressing the button.
	Reduce setpoint	
	<b>Increase setpoint</b>	

□→ Pushbutton sensor -> Button configuration -> Operation concept, basic module -> Buttons 2 ... n, see Button 1!

#### 4.2.5.3.2 Status LED

Description	Values	Comment
The following parameters are valid for the status LED of the buttons or rockers...		
Function of status LED	always OFF  (With the rocker function, the parameters for the left and right status LED are separate and configurable).	Irrespective of the pushbutton or rocker function, the status LED is switched off permanently.
	always ON	Irrespective of the pushbutton or rocker function, the status LED is switched on permanently.
Button-press display		The status LED indicates a button actuation. The ON time is set on the parameter page "General" in common for all status LEDs that are configured as actuation displays.
Telegram acknowledgment		The status LED indicates the transmission of a telegram in 2-channel operation. This setting can only be configured for the pushbutton or rocker function "2-channel operation".
Status display (switching object)		In the "Switching" and "Dimming" push-button functions, the status LED signals the status of the "Switching" object and, in the "Fan controller" and "Setpoint shift" push-button functions, it signals the status of the push-button function. In the "Switching" and "Dimming" functions, the object value is evaluated as following: "ON" -> "LED illuminated / OFF" -> LED goes out.
Inverted status display (switching object)		In the "Switching" and "Dimming" push-button functions, the status LED signals the inverted status of the "Switching" object and, in the "Fan controller" and "Setpoint shift" push-button functions, it signals the inverted status of the push-button function. In the "Switching" and "Dimming" functions, the object value is evaluated as following: "OFF" -> "LED illuminated / ON" -> LED goes out.

Control via separate LED object	The status LED indicates the state of its own, separate 1-bit LED object. This setting causes the additional parameter "Control of the status LED via object value" to be shown.
Button function active display	The status LED indicates the state of the presence button in case of controller extension operation. The LED lights up if the presence function is activated. The LED is off if the presence function is inactive. This setting can only be configured in the pushbutton function "Controller extension" and with the button function "Presence button".
Button function inactive display	The status LED indicates the state of the presence button in case of controller extension operation. The LED lights up if the presence function is inactive. The LED is off if the presence function is activated. This setting can only be configured in the pushbutton function "Controller extension" and with the button function "Presence button".
Operating mode display (KNX controller)	The status LED indicates the state of a KNX room temperature controller via a separate 1-byte communication object. This setting causes the additional parameter "Status LED ON with" to be shown. The setting cannot be configured with the push-button functions "Controller extension", "Fan control", "Information button", "Controller operating mode change-over" or "Setpoint shift".
Comparator without sign (1-byte)	The status LED is activated depending on a comparison. In this configuration there is a separate 1-byte communication object available via which the unsigned reference value (0...255) is received. This setting causes the additional parameter "Status LED ON with" to be shown.
Comparator with sign (1-byte)	The status LED is activated depending on a comparison. In this configuration there is a separate 1-byte communication object available via which the positive or negative reference value (-128...127) is received. This setting causes the additional parameter "Status LED ON with" to be shown.
	The presetting of the parameter "Function of status LED" depends on the configured pushbutton or rocker function.

The function of the status LED = "Display via separate LED object"...

Control of the status LED via object value

**1 = LED static ON / 0 = LED static OFF**

1 = LED static OFF / 0 = LED static ON

1 = LED flashes / 0 = LED static OFF

1 = LED static OFF / 0 = LED flashes

If the "Function of status LED ..." is set to "Control via separate LED object", then the telegram polarity of the 1-bit object "Status LED" can be specified at this point.

The LED can be switched on or off statically. In addition, the received switching telegram can be evaluated in such a way that the LED flashes.

If the function of status LED = "Operating mode display (KNX controller)"...

Status LED ON with

Automatic mode  
**Comfort mode**  
Standby mode  
Night mode  
Frost/heat protection mode

The values of a communication object with data type 20.102 "HVAC Mode" are defined as follows:  
0 = Automatic  
1 = Comfort  
2 = Standby  
3 = Night  
4 = Frost/heat protection

The value "Automatic" is used only by the "forced operating mode switchover" objects.

The status LED is illuminated when the object receives the value configured here.

If the function of status LED = "Comparator without sign"...

Status LED ON with

**Reference value greater than received value**

Reference value less than received value

Reference value equal to received value

Reference value (0 ... 255)

**0 ... 255**

The status LED indicates whether the configured reference value is greater or less than or equal to the value of the "Status LED" object".

This parameter defines the reference value to which the value of the "Status LED" object is compared.

If the function of status LED = "Comparator with sign"...

---

Status LED ON with	<b>Reference value greater than received value</b>	The status LED indicates whether the configured reference value is greater or less than or equal to the value of the "Status LED" object".
	Reference value less than received value	
	Reference value equal to received value	
Reference value (-128 ... 127)	-128 ... <b>0</b> ... 127	This parameter defines the reference value to which the value of the "Status LED" object is compared.

**4.2.5.3.3 Info mode**

Description	Values	Comment
The following parameters are valid for the information mode of the buttons or rockers...		
Info text line 2	<b>Information text L2 T1</b>	The text entered here appears in the second line of the display when the rocker or button is actuated, providing that the information mode is activated. The information text can be edited freely and can comprise up to 18 characters. This parameter is only visible with a rocker or button function. The presetting (designation R / B) is dependent upon the rocker or button involved.
Info text line 3	<b>Specified text (depending on push-button function)</b> Free text	Depending on the set function of the button, various information texts are permanently stored for the third line in the device software. The predefined texts are displayed in the third text line in the info mode, if this parameter is set to "Specified text (depending on push-button function)". In the "Free text" setting, free user-defined texts can be entered into the ETS. This parameter is only visible with a button function.
Info text line 3	<b>Information text L3 T1</b>	The text entered here appears in the third line of the display when the button is actuated as long as the information mode is activated and a free information text is to be displayed. The information text can be edited freely and can comprise up to 18 characters. The presetting of this parameter is dependent upon the number of the button involved. This parameter is only visible with a button function.
Info text line 3 top/left	<b>Specified text (depending on push-button function)</b> Free text	Depending on the set function of the rocker, various information texts are permanently stored for the third line in the device software. The predefined texts are displayed in the third text line in the info mode, if this parameter is set to "Specified text (depending on push-button function)". In the "Free text" setting, free user-defined texts can be entered into the ETS. This parameter is only visible with the rocker function and, depending on the button arrangement, defines the behaviour of the information text when a

rocker is actuated at the top or on the left.

Info text line 3 top/left

**Information text L3 T/L**

The text entered here appears in the third line of the display when the rocker is actuated, so long as the info mode is activated and a free info text is to be displayed. The information text can be edited freely and can comprise up to 18 characters.

This parameter is only visible with the rocker function and, depending on the button arrangement, defines the behaviour of the information text when a rocker is actuated at the top or on the left.

Info text line 3 bottom/right

**Specified text (depending on push-button function)**

Free text

Depending on the set function of the rocker, various information texts are permanently stored for the third line in the device software. The predefined texts are displayed in the third text line in the info mode, if this parameter is set to "Specified text (depending on push-button function)".

In the "Free text" setting, free user-defined texts can be entered into the ETS.

This parameter is only visible with the rocker function and, depending on the button arrangement, defines the behaviour of the information text when a rocker is actuated at the bottom or on the right.

Info text line 3 bottom/right

**Information text L3 B/R**

The text entered here appears in the third line of the display when the rocker is actuated, so long as the info mode is activated and a free info text is to be displayed. The information text can be edited freely and can comprise up to 18 characters.

This parameter is only visible with the rocker function and, depending on the button arrangement, defines the behaviour of the information text when a rocker is actuated at the bottom or on the right.

**4.2.5.3.4 Disabling function**

Description	Values	Comment
<input type="checkbox"/> push button sensor -> Disable		
Disabling function?	Yes  No	With this parameter, the disabling function of the push button sensor can be centrally activated. If "Yes", the ETS shows further communication object and parameters.
Polarity of disabling object	<b>disable = 1 / enable = 0</b>  Disable = 0 / enable = 1	This parameter defines the value of the disabling object at which the disabling function is active.
Reaction of pushbutton sensor at the beginning of the disabling function	<b>No reaction</b>  Reaction as button >>X<< when pressed  Reaction as button >>X<< when released  Reaction as disabling function 1 when pressed  Reaction as disabling function 1 when released  Reaction as disabling function 2 when pressed  Reaction as disabling function 2 when released  Internal scene recall scene 1  Internal scene recall scene 2  Internal scene recall scene 3  Internal scene recall scene 4  Internal scene recall scene 5  Internal scene recall scene 6  Internal scene recall scene 7  Internal scene recall scene 8	Besides disabling of rocker and button functions, the pushbutton sensor can also and in addition trigger a specific function at the time of activation of the disabling state.  This function can... correspond to the function assigned to any of the buttons in the non-disabled state ("Reaction as button >>X<< ..."), be defined on the following parameter pages ("Reaction as disabling function ..."), recall a scene stored internally in the pushbutton sensor ("Internal scene recall ...").

Button >>X<<	<b>Button 1</b> ... Button 12	If the pushbutton sensor is to perform the function of a specific button at the beginning of the disabling state, this button will be selected here.  Visible only if "Reaction of pushbutton sensor at the beginning of the disabling function = Reaction as button >>X<< on pressing / releasing"!
Behaviour during active disabling	<b>all buttons without function</b>  All buttons behave as  Individual buttons without function  Individual buttons behave as	While disabling is active... all buttons or only individually selected buttons can be disabled ("... no function"), all buttons or only individually selected buttons can be restricted to a specific function ("... behave as"). In this case, the ETS shows further parameters.
All buttons with even numbers behave during disabling as	<b>Button 1</b> ... Button 12  Disabling function 1  Disabling function 2	If a specific button function is to be assigned during disabling to all or to individual buttons, this parameter can be used to select the desired button the function of which will then be executed. During disabling, all the buttons with an even button number behave like the one configured here. The desired functions can either correspond to the function of an existing button or they can be configured as special disabling functions. Visible only if "Behaviour during active disabling = all buttons behave as" or "Behaviour during active disabling = individual buttons behave as"!
All buttons with odd numbers behave during disabling as	<b>Button 1</b> ... Button 12  Disabling function 1  Disabling function 2	If a specific button function is to be assigned during disabling to all or to individual buttons, this parameter can be used to select the desired button the function of which will then be executed. During disabling, all the buttons with an odd button number behave like the one configured here. The desired functions can either correspond to the function of an existing button or they can be configured as special disabling functions. Visible only if "Behaviour during active disabling = all buttons behave as" or "Behaviour during active disabling = individual buttons behave as"!
Reaction of pushbutton sensor at the end of disabling	<b>No reaction</b>  Reaction as button >>Y<<	Besides disabling of rocker and button functions, the pushbutton sensor can also trigger a special function

when pressed	immediately at the end of disabling.
Reaction as button >>Y<< when released	This function can... correspond to the function assigned to any of the buttons in the non-disabled state ("Reaction as button >>X<< ..."), be defined on the following parameter pages ("Reaction as disabling function ..."), recall a scene stored internally in the pushbutton sensor ("Internal scene recall ...").
Reaction as disabling function 1 when pressed	
Reaction as disabling function 1 when released	
Reaction as disabling function 2 when pressed	
Reaction as disabling function 2 when released	
Internal scene recall scene 1	
Internal scene recall scene 2	
Internal scene recall scene 3	
Internal scene recall scene 4	
Internal scene recall scene 5	
Internal scene recall scene 6	
Internal scene recall scene 7	
Internal scene recall scene 8	
Button >>Y<<	<b>Button 1</b> ... Button 12
	If the pushbutton sensor is to perform the function of a specific button at the end of the disabling state, this button will be selected here.
	Only visible if "Reaction of pushbutton sensor at the end of disabling = Reaction as button >>Y<< on pressing / releasing"!
<input type="checkbox"/> Pushbutton sensor -> Disable -> Disable - Button selection (only visible if "Behaviour during active disabling = individual buttons without function" or "Behaviour during active disabling = individual buttons behave as"!)	
Button 1 ? ... Button 12 ?	Yes <b>No</b>
	The user can specify for each button separately whether it will be affected by the disabling function during the disabling state.

□↳ Pushbutton sensor -> Disable -> Disable - Disable function 1 / Disable - Disable function 2.  
With the exception of control of the status LED, the parameters available for the two disabling functions are the same as those for the push-button functions.

#### 4.2.5.3.5 Alarm signalling

Description	Values	Comment
□↔ Push button sensor -> Alarm signalling		
Alarm signal display	Activated <b>Deactivated</b>	This parameter can be used to enable alarm signal displaying. When alarm signalling is enabled, the ETS displays further parameters and up to two further communication objects.
Polarity of the alarm signalling object	<b>Alarm when ON and alarm reset when OFF</b> Alarm when OFF and alarm reset when ON	The alarm signalling object is used as an input for activating or deactivating alarm signal displaying. If the object value corresponds to the "Alarm" state, all status LEDs and the operation LEDs flash with a frequency of approx. 2 Hz.  If the setting is "Alarm when OFF and alarm reset when ON", the object must first be actively written by the bus with "0" to activate the alarm after a reset.
Reset alarm signalling by a button-press?	<b>Yes</b> No	An alarm signal is not stored so that the alarm signalling is generally deactivated after a reset or after programming with the ETS.
Use the alarm acknowledge object?	Yes <b>No</b>	If this parameter is set to "Yes", active alarm signal displaying can be deactivated by a button-press on the push button sensor. This button-press does not cause the configured function of the pressed button to be executed. Only after the next button-press will the configuration of the button be evaluated and a telegram be transmitted to the bus, if applicable. If "No" has been selected, alarm signalling can only be deactivated via the alarm signalling object. A button-press will always execute the configured button function.
		If alarm signalling can be deactivated by a button-press, this parameter defines whether an additional alarm acknowledge telegram is to be transmitted to the bus via the separate object "Alarm signalling acknowledge" after triggering by this button-press.  A telegram can, for instance, be sent via this object to the "Alarm signalling" objects of other push button sensors in order to reset the alarm status there as well (observe the polarity of the

acknowledge object!).

Acknowledge alarm  
signalling by

**OFF telegram**  
**ON telegram**

This parameter sets the polarity of the "Alarm signalling acknowledge" object. This parameter presetting depends on the selected polarity of the alarm message object.

**4.2.5.4 Parameter for the controller function section****4.2.5.4.1 Room temperature control**

Description	Values	Comment
<input type="checkbox"/> Room temperature control		
Room temperature controller function		The controller function block integrated in the device can either work as a main controller or, alternatively, as a controller extension. The setting of this parameter has a major impact on the function and on the other parameters and objects displayed in the ETS.
	Switched-off	The controller function block is switched off completely. No room temperature control and controller extension function can be executed by the device.
	<b>Switched-on</b>	The controller function block works as a main controller. The internal control algorithm is active, meaning that the device can be used for single-room temperature control.
	Controller extension	The controller function block works as a controller extension. A controller extension itself is not involved in the regulating process. With it, the user can operate the single-room controller, i.e. the main controller from different places in the room. Any number of controller extensions can be controlled by a main controller. In the function as a controller extension, settings relating to the integrated continuous controller are not possible in the second operating level.
<input type="checkbox"/> Room temperature control (addition for controller extension)		
Value request from controller extension?	Yes No	To ensure that all the objects are updated correctly, some communication objects of the controller extension can also initialise automatically after a device restart. For this, this parameter can be set to "Yes". The update then takes place after a reset by means of a ValueRead telegram to the room temperature controller. This must answer the request with a ValueResponse telegram.
Controller operating mode	Heating Cooling heating and cooling	Besides the operating function, the controller extension also possesses a display function. As on the main controller, various items of status information of the temperature controller can be shown on the device display. As

the displayed states and information and also some operating functions are strongly dependent on the parameterisation of the main controller, the controller extension must also be configured and thus match the functions of the main controller. It should be ensured that the settings match those of the main controller. Due to the controller operating mode setting, some parameters may not be visible.		
Controller sends heating and cooling command values to a shared object	Yes <b>No</b>	
Type of heating control	<b>Continuous PI control</b> Switching PI control (PWM) 2-point feedback control	
Type of cooling control	<b>Continuous PI control</b> Switching PI control (PWM) 2-point feedback control	
Controller outputs Heating command value in inverted fashion	Yes <b>No</b>	
Controller outputs Cooling command value in inverted fashion	Yes <b>No</b>	
Fan controller variable available	Yes <b>No</b>	
Number of fan levels	No fan levels 1 fan level 2 fan levels <b>3 fan levels</b> 4 fan levels 5 fan levels 6 fan levels 7 fan levels 8 fan levels	
Step width of the 4-level setpoint shift	0.5 K <b>1.0 K</b> 1.5 K 2.0 K	
Status message, controller extension	No status <b>KNX compliant</b> Controller general	

**4.2.5.4.2 Controller general**

Description	Values	Comment
□↳ Room temperature control -> Controller general		
Controller operating mode	<b>Heating</b> Cooling heating and cooling Basic and additional heating Basic and additional cooling Basic and additional heating and cooling	The room temperature controller distinguishes between two different operating modes. The operating modes specify whether you want the controller to use its variable to trigger heating systems ("heating" single operating mode) or cooling systems ("cooling" single operating mode). You can also activate mixed operation, with the controller being capable of changing over between "Heating" and "Cooling" either automatically or, alternatively, controlled by a communication object. In addition, you can establish two-level control operation to control an additional heating or cooling unit. For two-level feedback control, separate command values will be calculated as a function of the temperature deviation between the setpoint and the actual value and transmitted to the bus for the basic and additional levels. This parameter specifies the operating mode and, if necessary, enables the additional level(s).
Fan controller available	Yes <b>No</b>	The room temperature control can be supplemented with a fan controller using this parameter. By enabling the fan controller ("Yes" setting), it is possible to control the fan from heating and cooling systems operated by circulating air, such as fan coil units (FanCoil units), depending on the command value calculated in the controller or using manual operation. When the function is enabled additional parameters will appear in the ETS in the "Room temperature control -> Controller general -> Fan controller" as well as additional communication objects. Fan control is not possible with switching 2-point feedback control.
Fan operating mode	Heating Cooling heating and cooling Basic heating Additional heating Basic cooling	Depending on the operating mode of the room temperature control, as configured in the ETS, various controller command values can be used as the basis for fan control. The "Fan operating mode" parameter specifies which command value of the controller controls the fan controller. With one-level room temperature control, it is possible to select whether the fan is activated during heating and/or during cooling.

	Additional cooling	With two-level room temperature control, it is also possible for the fan controller to be set to the basic level or the additional level during heating and cooling. However, under no circumstances is it possible to use the basic and additional levels simultaneously for a fan controller within an operating mode.
	Basic heating and cooling	This basic setting of this parameter depends on the selected controller operating mode.
	Basic heating and additional cooling	
	Basic cooling and additional heating	
	Additional heating and cooling	
Additional level disabling object	Yes <b>No</b>	The additional levels can be separately disabled via the bus. The parameter enables the disable object as necessary. This parameter is only visible in two-level heating and cooling operation.
Send variable heating and cooling to one common object	Yes <b>No</b>	If the parameter is set to "Yes", the command value will be transmitted on a shared object during heating or cooling. This function is used, if the same heating system is used to cool the room in the summer and used to heat the room in the winter. This parameter is only visible with "heating and cooling" mixed operating mode, if applicable, with additional levels.
Type of heating control (if applicable, for basic and additional stage)	<b>Continuous PI control</b> Switching PI control (PWM)  Switching 2-point control (ON/OFF)	Selecting a feedback control algorithm (PI or 2-point) with data format (1 byte or 1 bit) for the heating system
Type of heating (if applicable, for basic and additional level)	<b>Hot water heater (5 K / 150 min)</b> Underfloor heating (5 K / 240 min) Electric heating (4 K / 100 min) Fan convector (4 K / 90 min)  Split unit (4 K / 90 min)  via control parameter	Adapting the PI algorithm to different heating systems using predefined values for the proportional range and reset time control parameters. With the "Using control parameters" setting, it is possible to set the control parameters in a manner deviating from the predefined values within specific limits. This parameter is only visible if "Type of heating control = Continuous PI control".
Proportional range heating (10 ... 127) * 0.1 K	10... <b>50</b> ...127	Separate setting of the "Proportional range" control parameter. This parameter is only visible if "Type of

heating = via control parameter" and the heating control type "PI control".		
Reset time heating (0 ... 255) * 1 min; 0 = inactive	0... <b>50</b> ...255	Separate setting of the "Reset time" control parameter. This parameter is only visible if "Type of heating = via control parameter" and the heating control type "PI control".
Top hysteresis of the 2-point controller heating (5 ... 127) * 0.1 K	<b>5</b> ...127	Definition of top hysteresis (switch-off temperatures) of the heating. This parameter is only visible if "Type of heating control = Switching 2-point feedback control (ON/OFF)".
Bottom hysteresis of the 2-point controller heating (-128 ... -5) * 0.1 K	-128...- <b>5</b>	Definition of bottom hysteresis (switch-on temperatures) of the heating. This parameter is only visible if "Type of heating control = Switching 2-point feedback control (ON/OFF)".
Type of cooling control (if applicable, for basic and additional stage)	<b>Continuous PI control</b>  Switching PI control (PWM)	Selecting a feedback control algorithm (PI or 2-point) with data format (1 byte or 1 bit) for the cooling system
Type of cooling (if applicable, for basic and additional level)	<b>Cooling ceiling (5 K / 240 min)</b>  Electric heating (4 K / 100 min)  Fan convector (4 K / 90 min)  Split unit (4 K / 90 min)  via control parameter	Adapting the PI algorithm to different cooling systems using predefined values for the proportional range and reset time control parameters. With the "Using control parameters" setting, it is possible to set the control parameters in a manner deviating from the predefined values within specific limits. This parameter is only visible if "Type of cooling control = PI control".
Proportional range cooling (10 ... 127) * 0.1 K	10... <b>50</b> ...127	Separate setting of the "Proportional range" control parameter. This parameter is only visible if "Type of cooling = via control parameter" and the cooling control type "PI control".
Reset time cooling (0 ... 255) * 1 min; 0 = inactive	0... <b>150</b> ...255	Separate setting of the "Reset time" control parameter. This parameter is only visible if "Type of cooling = via control parameter" and the cooling control type "PI control".

Top hysteresis of the 2-point controller cooling (5 ... 127) * 0.1 K	5...127	Definition of top hysteresis (switch-on temperatures) of the cooling. This parameter is only visible if "Type of cooling control = Switching 2-point feedback control (ON/OFF)".
Bottom hysteresis of the 2-point controller heating (-128 ... -5) * 0.1 K	-128...-5	Definition of bottom hysteresis (switch-off temperatures) of the cooling. This parameter is only visible if "Type of cooling control = Switching 2-point feedback control (ON/OFF)".
Operating mode switch-over	<b>Via value (1 byte)</b> Via switching (4 x 1 bit)	In the setting "Via value (1-byte) the change-over of the operating modes via the bus takes place according to the KNX specification via a 1-byte value object. In addition, a higher-ranking forced-object is available for this setting. In the setting "Via switching (4 x 1 bit)" the 'classic' change-over of the operating modes via the bus is via four separate 1-bit objects.
Operation mode after reset	Restore operation mode before reset  Comfort mode  <b>Standby mode</b>  Night operation  Frost/heat protection mode	This parameter specifies which operating mode is set immediately after a device reset. With "Restore operation mode before reset": The mode set before a reset according to the operating mode object will be restored after the initializing phase of the device. Operating modes set by a function with a higher priority before the reset (Forced, Window status, Presence status) are not effected. Frequent changing of the operating mode (e. g. several times a day) during running operation can adversely affect the life of the device as the read-only memory (EEPROM) used has been designed for less frequent write access events only.
Frost/heat protection	Automatic frost protection  <b>via window status</b>	Here it is possible to determine how the room temperature regulator switches into the frost/heat protection. With "automatic frost protection": the automatic frost protection is activated. Depending on the room temperature this allows an automatic switch-over into the frost protection mode. With "Via window status": switch-over into the frost/heat protection takes place via the "window status" object.
	<b>Off</b> 0.2 K / min.	This parameter determines the decrease temperature by which the room

Automatic frost protection temperature drop	0.3 K / min. 0.4 K / min. 0.5 K / min. 0.6 K / min.	temperature has to decrease within one minute in order for the controller to switch into the frost protection mode. The "OFF" setting will deactivate the frost protection automatic. Only visible if "frost/heat protection = Automatic frost protection"!
Frost protection period in automatic mode (1...255) * 1 min	1... <b>20</b> ...255	The length of the automatic frost protection is defined here. After the preset time has elapsed, the controller will return to the operating mode which was set before frost protection. Re-triggering will not be possible. Only visible if "frost/heat protection = Automatic frost protection"!
Window status delay (0...255) * 1 min.; 0 = inactive	<b>0</b> ...255	This parameter defines the delay time for the window status. After the parameterised time has elapsed after the window is opened the window status will be changed and thus the frost/heat protection mode activated. Such delay can make sense if short ventilation of the room by opening the window is not supposed to change the operating mode. Only visible if "Frost/heat protection = via window status"!

**4.2.5.4.3 Fan controller**

Description	Values	Comment
□ Room temperature control -> Controller general -> Fan controller		
Number of fan levels	No fan levels 1 fan level 2 fan levels <b>3 fan levels</b> 4 fan levels 5 fan levels 6 fan levels 7 fan levels 8 fan levels	The fan controller of the room temperature controller supports up to 8 fan level outputs, for which the actually used number of levels (1...8) is set using this parameter.
Fan level change-over via	<b>Switching objects (8 x 1 Bit)</b>  Value object (1 byte)	Depending on the data format of the objects of the controlled actuators, the change-over between the fan levels can either take place via up to 8 separate 1-bit objects or, alternatively, via one 1-byte object. The "Fan level change-over via" parameter defines the data format of the controller. With the 1-bit objects, each fan level discreetly receives its own object. With the 1-byte object, the active fan level is expressed by a value ("0" = Fan OFF / "1" = Level 1 / "2" = Level 2 / "3" = Level 3 / etc.).
Fan OFF threshold value -> Level 1, * 1 %	0...1...100	In automatic operation, the command value of the controller is used internally in the device for automatic control of the fan levels. As a transition between the levels, there are threshold values, defined according to the command value of the controller, which can be set here. If the command value exceeds the threshold value of a level, the appropriate level is activated. If the command value sinks below a threshold value, minus the configured hysteresis, then the change-over takes place into the next lowest fan level.
Fan level 1 threshold value -> Level 2, * 1 %	0... <b>30</b> ...100	
Fan level 2 threshold value -> Level 3, * 1 %	0... <b>60</b> ...100	
Fan level 3 threshold value -> Level 4, * 1 %	0... <b>90</b> ...100	
Fan level 4 threshold value -> Level 5, * 1 %	0... <b>100</b>	

Fan level 5 threshold value -> Level 6, * 1 %	0...100	
Fan level 6 threshold value -> Level 7, * 1 %	0...100	
Fan level 7 threshold value -> Level 8, * 1 %	0...100	
Hysteresis between threshold values, *1%	1...3...50	If the command value of the room temperature control has undershot the threshold value minus the hysteresis, the fan controller switches back to the previous level.
Waiting time for level change-over *0.1 s	1...2...255	Due to fan motors' inertia, as a rule there is a limit to how short the time intervals for switching the fan levels can be, i.e. there is a limit to how quickly the fan speed can be varied. If the fan controller is working in automatic mode, the settable "Waiting time on level change-over" is maintained on change-over of the levels.
Level limit (max. fan level)	<b>No level limit</b> Fan level 1 Fan level 2 Fan level 3 Fan level 4 Fan level 5 Fan level 6 Fan level 7 Fan level 8	To reduce the fan noise of a fan coil, the fan level limit can be activated. The level limit reduces the sound emissions by limiting the maximum fan level to a fan level value configured here (limitation level). The limit can be switched on and off using the "Fan, level limit" 1-bit object and thus activated as necessary.
Behaviour on forced position	<b>No forced position</b> Fan level 1 Fan level 2 Fan level 3 Fan level 4 Fan level 5 Fan level 6 Fan level 7 Fan level 8 Fan level OFF	The parameter "Level limit" is not checked for plausibility in the ETS, meaning that an implausible parameterisation is possible. For this reason, care should be taken to ensure that there is no limit level in the configuration which is higher than the actual fan levels. If a higher limit level is configured, then the limit has no effect.
		The controller provides the option of activating a forced fan position via the bus. With an active forced position, the fan levels can neither be controlled nor switched over in either automatic or manual mode. The fan remains in the forced state until the forced position is removed using the bus. In this manner, it is possible to switch the fan to a locked and controlled state, for example for servicing purposes.

		As soon as the forced position is activated, the controller jumps to the fan level configured in this parameter without any waiting time. The fan can also be completely switched off.
Object interpretation, automatic/manual fan control	0=Automatic mode, 1=Manual mode <b>1=Automatic mode, 0=Manual mode</b>	The parameter specifies the polarity of the object for the change-over between automatic and manual fan control. Automatic mode is always active after a device reset.
Fan level on change-over to manual	<b>No change</b> Fan level 1 Fan level 2 Fan level 3 Fan level 4 Fan level 5 Fan level 6 Fan level 7 Fan level 8 Fan level OFF	On change-over from automatic operation to manual operation, this parameter then decides whether the fan level most recently set in automatic operation is maintained, the fan is switched off or a defined fan level is set. The parameter "Fan level on change-over to manual" is not checked for plausibility in the ETS, meaning that an implausible parameterisation is possible. For this reason, care should be taken to ensure that there is no level in the configuration which is higher than the actual fan levels. If a level which does not exist is to be configured for the change-over to manual control, then the fan controller changes over to the maximum possible level when changing over to manual operation.
Heating fan run-on time, 0...255 *0.1 s, 0=Inactive		If the fan is switched-off in automatic or manual operation, it runs on for the time configured at this point, provided that a factor of more than "0" is set. This parameter applies to the controller operating mode "Heating" (if necessary, in the basic and additional levels).
Cooling fan run-on time, 0...255 *0.1 s, 0=Inactive		If the fan is switched-off in automatic or manual operation, it runs on for the time configured at this point, provided that a factor of more than "0" is set. This parameter applies to the controller operating mode "Cooling" (if necessary, in the basic and additional levels).
Fan protection	Yes <b>No</b>	The fan protection function allows the fan of a fan coil unit, which has not been active for some time, to be temporarily switched to the maximum level. In this way, the controller fan motors can be protected against stiffness. In addition, the fan blades and the heat exchanger of the fan coil unit are protected against

dust against dust.  
If the fan protection is to be used, it must be enabled using the "Yes" setting at this point.

Start-up using level	Fan level OFF <b>Fan level 1</b> Fan level 2 Fan level 3 Fan level 4 Fan level 5 Fan level 6 Fan level 7 Fan level 8	The fan can, if it was switched off before and should now start up, be switched on at a defined switch-on level. This switch-on level can be any of the available fan levels, and is set using this parameter. The switch-on level is usually one of the higher fan levels of a blower convector. The switch-on level remains active for the "Waiting time on level change-over" configured in the ETS.
		The parameter "Start-up via level" is not checked for plausibility in the ETS, meaning that an implausible parameterisation is possible. For this reason, care should be taken to ensure that there is no switch-on level in the configuration which is higher than the actual fan levels. The fan controller automatically corrects a faulty parameterisation by activating level 1 for the start-up, meaning that the fan starts up normally without a switch-on level.
Command value is 0%, until internal command value is greater than, *1%	1...100	The command value evaluated by the fan controller in automatic operation can be optionally limited by this parameter in the bottom command value range.
Command value is 100%, as soon as internal command value is greater than, *1%	1...99...100	The command value evaluated by the fan controller in Automatic mode can be optionally limited by this parameter in the top command value range.
Command value offset, *1%	0... 100	The command value evaluated by the fan controller in Automatic mode can be optionally raised by the static offset configured here. Should the calculation produce a value of over 100 %, then the command value is limited to the maximum value.

#### 4.2.5.4.4 Command value and status output

Description	Values	Comment
□↔ Room temperature control -> Controller general -> Command value and status output	0...3...100	Automatic transmission at modification by (0...100) * 1 %; 0 = inactive
Cycle time of the switching command value (1...255) * 1 min	1...15...255	This parameter determines the size of the command value change that will automatically transmit continuous command value telegrams via the command value objects. Thus this parameter only affects command values which are configured to "Continuous PI control" and to the 1 byte additional command value objects of the "Switching PI control (PWM)".
Cycle time for automatic transmission (0...255) * 1 min; 0 = inactive	0...10...255	This parameter specifies the cycle time for the pulse width modulated command value (PWM). Thus this parameter only affects command values which are configured to "Switching PI control (PWM)".
Output of the heating command value	Inverted (under current, this means closed)  <b>Normal (under current, this means opened)</b>	This parameter determines the time interval for the cyclical transmission of the command values via the command value objects. This parameter only affects command values which are configured to "Continuous PI control" or "Switching PI feedback control (PWM)".
Output of the heating basic level command value	Inverted (under current, this means closed)  <b>Normal (under current, this means opened)</b>	At this point, it is possible to specify whether the command value telegram for heating is output normally or in inverted form. This parameter is only visible if the operating mode "Heating" or "Heating and cooling" is configured and not two-level operation.
Output of the heating additional level command value	Inverted (under current, this means closed)  <b>Normal (under current, this means opened)</b>	At this point, it is possible to specify whether the command value telegram for the heating basic level is output normally or in inverted form. This parameter is only visible if the operating mode "Heating" or "Heating and cooling" is configured along with two-level operation.

		and cooling" is configured along with two-level operation.
Output of the cooling command value	Inverted (under current, this means closed)  <b>Normal (under current, this means opened)</b>	At this point, it is possible to specify whether the command value telegram for cooling is output normally or in inverted form. This parameter is only visible if the operating mode "Cooling" or "Heating and cooling" is configured and not two-level operation.
Output of the cooling basic level command value	Inverted (under current, this means closed)  <b>Normal (under current, this means opened)</b>	At this point, it is possible to specify whether the command value telegram for the cooling basic level is output normally or in inverted form. This parameter is only visible if the operating mode "Cooling" or "Heating and cooling" is configured along with two-level operation.
Output of the cooling additional level command value	Inverted (under current, this means closed)  <b>Normal (under current, this means opened)</b>	At this point, it is possible to specify whether the command value telegram for the cooling additional level is output normally or in inverted form. This parameter is only visible if the operating mode "Cooling" or "Heating and cooling" is configured along with two-level operation.
Command value limit	<b>Deactivated</b>  Continuously activated  Can be activated via object	The command value limit allows the restriction of calculated command values to the range limits "minimum" and "maximum". The limits are permanently set in the ETS and, if command value limitation is active, can be neither undershot or exceeded during device operation. The "Command value limit" parameter defines the mode of action of the limiting function. The command value limit can either be activated or deactivated using the 1-bit communication object "Command value limit", or be permanently active.
Command value limit after reset	<b>Deactivated</b>  Activated	When controlling via the object, it is possible to have the controller activate the command value limit automatically after bus voltage return or an ETS programming operation. This parameter defines the initialisation behaviour here. In the "Deactivated" setting, the command value limit is not automatically activated after a device reset. A "1" telegram must first be received via the

		"Command value limit" object for the limit to be activated. In the "Activated" setting, the controller activates the command value limit automatically after a device reset. To deactivate the limit a "0" telegram must be received via the "Command value limit" object. The limit can be switched on or off at any time using the object. This parameter is only visible with "Command value limit = can be activated via object"!
Minimum command value for heating (optionally also for basic and additional level)	5%, 10%, 15%, 20%, 25%, 30%, 35%, 40%, 45%, 50%	The "Minimum command value" parameter specifies the lower command value limiting value for heating. With an active command value limit, the set minimum command value is not undershot by command values. If the controller calculates smaller command values, it sets the configured minimum command value. The controller transmits a 0 % command value if no more heating or cooling energy has to be demanded.
Maximum command value for heating (optionally also for basic and additional level)	55%, 60%, 65%, 70%, 75%, 80%, 85%, 90%, 95%, 100%	The "Maximum command value" parameter specifies the upper command value limiting value for heating. With an active command value limit, the set maximum command value is not exceeded. If the controller calculates larger command values, it sets the configured maximum command value.
Minimum command value for cooling (optionally control circuit 1) (optionally also for basic and additional level)	5%, 10%, 15%, 20%, 25%, 30%, 35%, 40%, 45%, 50%	The "Minimum command value" parameter specifies the lower command value limiting value for cooling. With an active command value limit, the set minimum command value is not undershot by command values. If the controller calculates smaller command values, it sets the configured minimum command value. The controller transmits a 0 % command value if no more heating or cooling energy has to be demanded.
Maximum command value for cooling (optionally also for basic and additional level)	55%, 60%, 65%, 70%, 75%, 80%, 85%, 90%, 95%, 100%	The "Maximum command value" parameter specifies the upper command value limiting value for cooling. With an active command value limit, the set maximum command value is not exceeded. If the controller calculates larger command values, it sets the configured maximum command value.

Heating message	Yes No	Depending on the set operating mode, a separate object can be used to signal whether the controller is currently demanding heating energy and is thus actively heating. The "Yes" setting here enables the message function for heating.
Cooling message	Yes No	Depending on the set operating mode, a separate object can be used to signal whether the controller is currently demanding cooling energy and is thus actively cooling. The "Yes" setting here enables the message function for cooling.
Controller status	No status <b>KNX compliant</b> Controller general Transmit individual state	The room temperature controller can transmit its current status to the KNX/EIB. A choice of data formats is available for this. This parameter enables the status signal and sets the status format.
Single status	<b>Comfort operation activated</b> Standby mode activated Night mode activated Frost/heat protection active Controller disabled Heating / cooling Controller inactive Frost alarm	Here, the status information is defined, which is to be transmitted onto the bus as the 1-bit controller status. This parameter is only visible if the parameter "Controller status" is set to "Transmit single status".
Behaviour when command value = 100% (Clipping mode PI control)	<b>keep 100% until setpoint = actual, then 0%</b> keep 100% as required, then adjust downwards	If with a PI control the calculated command value of the controller exceeds the physical limits of the actuator, in other words if the calculated command value is greater than 100%, then the command value is set to the maximum value (100%) and thus limited. With PI control the command value can reach the value "100%" if there is a large deviation of the room temperature from the setpoint temperature or the controller requires a long time to adjust to the setpoint with the heating or cooling energy that is being applied. The controller can

evaluate this state in a particular manner and react to it in various ways. This parameter defines the functions of the PI controller when the command value is 100%.

"keep 100% until setpoint = actual, then 0%" setting:

The controller keeps the maximum command value until the room temperature (actual value) reaches the setpoint temperature. After that it reduces the command value down to 0% all at once (controller reset). The advantage of this control behaviour is that in this way sustainable heating up of undercooled rooms or effective cooling of overheated rooms will be achieved by overshooting the setpoint. The disadvantage is the in some circumstances the overshooting of the room temperature may be found disturbing.

Setting "keep 100% as required, then adjust downwards":

The controller maintains the maximum command value only as long as it is necessary. After that it adjusts the command value downwards according to the PI algorithm. The advantage of this control characteristic is the fact that the room temperature does not exceed the setpoint temperature at all, or only slightly. The disadvantage is that this control principle increases the tendency to oscillate about the setpoint.

#### 4.2.5.4.5 Setpoint values

Description	Values	Comment
<input type="checkbox"/> Room temperature control -> Controller general -> Setpoints		
Overwrite setpoints in device after ETS programming operation?	<b>Yes</b> No	The temperature setpoints programmed in the room temperature controller by the ETS during commissioning can be changed via communication objects. This parameter can be used to define whether the setpoints present in the device, which may have been changed subsequently, are overwritten during an ETS programming operation and thus replaced again by the values parameterised in the ETS. If this parameter is on "Yes", then the temperature setpoints are deleted in the device during a programming operation and replaced by the values of the ETS. If this parameter is configured to "No", then setpoints present in the device remain unchanged. The setpoint temperatures entered in the ETS then have no significance.
Setpoint presetting	<b>Relative (setpoint temperatures from basic setp.)</b>  Absolute (independent setpoint temperatures)	It is possible to configure the setpoints for the "Comfort", "Standby" and "Night" modes directly (absolute setpoint presetting) or relatively (derivation from basic setpoint). This parameter defines the way the setpoint temperature is preset.  With "Relative": All temperature setpoints are derived from the basic temperature (basic setpoint). With "Absolute": The setpoint temperatures are independent of each other. Different temperature values can be specified for each operating mode and heating/cooling mode.
Basic temperature after reset (7.0...40.0) * 1°C	7.0... <b>21.0</b> ...40.0	This parameter defines the temperature value to be applied as the basic setpoint after commissioning by the ETS. All the temperature setpoints are derived from the basic setpoint.  This parameter is only visible with relative setpoint presetting!
Accept change of the basic setpoint shift permanently	<b>No</b> Yes	In addition to presetting individual temperature setpoints by the ETS or basic setpoint object, the user can shift the basic setpoint in a specific range to predefined limits. Whether a basic setpoint shifting only affects the currently active operating mode or whether it influences all other setpoint

Modification of the basic temperature setpoint value	Deactivated <b>Approve via bus</b>	temperatures of the remaining operating modes is determined by this parameter.  In the "Yes" setting, the shift of the basic setpoint carried out affects all operating modes. The shifting is maintained even after change-over of the operating mode or the heating/cooling mode or readjusting the basic setpoint. In the "No" setting, the basic setpoint shift carried out is in effect for only as long as the operating mode or heating/cooling mode has not changed or the basic setpoint is maintained. Otherwise the setpoint shift will be reset to "0". This parameter is only visible with relative setpoint presetting!
Accept modification of the basic temperature setpoint value permanently	No Yes	Here, it is possible to specify if it is possible to change the basic setpoint via the bus.  This parameter is only visible with relative setpoint presetting!  One has to distinguish between two cases, defined by this parameter, if the basic setpoint has been modified via the object. This parameter is only visible with relative setpoint presetting!  When set to "Yes": If, with this setting, the temperature setpoint is adjusted, the controller saves the value permanently to the EEPROM (permanent storage). The newly adjusted value will overwrite the initial value, i.e. the basic temperature originally configured via the ETS after a reset! The changed values are also retained after a device reset, after a switch-over of the operating mode or after a switch-over of the heating/cooling mode. With this setting, it should be noted that frequent changing of the basic temperature (e.g. several times a day because of cyclical telegrams) can affect the product life of the device as the non-volatile storage is designed for less frequent write access.  When set to "No": The setpoints received via the objects remain active only temporarily. In case of a bus voltage failure or following a switch-over to another operating mode (e.g. Comfort followed by Standby, or also Comfort followed by Comfort), or after a switch-over of the heating/cooling mode (e.g. heating after cooling), the last setpoint

changed will be discarded and replaced by the initial value.

Accept modification of the setpoint permanently?

**No**  
Yes

One has to distinguish between two cases, defined by this parameter, if the setpoint has been modified via the object. This parameter is only visible with absolute setpoint presetting!

When set to "Yes": If, with this setting, the temperature setpoint is adjusted, the controller saves the value permanently to the EEPROM (permanent storage). The newly adjusted value will overwrite the initial value, i.e. the absolute setpoint temperature originally loaded using the ETS. The changed values are also retained after a device reset, after a switch-over of the operating mode or after a switch-over of the heating/cooling mode (with absolute setpoint presetting individually for each operating mode for heating and cooling).

With this setting, it should be noted that frequent changing of the basic temperature (e.g. several times a day because of cyclical telegrams) can affect the product life of the device as the non-volatile storage is designed for less frequent write access.

When set to "No": The setpoints received via the objects remain active only temporarily. In case of a bus voltage failure or following a switch-over to another operating mode (e.g. Comfort followed by Standby, or also Comfort followed by Comfort), or after a switch-over of the heating/cooling mode (e.g. heating after cooling), the last setpoint changed will be discarded and replaced by the initial value.

Setpoint temp. comfort mode (heating)  
(7.0 °C...40.0 °C) \* 1°C

7.0...**21.0**...40.0

With absolute setpoint presetting the setpoint temperatures for comfort, standby and night mode are independent of each other. Depending on the operating mode and heating/cooling mode, various temperature values can be specified in the ETS within the range +7.0 °C to +40.0 °C. The ETS plug-in does not validate the temperature values. It is thus possible, for example, to select smaller setpoint temperatures for cooling mode than for heating mode, or to specify lower temperatures for comfort mode than for standby mode. After commissioning using the ETS the setpoint temperatures can be changed via the bus by means of temperature telegrams. This can be done using the communication object

Setpoint temp. standby mode (heating) (7.0 °C...40.0 °C) * 1°C	7.0... <b>19.0</b> ...40.0	"Setpoint active operating mode". Presetting of the setpoint temperature for the comfort heating mode. These parameters are only visible with absolute setpoint presetting!
Setpoint temp. night mode (heating) (7.0 °C...40.0 °C) * 1°C	7.0... <b>17.0</b> ...40.0	Presetting of the setpoint temperature for night mode (heating).
Setpoint temp. comfort mode (cooling) (7.0 °C...40.0 °C) * 1°C	7.0... <b>23.0</b> ...40.0	Presetting of the setpoint temperature for the comfort cooling mode.
Setpoint temp. standby mode (cooling) (7.0 °C...40.0 °C) * 1°C	7.0... <b>25.0</b> ...40.0	Presetting of the setpoint temperature for standby mode (cooling).
Setpoint temp. night mode (cooling) (7.0 °C...40.0 °C) * 1°C	7.0... <b>27.0</b> ...40.0	Presetting of the setpoint temperature for night mode (cooling).
Frost protection setpoint temperature (7.0...40.0) * 1°C	<b>7.0</b> ...40.0	This parameter specifies the setpoint temperature for frost protection. The parameter is only visible in "Heating" or "Heating and cooling" operating modes (if necessary with additional levels).
Heat protection setpoint temperature (7.0...45.0) * 1°C	7.0... <b>35.0</b> ...45.0	This parameter specifies the setpoint temperature for heat protection. The parameter is only visible in "Cooling" or "Heating and cooling" operating modes (if necessary with additional levels).
Deadband position	Symmetrical <b>Asymmetrical</b>	With relative setpoint presetting, the comfort setpoint temperatures for the operating mode "Heating and cooling" are derived from the basic setpoint in consideration of the adjusted Dead band. The deadband (temperature zone for which there is neither heating nor cooling) is the difference between the comfort setpoint temperatures. Symmetrical setting: the deadband preset in the ETS plug-in is divided in two parts at the basic setpoint. The comfort setpoint temperatures are derived directly from the basic setpoint resulting from the half deadband (Basic

		setpoint - 1/2 deadband = Heating comfort temperature or Basic setpoint + 1/2 deadband = Cooling comfort temperature).
Deadband between heating and cooling (0...127) * 0.1 K	0...20...127	Asymmetrical setting: with this setting the comfort setpoint temperature for heating equals the basic setpoint! The preset deadband is effective only from the basic setpoint in the direction of comfort temperature for cooling. Thus the comfort set-temperature for cooling is derived directly from the comfort setpoint for heating. The parameter is only visible in the "Heating and cooling" operating mode (if necessary with additional levels) and only with relative setpoint presetting!
Difference between basic and additional levels (-128...127) * 0.1 K	0...20...127	With relative setpoint presetting, the comfort setpoint temperatures for heating and cooling are derived from the basic setpoint in consideration of the adjusted Dead band. The deadband (temperature zone for which there is neither heating nor cooling) is the difference between the comfort setpoint temperatures. It is set using this parameter. The parameter is only visible in the "Heating and cooling" operating mode (if necessary with additional levels) and only with relative setpoint presetting.
Transmission at setpoint temperature change by (0...255) * 0.1 K; 0 = inactive	0...1...255	In a two-level control mode, it is necessary to determine the temperature difference to the basic level with which the additional level is to be incorporated into the feedback control. This parameter defines the level spacing. The parameter can only be seen in two-level control operation.
Cyclical transmission of setpoint temperature	0...255	Determines the size of the value change required to automatically transmit the current value via the "Setpoint temperature" object. In the "0" setting, the setpoint temperature is not transmitted automatically when there is a change.
		This parameter determines whether the setpoint temperature is to be transmitted periodically via the "Setpoint

(0...255) \* 1 min;  
0 = inactive

temperature" object. Definition of the cycle time by this parameter. In the "0" setting, the setpoint temperature is not transmitted automatically cyclically.

Upward adjustment of the basic setpoint temperature  
(0...10) \* 1 K

0 K  
+ 1 K  
+ 2 K  
+ 3 K  
+ 4 K  
+ 5 K  
**+ 8 K**  
+ 9 K  
+ 10 K

This is used to define the maximum range in which the basic setpoint temperature can be adjusted upwards. This parameter is only visible with relative setpoint presetting!

Downward adjustment of the basic setpoint temperature  
(0...10) \* 1 K

0 K  
- 1 K  
- 2 K  
- 3 K  
- 4 K  
- 5 K  
**- 8 K**  
- 9 K  
- 10 K

This is used to define the maximum range in which the basic setpoint temperature can be adjusted downwards. This parameter is only visible with relative setpoint presetting!

Lower the setpoint temperature during standby operation (heating)  
(-128...0) \* 0.1 K

-128...**-20**...0

The value by which the standby setpoint temperature for heating is lowered compared to the heating comfort temperature.  
The parameter is only visible in the "Heating" or "Heating and cooling" operating mode (if necessary with additional levels) and only with relative setpoint presetting.

Lower the setpoint temperature during night operation (heating)  
(-128...0) \* 0.1 K

-128...**-40**...0

The value by which the night setpoint temperature for heating is lowered compared to the heating comfort temperature.  
The parameter is only visible in the "Heating" or "Heating and cooling" operating mode (if necessary with additional levels) and only with relative setpoint presetting.

Raise the setpoint temperature during standby operation (cooling)  
(0...127) \* 0.1 K

0...**20**...127

The value by which the standby setpoint temperature for cooling is lowered compared to the cooling comfort temperature.  
The parameter is only visible in the "Heating" or "Heating and cooling" operating mode (if necessary with additional levels) and only with relative setpoint presetting.

Raise the setpoint temperature during night operation (cooling) (0...127) * 0.1 K	0...40...127	<p>The value by which the night temperature for cooling is lowered compared to the cooling comfort temperature.</p> <p>The parameter is only visible in the "Heating" or "Heating and cooling" operating mode (if necessary with additional levels) and only with relative setpoint presetting.</p>
Setpoint temperature limit in cooling operation	<b>No limit</b>  Only difference to outdoor temperature  Only max. setpoint temperature  Max. setpoint and difference to outdoor temperature	<p>Optionally, the setpoint temperature limit can be enabled here, which is only effective in cooling operation. If necessary, the controller limits the setpoint temperature to specific values and prevents an adjustment beyond the limits.</p> <p>"Only difference to outdoor temperature" setting, the outdoor temperature is monitored and compared to the active setpoint temperature in this setting. The specification of the maximum temperature difference to the outdoor temperature is made using the "Difference to outdoor temperature in cooling mode" parameter. If the outdoor temperature rises above 32 °C, then the controller activates the setpoint temperature limit. It then permanently monitors the outdoor temperature and raises the setpoint temperature so that is beneath the outdoor temperature by the amount configured. Should the outdoor temperature continue rise, the controller raises the setpoint temperature until the required difference to the outdoor temperature is achieved, or, at most, the heat protection temperature. It is then not possible to undershoot the raised setpoint, e.g. by changing the basic setpoint change. The change to the setpoint temperature limit is temporary. It only applies for as long as the outdoor temperature exceeds 32 °C.</p> <p>"Only max. setpoint temperature" setting: In this setting, no setpoint temperatures are permitted in Cooling mode related to the Comfort, Standby and Night modes, which are greater than the maximum setpoints configured in the ETS. The maximum temperature setpoint is specified by the "Max. setpoint temperature in cooling operation" parameter. With an active limit, no larger setpoint can be set in cooling operation, e.g. by a basic setpoint change or a setpoint shift. However, heat protection is not</p>

		influenced by the setpoint temperature limit.
		"Max. setpoint temperature and difference to outdoor temperature" setting: This setting is a combination of the two above-mentioned settings. In the downward direction, the setpoint temperature is limited by the maximum outdoor temperature difference, whilst in the upward direction, the limit is made by the maximum setpoint. The maximum setpoint temperature has priority over the outdoor temperature difference. This means that the controller keeps on raising the setpoint temperature upwards according to the difference to the outdoor temperature configured in the ETS until the maximum setpoint temperature or the heat protection temperature is exceeded. Then the setpoint is limited to the maximum value.
Activation of the setpoint temperature limit in cooling operation via object	<b>No</b> Yes	A setpoint limit enabled in the ETS can be activated or deactivated as necessary using a 1-bit object. For this, this parameter can be set to "Yes". In this case, the controller only takes the setpoint limit into account, if it has been enabled via the object "Cooling setpoint temp. limit" ("1" telegram). If the limitation is not enabled ("0" telegram), the cooling setpoint temperatures are not limited. This parameter is visible only if setpoint temperature monitoring is enabled.
Difference to outdoor temperature in cooling operation	<b>1 K...6 K...15 K</b>	This parameter defines the maximum difference between the setpoint temperature in Comfort mode and the outdoor temperature with an active setpoint temperature limit. This parameter is visible only if setpoint temperature monitoring is enabled. However, this is only if the parameter "Setpoint temperature limit in cooling operation" is then set to "Only difference to outdoor temperature" or "Max. setpoint temperature and difference to outdoor temperature".
Max. setpoint temperature in cooling operation	<b>20°C...26°C...35°C</b>	This parameter defines the maximum setpoint temperature in Comfort mode with an active setpoint temperature limit. This parameter is visible only if setpoint temperature monitoring is enabled. However, this is only if the parameter "Setpoint temperature limit in cooling operation" is then set to "Only max".

		setpoint temperature" or "Max. setpoint temperature and difference to outdoor temperature".
Change-over between heating and cooling	<b>Automatic</b>  Via object (heating/cooling change-over)	In a configured mixed mode it is possible to switch over between heating and cooling. With "Automatic": Depending on the operating mode and the room temperature, the change-over takes place automatically. With "Via object (heating/cooling change-over)": The change-over takes place only via the object "Heating / cooling change-over". With automatic setpoint presetting this parameter is permanently set to "Via object (heating/cooling switch-over)"!
Heating / cooling operating mode after reset	<b>Heating</b> Cooling Operating mode before reset	The preset operating mode for after the return of the bus voltage is specified here. Only visible if "Change-over between heating and cooling = via object"!
Automatic heating/cooling switch-over transmission	<b>On changing the heating/cooling</b>  On changing the output value	Here, it is possible to specify when a telegram is transmitted automatically onto the bus via the object "Heating / cooling change-over". Only visible if "Change-over between heating and cooling = automatic".
Cyclical transmission heating/cooling change-over (0...255) * 1 min; 0 = inactive	<b>0...255</b>	This parameter specifies whether the current object status of the "Heating / cooling change-over" object should be output cyclically to the bus on an automatic change-over. The cycle time can be set here. The "0" setting will deactivate the periodic transmission of the object value. Only visible if "Change-over between heating and cooling = automatic".
Step width of the 4-level setpoint shift	0.5 K <b>1.0 K</b> 1.5 K 2.0 K	This parameter defines the value of a level of the basic setpoint shift. The basic setpoint can be shifted by up to 4 levels.

**4.2.5.4.6 Controller functionality**

Description	Values	Comment
<input checked="" type="checkbox"/> Room temperature control -> Controller functionality		
Presence detection	<b>Presence button</b> Motion detector	In the "Presence button" setting, presence detection takes place using a button on the device or via the presence object (e.g. other push button sensors). When the presence button is pressed, the comfort extension is activated. In the "Motion detector" setting, presence detection takes place using an external motion detector, coupled to the presence object. Comfort mode is recalled when a presence is detected. Comfort mode remains active until the motion detector ceases to detect movement. In this setting, a presence button on the device has no function.
Length of the comfort extension (0 .. 255) * 1 min; 0 = OFF	0... <b>30</b> ...255	When the presence button is pressed, the controller switches to Comfort mode for the length of time specified here. When this time has elapsed, it switches back automatically. In the "0" setting, the comfort extension is switched off, meaning that it cannot be activated from Night or Frost/heat protection mode. In this case, the operating mode will not be changed, although the presence function has been activated. This parameter is only visible when presence detection is configured to "Presence button".
Switch off controller (dew point operation)	<b>No</b> via bus	This parameter enables the "Disable controller" object. If the controller is disabled, there is no feedback control until enabled (command values = 0). An activated controller disable (dew point operation) is shown in the display.
Valve protection	<b>No</b> Yes	Valve protection may be carried out periodically in order to prevent the addressed control valves of the heater or cooling system from becoming calcified or stuck. The "Yes" setting in this parameter activates valve protection. This type of protection is generally started not only for non-active command value outputs, i.e. for outputs which have not requested any heating or cooling energy over the past 24 hours. For these outputs, the controller will periodically set the command value to the maximum value once a day for a duration of approx. 5 minutes.

Underfloor heating temperature limit (Only effective in heating mode!)	<b>Not present</b> present	<p>The temperature limit can be activated in the controller in order to protect an underfloor heating system. If the temperature limit is enabled here ("Present" setting), the controller continuously monitors the floor temperature. Should the floor temperature exceed a specific limiting value on heating, the controller immediately switches the command value off, thus switching the heating off and cooling the system. Only when the temperature falls below the limiting value, minus a hysteresis of 1 K, will the controller add the most recently calculated command value.</p> <p>The floor temperature is fed to the controller using a separate object. It should be noted that the temperature limit only affects command values for heating. Thus, the temperature limit requires the controller operating modes "Heating" or "Heating and cooling".</p>
Effect on	<b>Heating, basic level</b> Heating, additional level	<p>The temperature limit can also be used in a two-level feedback control with basic and additional levels. It must then be specified here to which level the limit shall apply. Either the basic level or to the additional level for heating can be limited.</p> <p>This parameter can only be set in two-level control operation.</p>
Maximum temperature, underfloor heating * 1 °C	20... <b>30</b> ...70	<p>The maximum limit temperature which the underfloor heating system may reach is specified here. If this temperature is exceeded, the controller switches the underfloor heating system off using the command value. As soon as the floor temperature has fallen 1 K under the limit temperature, the controller switches the command value on again, assuming that this is intended in the control algorithm. The 1 K hysteresis is fixed and cannot be changed.</p>

#### 4.2.5.4.7 Second operating level

Description	Values	Comment
Chan. setpoint temp. during comfort mode	<b>Disabled</b> enabled	Here it is possible to specify whether the basic temperature can be changed in the menu of the second operating level ("Enabled" setting). With "Disabled" the basic temperature is only displayed without being able to change it. It should be noted that the visibility of the setpoint temperatures in the second operating level ("Continuous controller" menu) depends on the parameter setting in the area "General -> Second operating level"!
Changing the setpoint temperature during standby mode (heating)	<b>Disabled</b> <b>enabled</b>	Here it is possible to specify whether the setpoint temperature of the "Standby" operating mode for heating mode can be changed in the menu of the second operating level ("Enabled" setting). With "Disabled" the setpoint temperature is only displayed without being able to change it. It should be noted that the visibility of the setpoint temperatures in the second operating level ("Continuous controller" menu) depends on the parameter setting in the area "General -> Second operating level"!
Changing the setpoint temperature during standby mode (cooling)	<b>Disabled</b> enabled	Here it is possible to specify whether the setpoint temperature of the "Standby" operating mode for cooling mode can be changed in the menu of the second operating level ("Enabled" setting). With "Disabled" the setpoint temperature is only displayed without being able to change it. It should be noted that the visibility of the setpoint temperatures in the second operating level ("Continuous controller" menu) depends on the parameter setting in the area "General -> Second operating level"!
Changing the setpoint temperature during night mode (heating)	<b>Disabled</b> <b>enabled</b>	Here it is possible to specify whether the setpoint temperature of the "Night" operating mode for heating mode can be changed in the menu of the second operating level ("Enabled" setting). With "Disabled" the setpoint temperature is only displayed without being able to change it. It should be noted that the visibility of the setpoint temperatures in the second operating level ("Continuous controller" menu) depends on the parameter setting in the area "General -> Second operating level"!

menu) depends on the parameter setting in the area "General -> Second operating level"!

Changing the setpoint temperature during night mode (cooling)

**Disabled**  
enabled

Here it is possible to specify whether the setpoint temperature of the "Night" operating mode for cooling mode can be changed in the menu of the second operating level ("Enabled" setting). With "Disabled" the setpoint temperature is only displayed without being able to change it.

It should be noted that the visibility of the setpoint temperatures in the second operating level ("Continuous controller" menu) depends on the parameter setting in the area "General -> Second operating level"!

Display and change max. setpoint temp.(cooling)

**Disabled**  
enabled

This specifies whether it is possible to display and change the maximum setpoint temperature for the setpoint temperature limiting in cooling operation in the menu of the second operating level ("Enabled" setting). If this is "blocked", the maximum setpoint temperature is not displayed and so can also not be changed directly on the device.

The setting is only visible in the second operating level when setpoint temperature limiting is also enabled in the ETS.

Display & change difference to outdoor temperature

**Disabled**  
enabled

This specifies whether it is possible to display and change the difference to the outdoor temperature for the setpoint temperature limiting in cooling operation in the menu of the second operating level ("Enabled" setting). If this is "blocked", the difference to the setpoint temperature is not displayed and so can also not be changed directly on the device.

The setting is only visible in the second operating level when setpoint temperature limiting is also enabled in the ETS.

#### 4.2.5.5 Parameters for the display

Description	Values	Comment
□↔ Display		
Maximum display brightness	<b>Level 1 (60%)</b> Level 2 (80%) Level 3 (100%)	This parameter defines the brightness of the LED display for the "ON" status in 3 levels. The minimum brightness (5 %) is always set for the "OFF" state.
Display	Always off always On <b>Switch on through button-press</b> On in night-time mode Switch on through button-press or Night mode switching object Inverted switching object Switch on through button-press or switching object Switch on through button-press or inv. switching object Value object Switch on through button-press or value object	<p>The function of the LED display is specified by this parameter. The LED display can be permanently switched off (brightness: 5 %) or on (brightness determined by the "Maximum brightness" parameter). In addition, event-controlled activation is possible.</p> <p>If the lighting is switched on by pressing a control surface (rocker or button, setting "Switch-on through button-press..."), the device switches the lighting back to the minimum brightness automatically when the switch-off time configured in the ETS elapses. The switch-off time is retriggered each time a control surface is actuated.</p> <p>If the lighting is to be switched on in the "Night" operating mode, the lighting remains switched on continuously when night mode is active.</p> <p>When the display lighting is switched using the 1-bit communication object "Display on/off", the lighting is switched permanently on or off according to the switching value. Alternatively, the LED display can be controlled using the 1-byte value object "Display brightness". For this, it is possible to toggle the brightness to one of the three brightness levels of the maximum brightness. The received value directly defines the level ("1" = Level 1 / 60 %, "2" = Level 2 / 80 %, "3" = Level 3 / 100 %). The value "0" switches the LED display to the minimum brightness (5 %). The values "4" to "255" do not produce a reaction.</p> <p>Lighting activation by operating a control surface can be combined with control through the communication objects. The lighting is switched on automatically by pressing a control surface and is only switched off again when the switch-off time configured in the ETS elapses, if the lighting is to be switched back to the minimum brightness via the corresponding communication object (object value "OFF" or "0"). In addition, the lighting can also be switched or dimmed by the communication objects,</p>

		independently of operation on the device. In this case, the lighting is not switched off automatically when the time has elapsed. The switch-off can then only take place using a switch-off telegram in accordance with the normal or inverted telegram polarity or via a value = "0"
Automatic switch-off after	15 sec 30 sec 45 sec <b>1.0 min</b> 1.5 min ... 1 h	The backlighting of the display is switched off automatically after the time set here, if it has been switched on by a button-press. This parameter is only visible when the backlighting can be switched on by button-press.
Numer of display pages	<b>1 page</b> 2 pages 3 pages 4 pages	The upper part of the device display has a graphics area of 132 x 30 pixels. This area is also called a "page". A page can display one, two or three lines of text (time, date, temperatures, formatted and unformatted values), as well as large graphic symbols (30 x 30 pixels). It is possible to configure how many pages can be displayed and switched-over in the display using this parameter in the ETS. Additional parameter nodes are then shown in the ETS for each page.
Recall display pages	<b>No recall</b> Via switching object Via value object (1-byte)	This parameter can be used either to enable the 1-bit object "Fixed page recall" (setting "Via switching object") or the 1-byte object "Variable page recall" (setting "Via value object (1 byte)"). With the "No recall" setting, configured display pages can only be switched off through the cyclical change-over or using a button of the device with the "Page change" function. If the "Fixed page recall" object is used, the system jumps automatically to the page configured in the ETS as soon as the switching value "1" is received during operation. If the "Variable page recall" object is used, each defined page can be called up with a value between "1" ... "4". If the opened page is not planned or a value greater than "4" is received, the device will ignore the telegram. If a page is called up via the object, the device interrupts the cyclical page change-over and keeps the display on the page. A called-up page remains active until the object receives the value "0" or a new page is called up through the press of a button (see below). The value "0" in the

object always switches to the first page, re-enabling the cyclical page change-over.		
Display page, switching object	Page 1 <b>Page 2</b> Page 3 Page 4	If the 1-bit object is used to recall pages, this parameter specifies to which page the system should switch over.
cyclical page change (1 ... 60 s)	1...5...60	This parameter specifies how much time elapses before a change-over of display pages takes place on the display.
Info display after initialisation	<b>Off</b> One-touch operation Double-touch operation	This parameter defines whether the information mode of the display is to be active automatically after a restart (e.g. commissioning, return of bus voltage). In addition, it is possible to select the operating mode of the information mode. If this parameter is set to "Off", the "Information mode" object is not displayed in the ETS.
Info text display length	<b>3 sec</b> 5 sec 10 sec	Here, it is possible to specify how long the Help texts of the information mode are to be displayed when a control surface is actuated.
Display pictogram frames	No <b>Yes</b>	The small symbols in the lower area of the display can be surrounded by square pictogram frames, thus providing a graphical delimitation. The pictograms serve as placeholders for non-illuminated icons. If the pictogram frames are not displayed ("No" setting), then only the active icons are visible in the display. If the pictogram frames are displayed ("Yes" setting), then the frames are always visible and the active icons are illuminated inside the corresponding frames.
<b>□-  Display -&gt; Page 1</b>		
Page 1 with cyclical changeover	No <b>Yes</b>	This parameter defines whether the page is included in the cyclical change. In particular, Page 1 is always integrated in the cyclical change-over. For this reason, the parameter cannot be adjusted for this page.

Number of the icon to be displayed from the icon table on page 1

The upper part of the display has a graphics area of 132 x 30 pixels, in which large graphic symbols (30 x 30 pixels) can be shown. 30 graphic symbols are predefined in the device memory to show, for example, weather situations, the indoor or outdoor temperature, timer, shade or multimedia system. The large symbols can be configured as necessary at this point and can also be switched via the bus using communication objects. The setting "0" means that no symbol is shown on the page.

Recall icon on Page 1

**Configured icon**  
By 1-bit object  
By 1-byte object

The parameter specifies when the graphic symbol configured in the ETS is always static on the page, or optionally in continuous operation of the room controller module, the graphic symbol can be switched-over separately for each page using a communication object, allowing situation-dependent adjustments. A switch-over can either take place using a 1-bit object or, alternatively, using a 1-byte object. When the 1-bit object is used, the switching value of the telegram specifies which symbol is to be displayed. For this, a symbol number can be configured in the ETS for both switching values using the additional parameter "Number of symbol to be displayed..." When the 1-byte object is used, the object value received immediately defines which symbol is to be displayed. Possible object values are "0 = Hide symbol", "1 = Show symbol no. 1", "2 = Show symbol no. 2" ... "255 = Show symbol no. 255". If the object receives a value for which no symbol exists, the received value is ignored.

Number of symbol to be displayed for Object value=0 on Page 1 **0...30**

Definition of the symbol number for the graphic symbol to be display on switch-over via the 1-bit object through a telegram value "0". The setting "0" means that no symbol is shown on the page.

This parameter is only visible if the parameter "Recall symbol on Page 1" is configured as "By 1-bit object".

Number of symbol to be displayed for Object value=1 on Page 1 **0...30**

Definition of the symbol number for the graphic symbol to be display on switch-over via the 1-bit object through a telegram value "1". The setting "0"

means that no symbol is shown on the page.

This parameter is only visible if the parameter "Recall symbol on Page 1" is configured as "By 1-bit object".

Number of lines	<b>1.line</b> 2-line with large unit 2-line with small unit 3.line	One, two or three-line text displays can be defined on a display page of the device display. Two proportional character sets with a character height of 10 pixels and 20 pixels are available for this. The largest character set is always used for one-line displays. For the two-line display, the large character set is used in the first line and the small character set is used in the second line. Alternatively, the first line can contain the display of a value using the large character set and the display of the unit text for the value in the small character set. For the three-line display, only the small character set is used. This parameter determines the number of text lines within a display page. Additional parameter nodes are displayed according to this setting.
-----------------	---	---

#### □↳ Display -> Pages 2, 3, 4 (see page 1)

The display functions of a text line are derived from the use of the character sets, i.e. from the setting of how many lines a page has.

In a one-line display, the following display functions are available for Line 1...

#### □↳ Display -> Page 1 -> Line 1

Line display	Time Time and day Date Day and date Setpoint temperature <b>Actual temperature</b> External temperature Date + time Time + date Date, date and time Time + actual temperature Time + setpoint temperature Time + external	This parameter permits the selection of the information to be displayed in a one-line text display. The formatting of the appropriate values is fixed.
--------------	---	--

## temperature

In a two-line display, the following display functions are available for Line 1...

□ Display -> Page 1 -> Line 1

Line display	Time	This parameter permits the selection of the information to be displayed in Line 1 of a two-line text display.
	Time and day	
	Date	
	Day and date	
	Setpoint temperature	
	<b>Actual temperature</b>	
	External temperature	
	Date + time	
	Time + date	
	Date, date and time	
	Time + actual temperature	
	Time + setpoint temperature	
	Time + external temperature	
	Value display, fixed DPT 5.xxx (EIS6)	
	Value display DPT 9.xxx (EIS 5)	
	Value display DPT 14.xxx (EIS 9)	
Unit text	Text input box (max. 10 characters), no presetting	In a value display, a unit can be added to the displayed value. The unit text is attached directly to the value or the percentage symbol (for DPT 5.xxx) without a space.
Display format	<b>0...255</b> 0...100%	In the case of a value display in DPT 5. xxx, the display format of the 1-byte value can be defined here.
Offset	-100000.00... <b>0.00...</b> 100000.00	In the case of a value display in DPT 9.xxx or 14.xxx, the received value can be adjusted before it is shown in the display. This parameter defines the

static offset of the display value.

Amplification	0.00... <b>0</b> ...100000.00	In the case of a value display in DPT 9.xxx or 14.xxx, the received value can be adjusted before it is shown in the display. This parameter defines the amplification (factor) of the display value.
Number of integer digits	0... <b>3</b> ...9	In the case of a value display in DPT 9.xxx or 14.xxx, the received value can be adjusted before it is shown in the display. This parameter defines the number of digits before the decimal point of the display value.
Number of decimal places	<b>0</b> ...3	In the case of a value display in DPT 9.xxx or 14.xxx, the received value can be adjusted before it is shown in the display. This parameter defines the number of digits after the decimal point of the display value.
Sign	No <b>Yes</b>	In the case of a value display in DPT 9.xxx or 14.xxx, the received value can be adjusted before it is shown in the display. This parameter defines whether the display value should be shown with or without a plus or minus sign.

In a two-line display, the following display functions are available for Line 2 and, in a three-line display, for Lines 1, 2 and 3...

 Display -> Page 1 -> (Line 1) / Line 2 / Line 3

Line display	Time	This parameter permits the selection of the information to be displayed for Line 2 of the two-line text display or for Lines 1, 2 and 3 of the three-line text display.
	Day and time	
	Date	
	Setpoint temperature	
	Actual temperature	
	Time + date	
	Day and date	
	Date, date and time	
	Switching	
	Dimming	

Venetian blind  
Light scene  
Value display, fixed  
DPT 5.xxx (EIS6)  
Value display  
DPT 5.xxx (EIS 6)  
Value display DPT 6.xxx  
(EIS 14 signed)  
Value display  
DPT 7.xxx  
(EIS 10 unsigned)  
Value display DPT 8.xxx  
(EIS 10 signed)  
Value display  
DPT 9.xxx (EIS 5)  
Value display  
DPT 12.xxx  
(EIS 11 unsigned)  
Value display DPT 13.xxx  
(EIS 11 signed)  
Value display  
DPT 14.xxx (EIS 9)  
Value display  
DPT 16.xxx (EIS 15)

**Static text**

Running text from ASCII  
object

**Line text**

Text input box  
(max. 18 characters),  
no presetting

In a two or three-line text display, the display functions for Lines 2 and 3 can be supplemented with a static line text (e.g. display function "Actual temperature" with static line text "Dining room"). The line text is configured here and is output left-aligned on one side in the display. Then, the value of the display function is displayed in right-aligned format. Depending on the character length of the selected display values, the line text might be overwritten at the end. In this case, a shorter line text must be chosen in the ETS. This parameter is not available for the display functions "Weekday and date" and "Weekday, date and time".

**Text for switching object  
value 0**

Text input box  
(max. 18 characters),  
Presetting: **Off**

In the "Switching" display function, the display text for the object value "0" can be configured here.

Text for switching object value 1	Text input box (max. 18 characters), Presetting: <b>On</b>	In the "Switching" display function, the display text for the object value "1" can be configured here.
Text for move object value 0	Text input box (max. 18 characters), Presetting: <b>Top</b>	In the "Venetian blind" display function, the display text for the object value "0" (long-time operation - Move up) can be configured here.
Text for move object value 1	Text input box (max. 18 characters), Presetting: <b>Bottom</b>	In the "Venetian blind" display function, the display text for the object value "1" (long-time operation - Move down) can be configured here.
Unit text	Text input box (max. 10 characters), no presetting	In a value display, a unit can be added to the displayed value. The unit text is attached directly to the value or the percentage symbol (for DPT fix 5.xxx) without a space.
Display format	<b>0...255</b> 0...100%	In the case of a value display in DPT 5.xxx (fixed display), the display format of the 1-byte value can be defined here.
Offset	-100000.00... <b>0.00...</b> 100000.00	In the case of a value display in DPT 5.xxx (variable depiction), DPT 6.xxx, DPT 7.xxx, DPT 8.000, DPT 9.000 or 14.xxx, the received value can be adjusted before it is shown in the display. This parameter defines the static offset of the display value.
Amplification	<b>0.00...0...</b> 100000.00	In the case of a value display in DPT 5.xxx (variable depiction), DPT 6.xxx, DPT 7.xxx, DPT 8.000, DPT 9.000 or 14.xxx, the received value can be adjusted before it is shown in the display. This parameter defines the amplification (factor) of the display value.
Number of integer digits	<b>0...3...9</b>	In the case of a value display in DPT 5.xxx (variable depiction), DPT 6.xxx, DPT 7.xxx, DPT 8.000, DPT 9.000 or 14.xxx, the received value can be adjusted before it is shown in the display. This parameter defines the number of digits before the decimal point of the display value.

Number of decimal places	<b>0...3</b>	In the case of a value display in DPT 5.xxx (variable depiction), DPT 6.xxx, DPT 7.xxx, DPT 8.000, DPT 9.000 or 14.xxx, the received value can be adjusted before it is shown in the display. This parameter defines the number of digits after the decimal point of the display value.
Sign	<b>No Yes</b>	In the case of a value display in DPT 9.xxx or 14.xxx or with the types with the code "signed", the received value can be adjusted according to the plus or minus sign before it is shown in the display. This parameter defines whether the display value should be shown with or without a plus or minus sign.
Time for ticker start display (1...10 x 500 ms)	<b>1...10</b>	For the display function "Running text from ASCII object", this parameter defines the waiting time at the end of a complete text display run. This allows the separation of display runs, meaning that the viewer can identify the beginning and the end of the running text. The text remains in the display during the waiting time. In the "1" setting, the text runs through uninterrupted.
Window width for running text (1...132 pixels)	<b>1...40...132</b>	The width of the display area in pixels for the running text is defined here. Should the display of a text received via the bus require more pixels than specified by this parameter, the text will run, character by character, from right to left. Should the text display require fewer pixels than specified here, the text will remain static. The display has a total width of 132 pixels. The running text is aligned on the right edge of the display and runs leftwards into the display area. If a graphic symbol is shown on the display page, the device will align the running text on the left edge of the symbol. In consequence, the running text will move further to the left. If a static line text is configured (left-aligned display), care should be taken when defining the window width of the running text that the line text is not overwritten by the running text.

**4.2.5.6 Parameter on scene function**

Description	Values	Comment
□↔ Scene		
Scene function ?	<b>Yes</b> <b>No</b>	The device can internally handle eight scenes with eight actuator groups. This parameter activates the scene function and the other parameters and communication objects, if needed.
Overwrite scene values during ETS download	<b>Yes</b> No	If the values of the actuator groups that have been changed on site by the used are to be reset to the values preset in the ETS during an application download by the ETS, the setting "Yes" must be chosen. If "No" is selected, the ETS values will not overwrite the scene values stored in the push button sensor, if any.
Scene 1 Recall via extension object with scene number	<b>1 ... 64</b>	If the internal scenes are to be recalled via the extension object, a definite number is required for each of them. This parameter serves to specify the extension number of the first scene.
Scene 2 Recall via extension object with scene number	<b>1...2 ... 64</b>	If the internal scenes are to be recalled via the extension object, a definite number is required for each of them. This parameter serves to specify the extension number of the second scene.
Scene 3 Recall via extension object with scene number	<b>1...3 ... 64</b>	If the internal scenes are to be recalled via the extension object, a definite number is required for each of them. This parameter serves to specify the extension number of the third scene.
Scene 4 Recall via extension object with scene number	<b>1...4 ... 64</b>	If the internal scenes are to be recalled via the extension object, a definite number is required for each of them. This parameter serves to specify the extension number of the fourth scene.
Scene 5 Recall via extension object with scene number	<b>1...5 ... 64</b>	If the internal scenes are to be recalled via the extension object, a definite number is required for each of them. This parameter serves to specify the extension number of the fifth scene.
	<b>1...6 ... 64</b>	

Scene 6 Recall via extension object with scene number

If the internal scenes are to be recalled via the extension object, a definite number is required for each of them. This parameter serves to specify the extension number of the sixth scene.

Scene 7 Recall via extension object with scene number

1...7 ... 64

If the internal scenes are to be recalled via the extension object, a definite number is required for each of them. This parameter serves to specify the extension number of the seventh scene.

Scene 8 Recall via extension object with scene number

1...8 ... 64

If the internal scenes are to be recalled via the extension object, a definite number is required for each of them. This parameter serves to specify the extension number of the eighth scene.

#### Scene output 1

Data type

**Switching**

Selection of the data format of the scene output.

Value (0 ... 255)

Value / position of Venetian blind (0 ... 100%)

Scene 1  
Switching command

**ON**

The switching command of the first scene can be predefined here. This parameter is only visible if "Data type = Switching".

OFF

Scene 1  
Value (0 ... 255)

**0...255**

The value of the first scene can be predefined here. This parameter is only visible if "Data type = Value (0...255)".

Scene 1  
Value / position of Venetian blind (0 ... 100 %)

**0...100**

The value of the first scene can be predefined here. This parameter is only visible if "Data type = Value / Venetian blind (0...100%)".

Scene 1  
Allow save?

**Yes**

If the user is to be given the possibility of changing the value of the scene and of storing it while the system is running, this parameter must be set to "Yes".

No

Scene 1  
Allow transmission?

**Yes**

If the state of an actuator group is to remain unchanged during the recall of a scene, this parameter can be set to

No

"No". In this case, the push button sensor does not transmit a telegram via the scene output concerned during the recall of the scene. The scene output is deactivated for this scene.

Scene 1                   **0...1200**  
Transmit delay  
(1 ... 1200 \* 100 ms)  
(0 = deactivated)

When the push button sensor sends the telegrams to the various scene outputs, it can insert a presettable waiting time of 2 min. max. before each telegram. The bus load can be reduced by this. In this way, it is possible to have certain illumination switched on only after the shutters are really closed. If no delay is selected ("0" setting), the push button sensor sends the output telegrams with maximum speed. With this setting it may happen in some cases that the telegram sequence is not compatible with output numbering.

Scenes 2 ... 8 see  
scene 1!

Scene output 2 ... 8 (see Scene output 1)

## 5 Appendix

### 5.1 Index

2	
2-point feedback control	111, 117
A	
Accept setpoints permanently	135
actual temperature	139
Adapting	115, 117
Additional controller status	145
alarm signals	104
Assembling	11
Automatic operation	151
Automatic transmission	142
B	
basic display	17
Basic setpoint shift	135
Button arrangement	76
Button configuration	72
button evaluation	73
C	
Clipping	148
Comfort extension	125
Command value limit	146
Command value limiting values	154
Command value objects	141
command value offset	154
commissioning	14
control algorithm	108
control surfaces	16, 71
Control surfaces	71
controller extension	158
Controller operating mode	95
Controller status	143
D	
Delivery state	182
dew point mode	156
Disabling function	99
display	170
Display functions	172
display priorities	175-176
E	
ETS configuration	29
ETS search paths	25
extension objects	159
F	
fan controller	149
Fan level limit	153
Fan protection	155
Fitting	10
Forced fan position	154
G	
Graphic symbols	173
H	
Heating/cooling message	107
L	
LED display	170
M	
manual operation	151
measured value formation	138
mixed operating mode	106
O	
operating mode after a reset	126
Operating mode change-over	95
Operating mode switchover	119, 161
operating modes	105, 151
Operation concept	73
operation LED	17
P	
Page change	181
Page structure	170
Parameter group "Button configuration"	.. 190
Parameter group "Operation concept of basic module"	.. 190-191
PI control	109, 115
Presence button	161
Presence function	125
product database	29
R	
Room temperature measurement	165
Running texts	174
S	
Scene control	167
Scene definition	167
scene recall	167
second operating level	18

setpoint shift.....	163
Setpoint shift.....	96, 162
Setpoint temperature presetting.....	127
Setpoint temperatures.....	128
single operating modes.....	105
status LEDs.....	97
Status LEDs.....	17
Storing scenes.....	168
Switching PI control.....	109
Switch-on level.....	152
T	
Temperature detection.....	138
U	
Underfloor heating temperature limit....	140
V	
Valve protection.....	157
W	
window status.....	125

**ALBRECHT JUNG GMBH & CO. KG**  
Volmestraße 1  
58579 Schalksmühle

Telefon: +49.23 55.8 06-0  
Telefax: +49.23 55.8 06-2 04  
[kundencenter@jung.de](mailto:kundencenter@jung.de)  
[www.jung.de](http://www.jung.de)

**Service Center**  
Kupferstr. 17-19  
44532 Lünen  
Germany