

Operating instructions IP-router



1. Safety instructions

Electrical equipment must be installed and fitted by qualified electricians only.

Failure to observe the instructions may cause damage to the device and result in fire and other hazards.

Supplying the IP router with power from the KNX unit (‘non-choked’ output) is not permitted. Risk of grounding the safety extra-low voltage of the KNX system.

Use safety transformers in acc. with EN 61558-2-6 or doorbell transformers in acc. with EN 61558-2-8.

These instructions are part of the product and must be left with the customer.

2. Function

System information

This device is a product of the KNX system and complies with KNX directives.

Detailed technical knowledge obtained in KNX training courses is a prerequisite to proper understanding.

The functionality of this device depends upon the software.

Detailed information on loadable software and attainable functionality as well as the software itself can be obtained from the manufacturer’s product database.

Planning, installation and commissioning of the unit is effected by means of KNX-certified software.

An updated version of the product database and the technical descriptions are available in their latest version on our Internet homepage.


Description

- Rail-mounted device for installation in distributions
- Interconnection of KNX lines via local area data networks (LAN) based on the use of the IP protocol (IP = Internet Protocol)
- Use as line / area coupler (filter tables)
- Interconnection of KNX devices with PCs or other DP devices via IP (use as data interface)
- Power supply via external power supply unit (accessories)
- Transmission of KNX system failure message to the PC
- Electrical separation between KNX and IP network

① Depending on application, access requirements, data security and data volume it may be advisable to install independent network paths for individual services using the IP network.

3. Status LED (Figure 1)

(1) LINE (yellow)	data reception on KNX line	(2) RUN (green)	ready for operation
(3) LK (green)	Ethernet link signal (lit up during active connection with the IP network)		
(4) RX (yellow)	Ethernet receive signal (lit up / flashing on reception of valid IP telegrams)		
(5) TX (yellow)	Ethernet transmit signal (lit up / flashing during active transmission to the IP network)		

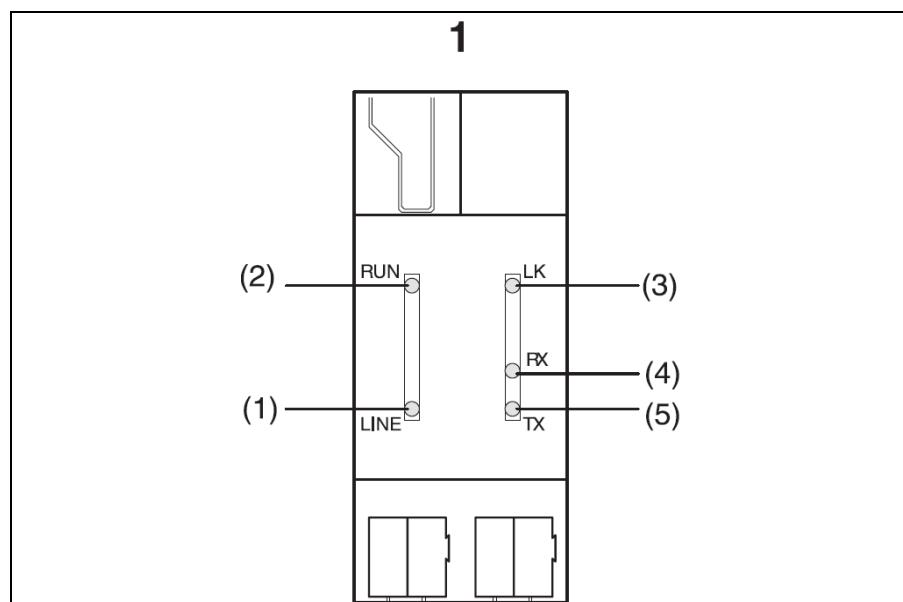

Informationen für Elektrofachkräfte

⚠ **DANGER !**

**Risk of electric shock on accidental contact
with live parts in the fitting environment.**


Electric shocks can be fatal.

**Before fitting, disconnect the supply voltage and cover up live
parts in the working environment.**

4. Fitting and electrical connection


Fitting in fixed installations indoors, in dry rooms, power distributions or small housings with DIN rail.

Observe the temperature range. Ensure sufficient cooling.

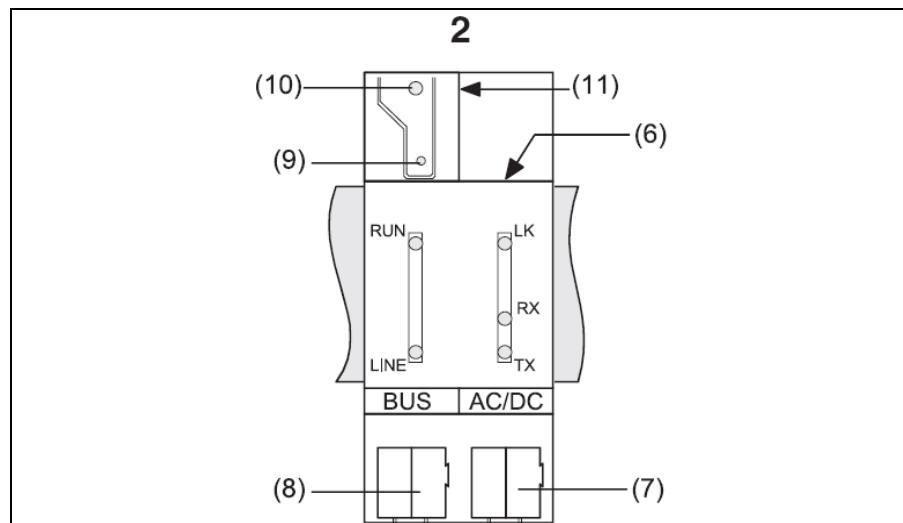

- Install by snap-fastening on mounting rail in acc. With EN 60715. Mounting position see figure 2.
- Connect the external power supply to terminal (7). Recommendation: Use white/yellow terminal.
- Connect the KNX line by means of the black/red bus terminal (8).
- Connect the IP side with RJ45 connector plugged into RJ socket (6).

① Wiring example see figure 3.

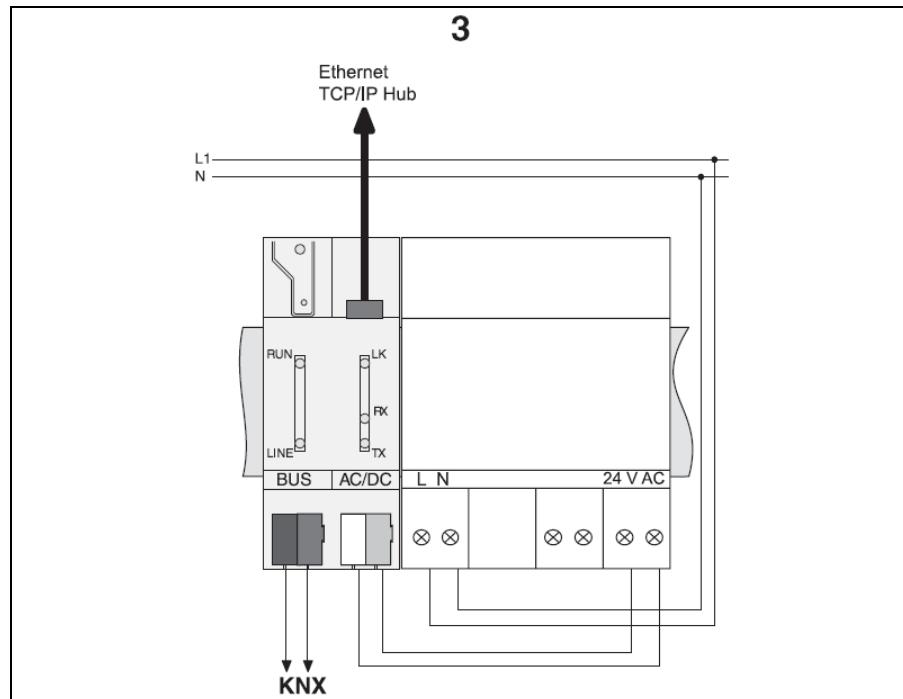

5. Commissioning

Physical address and application software

Use as line coupler: Physical address x.y.0.

Use as area coupler: Physical address x.0.0.

Use as data interface: Physical address x.y.z.

When used as line/area coupler, no other lin/area coupler must be operated in the same segment.

Commissioning software from ETS2 version 1.2 onwards.

- Press programming key (9).
Programming LED (10) is illuminated.
- Assign the physical address.
The programming LED is extinguished.
- Note the physical address on the device label (11)
- Download the application software, filter tables, parameters etc.

① The IP address (e.g. 255.173.27.39) is loaded as parameter together with the application software into the device or automatically assigned by a DHCP service.

Appendix

6. Technical data

KNX medium:

TP1

Mode of commissioning:

S-Mode (ETS)

KNX supply:	DC 21...30 V SELV
KNX current rating:	typically 10 mA
KNX connection:	Bus terminal
External supply:	
Voltage:	AC/DC 12...30 V
Power consumption:	max. 800 mW, (25 mA at DC 24 V)
Connection:	Connecting terminal
IP communication:	Ethernet 10BaseT (10 Mbit/s)
IP connection:	RJ45 socket
Supported protocols:	ARP, ICMP, IGMP, UDP/IP, DHCP, KNXnet/IP (Core, Routing, Tunneling, Device Management)
Ambient temperature:	-5 °C ... +45 °C
Storage temperature:	-25 °C ... +70 °C
Fitting width:	36 mm (2 modules)
Weight:	100 g
Technical specifications subject to change.	

7. Accessories

Power supply AC 24 V, Art. no.: WSSV 10

8. Guarantee

Our products are under guarantee within the scope of the statutory provisions.

Please return the unit postage paid to our central service department giving a brief description of the fault:

ALBRECHT JUNG GMBH & CO. KG
Service-Center
Kupferstr. 17-19
D-44532 Lünen
Service-Line: +(49) 23 55 . 80 65 51
Telefax: +(49) 23 55 . 80 61 65
E-Mail: mail.vka@jung.de

General equipment

Service-Line: +(49) 23 55 . 80 65 55
Telefax: +(49) 23 55 . 80 62 55
E-Mail: mail.vkm@jung.de

KNX equipment

Service-Line: +(49) 23 55 . 80 65 56
Telefax: +(49) 23 55 . 80 62 55
E-Mail: mail.vkm@jung.de

 The CE-Sign is a free trade sign addressed exclusively to the authorities and does not include any warranty of any properties.