

KNX IP BAOS 772 database with building structure

Operating and installation manual


General

The structured database is a special database for the KNX IP BAOS 772, in which the building structure is configured and the corresponding parameters and communication objects are created automatically.

ETS Database

With the ETS, following parameters can be set:

General:

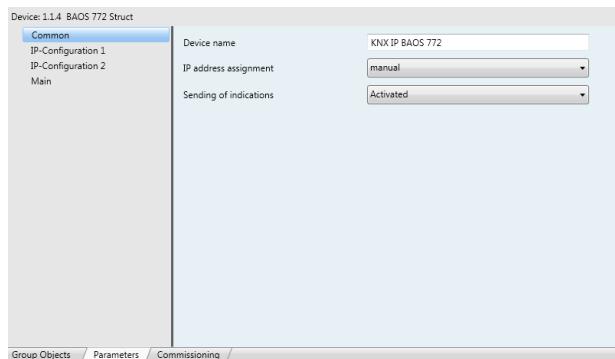

Device name:

It's possible to assign any name for the KNX IP BAOS 772. The device name should be significant (e.g. Data points 1st floor), because the name is used when searching for devices.

IP address assignment:


DHCP: The device can get its IP-address from a DHCP-server automatically. There must be a DHCP-server in the LAN in order to use this functionality (e.g. this can be a DSL-router with a DHCP-server integrated).

Manually: In this case, the IP-address, the sub network and the IP-address of the gateway have to be entered.

Sending of indications:

When this parameter is activated a client will receive asynchronous data point value indications

IP -Configuration:

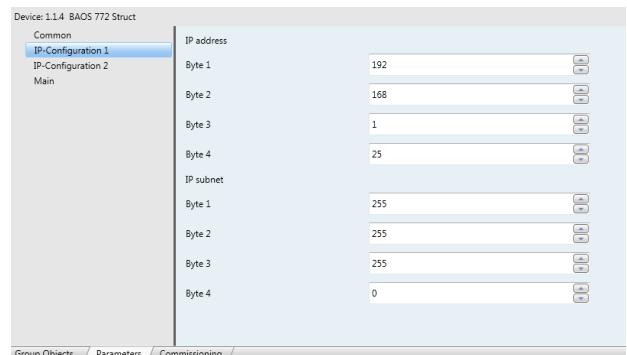


IP-Address:

Enter the IP-Address of the KNX IP BAOS 772 here.

IP-Sub network:

Enter the sub network mask here. The mask helps the device to discover, whether the communication partner is in the local network. If the partner is not in the local network, then the device sends the IP telegrams not directly to the partner but to the gateway, which forwards the telegrams to the device.

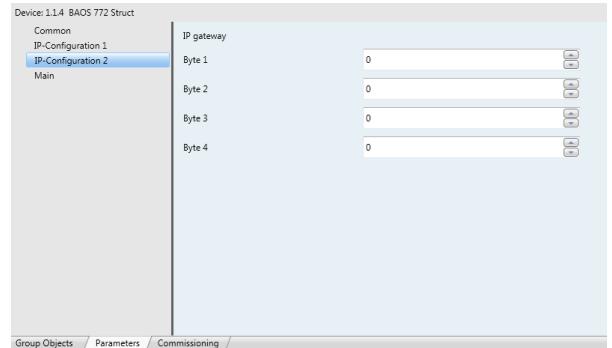

IP-Gateway-Address:

Enter the IP-Address of the gateway here.

Hint: Leave 0.0.0.0 there, if the KNX IP BAOS 772 ought to be used only in the local LAN.

Example for IP-Address assignment:

Over a PC the KNX IP BAOS 772 shall be accessed.

IP-Address of the PC: 192.168.1.30

Sub network of the PC: 255.255.255.0

The KNX IP BAOS 772 is located in the same local LAN therefore it uses the same sub network mask. Because of the used sub network the IP-address assignment is limited, only addresses with format 192.168.1.xx can be assigned the device, xx stands for the range 1-255 (without 30, because already assigned to PC). Be careful not to use one IP-address more than once.

IP-address KNX IP BAOS: 192.168.1.31

Sub network KNX IP BAOS : 255.255.255.0

Function groups:

Here, the respective functional groups are activated and the corresponding names have to be assigned. These names should be descriptive (e.g. Kitchen). A special case is the group "Common functions". This only can be activated or deactivated.

The information of the individual function groups are saved as parameter bytes (byte 1 - 384), which can be read via ethernet. For each function group there are 32 bytes available, which are set as follows:

- Byte 1: Function group activated/ deactivated
- Byte 2-31: Name of function group
- Byte 32: Reserved for further use

Functions:

Here the respective functions of the activated function groups have to be selected and appropriate names have to be assigned (e.g., Light dining table). For each function 5 communication objects have been reserved, which are configured via function type.

Functions:

The following function types with the associated communication objects can be selected:

Deactivated	1. Switch on/off
Switch actuator	1. Switch on/off
Switch actuator with state	2. Switch state
Dim actuator	1. Dim brighter/darker
Dim actuator switch state	2. Dim relative
Dim actuator value state	3. Dim value
	1. Dim brighter/darker
	2. Dim relative
	3. Dim value
	4. Dim switch state
	1. Dim on/off
	2. Dim relative
	3. Dim value
	4. Dim value state
Jalousie actuator	1. Jalousie up/down
Jalousie actuator with state	2. Jalousie step/stop
	1. Jalousie up/down
	2. Jalousie step/stop
	3. Jalousie up/down-state
	4. Jalousie step/stop-state
Shutter	1. Shutter up/down
Shutter with state	2. Shutter stop
	1. Shutter up/down
	2. Shutter stop
	3. Shutter up/down-state
Temperature	1. Temperature state
Temperature with set point	1. Temperature state
	2. Temperature set point
Scene	1. Scene switch
Presence	1. Presence state
Window contact	1. Window contact state
Door contact	1. Door contact state
Smoke alert	1. Smoke alert state
Water alert	1. Water alert state

The information of the individual functions are saved as parameter bytes (byte 385-6528), which can be read via ethernet. For each function there are 32 bytes available, which are set as follows:

- Byte 1: Function type
- Byte 2-31: Name of function
- Byte 32: Reserved for further use

Common functions:

Device: 1.1.4 BAOS 772 Struct

Common functions

Time	Enabled
Date	Enabled
HVAC mode	Enabled
Door bell	Enabled
Door opener	Enabled
Burglary alert	Enabled
Rain alert	Enabled
Wind alert	Enabled
Outdoor temperature	Enabled

Group Objects / Parameters / Commissioning /

Here the common functions can be activated, for which you don't have to set any names. For each function, a communication object has been reserved. The following functions can be activated:

Time	1. Time state
Date	1. Date state
HVAC mode	1. HVAC mode switch
Door bell	1. Door bell state
Door opener	1. Door opener switch
Burglary alert	1. Burglary alert state
Rain alert	1. Rain alert state
Wind alert	1. Wind alert state
Outdoor temperature	1. Outdoor temperature state

The information of the common functions are saved as parameter bytes (bytes 6529-6538), which can be read via ethernet. These functions only have 10 bytes available. These are set as follows:

Byte 1: Common functions activated/deactivated
 Byte 2-10: Single common function activated/deactivated

